

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Excalibur](#) /

› [Excalibur Deluxe Virtual Casino 5-in-1 Video Game User Manual](#)

## Excalibur B01GGZSPTA

# Excalibur Deluxe Virtual Casino 5-in-1 Video Game

## USER MANUAL

Model: B01GGZSPTA

### Introduction

---

This manual provides instructions for the proper setup, operation, maintenance, and troubleshooting of your Excalibur Deluxe Virtual Casino 5-in-1 Video Game. Please read this manual thoroughly before using the device to ensure optimal performance and longevity.

The Excalibur Deluxe Virtual Casino is a handheld electronic gaming device featuring five classic casino games: Poker, Blackjack, Slots, Craps, and Roulette. It is designed for portable entertainment.

### Setup

---

#### 1. Battery Installation

The Excalibur Deluxe Virtual Casino requires 3 AAA batteries (not included) for operation.

1. Locate the battery compartment cover on the back of the device.
2. Slide the cover open in the direction indicated by the arrow.
3. Insert 3 AAA batteries, ensuring the correct polarity (+ and -) as marked inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.



**Figure 1:** Excalibur Deluxe Virtual Casino handheld device. This image shows the front of the device, featuring the LED display and control buttons, which include a directional pad and action buttons.

## 2. Initial Power-On

After installing batteries, press the **POWER** button, usually located on the top or front of the device, to turn it on. The screen should illuminate, displaying the main menu or game selection screen.

## Operating Instructions

---

### Controls Overview

- **Directional Pad (D-Pad):** Used for navigating menus and making selections within games.
- **SELECT/MENU Button:** Typically used to confirm selections or access in-game menus.
- **ACTION Buttons (A, B, C, etc.):** Used for specific game actions, such as dealing cards, spinning reels, or placing bets. Refer to individual game instructions for specific button functions.
- **SOUND/VOLUME Button:** Adjusts the device's sound level or mutes audio.
- **POWER Button:** Turns the device on or off.

### Game Selection

From the main menu, use the **D-Pad** to highlight your desired game (Poker, Blackjack, Slots, Craps, or Roulette). Press the **SELECT** button to confirm your choice and start the game.

### Basic Gameplay (General)

- **Placing Bets:** Use the **D-Pad** to select bet amounts or areas on the table (for Craps/Roulette). Confirm with an **ACTION** button.
- **Game Actions:** Follow on-screen prompts. For example, in Poker/Blackjack, use **ACTION** buttons to "Hit," "Stand," "Deal," or "Fold." In Slots, press an **ACTION** button to "Spin."
- **Viewing Rules:** Some games may have an option to view rules within their respective menus. Access this via the **MENU** button if available.

## Maintenance

---

### Cleaning

To clean the device, gently wipe the exterior with a soft, dry cloth. Do not use abrasive cleaners, solvents, or immerse the device in water. For the screen, use a soft, lint-free cloth specifically designed for electronics displays.

### Battery Care and Storage

- Remove batteries if the device will not be used for an extended period to prevent leakage.
- Store the device in a cool, dry place, away from direct sunlight and extreme temperatures.
- Do not mix old and new batteries, or different types of batteries.

## Troubleshooting

---

Problem	Possible Cause	Solution
Device does not turn on.	Dead or incorrectly installed batteries.	Check battery polarity. Replace with fresh AAA batteries.
Screen is blank or flickering.	Low batteries or a temporary software glitch.	Replace batteries. Turn the device off and on again.
Buttons are unresponsive.	Low batteries or a software issue.	Replace batteries. Turn the device off and on again. Ensure buttons are not stuck.
No sound.	Volume is muted or set too low.	Press the <b>SOUND/VOLUME</b> button to adjust volume or unmute.

## Specifications

---

- **Model:** B01GGZSPTA
- **Brand:** Excalibur
- **Display Type:** LED
- **Form Factor:** Handheld
- **Power Source:** 3 x AAA Batteries (not included)
- **Games Included:** Poker, Blackjack, Slots, Craps, Roulette

## Warranty and Support

---

Excalibur products are designed for quality and reliability. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Excalibur website. For technical support or customer service inquiries, please contact Excalibur customer support through their official channels. Contact details are typically available on the product packaging or the manufacturer's website.

