

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Waterpulse](#) /

› [Waterpulse Pro V300 Water Flosser Dental Oral Irrigator User Manual](#)

## Waterpulse V300

# Waterpulse Pro V300 Water Flosser Dental Oral Irrigator User Manual

Model: V300



## 1. INTRODUCTION

Thank you for choosing the Waterpulse Pro V300 Water Flosser. This device is designed to provide an effective and easy way to improve your oral hygiene by removing plaque and debris from between teeth and below the gumline. Please read this manual thoroughly before initial use to ensure proper operation and maintenance.

## 2. PRODUCT OVERVIEW

### 2.1 Components

- Waterpulse Pro V300 Oral Irrigator Unit
- 5 x Water Flossing Tips (various types)
- 1 x Power Adapter (compatible with UK, EU, US, AU outlets)
- 1 x English User Manual

### 2.2 Key Features

- **Advanced Cleaning:** Powers away plaque and debris between teeth and below the gumline.
- **Customizable Pressure:** 10 water pressure settings (20-120 PSI) for gentle to deep cleansing.
- **Versatile Tips:** Includes 5 unique tips for specialized cleaning needs.
- **Large Reservoir:** 800ml water tank capacity reduces the need for frequent refills.
- **Universal Voltage:** Operates on 100-240V.



Figure 1: Waterpulse Pro V300 Water Flosser main unit.

## DETALHES DO PRODUTO



Figure 2: Overview of the Waterpulse Pro V300, highlighting the 10 pressure levels, 5 tips, and power adapter.

## O IRRIGADOR DENTAL, ACOMPANHA 5 PONTEIRAS



Figure 3: Detailed view of the 5 included tips: 3 classic jet tips for general use, 1 periodontal pocket tip for gum irrigation, and 1 tongue cleaner tip.

## 3. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Position:** Place the Water Flosser unit on a flat, stable surface near a power outlet and a sink.
3. **Fill Water Tank:** Lift the lid of the water tank and fill it with lukewarm water. Ensure the tank is securely placed back on the base.
4. **Attach Tip:** Select the desired flossing tip and insert it into the handle until it clicks into place.
5. **Connect Power:** Plug the power adapter into the unit and then into a suitable electrical outlet (100-240V).

## 4. OPERATING INSTRUCTIONS

1. **Prime Unit (First Use):** If using for the first time, set the pressure to high, point the tip into the sink, and turn on the unit until water flows consistently.

2. **Adjust Pressure:** Use the pressure dial on the front of the unit to select your desired water pressure level from 1 to 10. Start with a low setting and gradually increase as you become comfortable.
3. **Position Tip:** Lean over the sink and place the tip in your mouth, aiming the water stream at your gumline at a 90-degree angle. Close your lips slightly to prevent splashing while allowing water to flow into the sink.
4. **Start Flossing:** Turn on the unit. Guide the tip along your gumline, pausing briefly between teeth. Work from your back teeth towards your front teeth, covering both the inside and outside surfaces of your teeth.
5. **Pause Function:** The handle features a pause button. Press it to temporarily stop the water flow without turning off the unit. Release to resume.
6. **Tip Rotation:** The tip can rotate 360 degrees, allowing easy access to all areas of your mouth.
7. **Finish:** Turn off the unit when finished. If desired, press the tip eject button on the handle to remove and clean the tip.



Figure 4: The handle features a pause button and allows for 360-degree tip rotation for comprehensive cleaning.

## 5. MAINTENANCE

## 5.1 Cleaning the Unit

- **Daily:** After each use, empty any remaining water from the tank.
- **Weekly:** Clean the water tank with warm soapy water. Rinse thoroughly.
- **Exterior:** Wipe the exterior of the unit with a soft, damp cloth. Do not immerse the unit in water.

## 5.2 Cleaning the Tips

- Rinse tips under running water after each use.
- For deeper cleaning, soak tips in a solution of 2 parts water to 1 part white vinegar for 5-10 minutes. Rinse thoroughly.
- Replace tips every 3-6 months, or sooner if they become worn.

## 5.3 Descaling

- If mineral deposits build up, fill the reservoir with 2 parts water and 1 part white vinegar.
- Run half of the solution through the unit into the sink.
- Turn off the unit and let it sit for 20 minutes.
- Run the remaining solution through the unit.
- Rinse by running a full tank of clean water through the unit.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not turn on	Not plugged in; Power outlet issue	Ensure power adapter is securely plugged into unit and outlet; Test outlet with another device.
No water flow	Water tank empty; Tip clogged; Unit not primed	Refill water tank; Clean or replace tip; Prime the unit as described in Setup.
Weak water pressure	Pressure setting too low; Mineral buildup	Increase pressure setting; Perform descaling procedure.
Leaking from unit	Water tank not seated correctly; Damaged hose/seal	Ensure water tank is firmly in place; Contact customer support if leakage persists.

## 7. SPECIFICATIONS

Feature	Specification
Model Number	V300
Power Source	Corded Electric
Voltage	100-240V
Frequency	20-60HZ

Feature	Specification
Input Power	12W
Hydraulic Pressure	20-120 PSI (10 levels)
Water Tank Capacity	800ml
Product Dimensions	5.12 x 6.69 x 9.06 inches (13 x 17 x 23 cm)
Item Weight	1.87 Pounds (0.85 kg)

## 8. WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Waterpulse website. If you encounter any issues not covered in this manual or require further assistance, please contact Waterpulse customer support.

**Manufacturer:** Waterpulse

**Date First Available:** July 26, 2019

**ASIN:** B01GHC4FM8

**Online Support:** Visit the Waterpulse Store on Amazon