

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SIEMENS](#) /

› [Siemens Induction Cooktop User Manual](#)

SIEMENS EX675LYC1E

Siemens Induction Cooktop User Manual

Model: EX675LYC1E

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation, installation, and maintenance of your Siemens Induction Cooktop, model EX675LYC1E. Please read this manual thoroughly before using the appliance and keep it for future reference.

The Siemens EX675LYC1E is a high-performance induction cooktop designed for modern kitchens, offering advanced features for precise and flexible cooking.

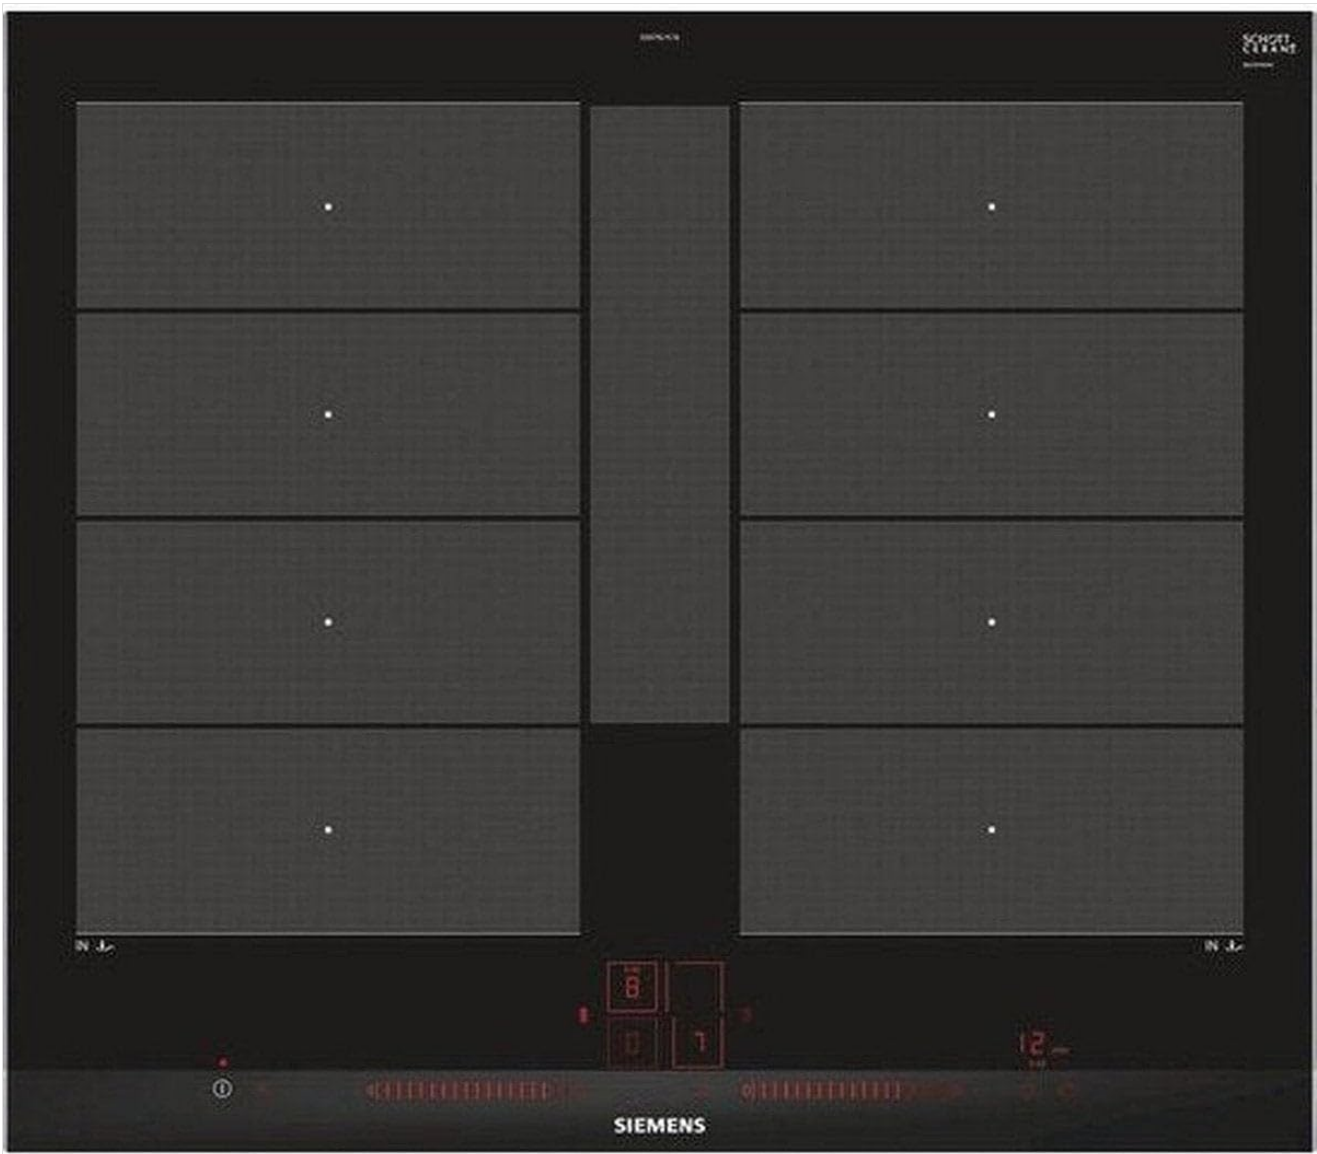 


Image 1.1: Siemens EX675LYC1E Induction Cooktop Overview.

2. SAFETY INFORMATION

Always adhere to the following safety guidelines to prevent injury or damage to the appliance.

- **Electrical Safety:** Ensure the cooktop is connected to a properly grounded electrical outlet. Do not use extension cords. Disconnect power before any maintenance or cleaning.
- **Child Safety:** This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Keep children away from the appliance during operation and when it is cooling down. Activate the child lock function to prevent accidental activation.
- **Hot Surfaces:** The cooking zones become hot during operation. Exercise caution to avoid burns. Residual heat indicators will show when a zone is still hot.
- **Proper Cookware:** Use only induction-compatible cookware with flat bases. Incorrect cookware may not be detected or may result in inefficient heating.
- **Ventilation:** Ensure adequate ventilation around the appliance as specified in the installation instructions.
- **Cleaning:** Always allow the cooktop to cool down before cleaning. Use non-abrasive cleaners to avoid scratching the ceramic surface.

3. SETUP AND INSTALLATION

Proper installation is crucial for the safe and optimal performance of your induction cooktop. Installation should only be performed by a qualified technician.

3.1 Unpacking

Carefully remove the cooktop from its packaging. Inspect for any signs of damage during transit. Retain packaging materials for potential future transport or service.

3.2 Installation Requirements

- **Countertop Cut-out:** Refer to the dimension diagram for precise cut-out measurements. The countertop material must be heat-resistant.
- **Ventilation:** Adequate ventilation space must be provided below and around the cooktop to ensure proper air circulation and prevent overheating.
- **Electrical Connection:** The cooktop requires a dedicated electrical circuit. Consult a qualified electrician for connection.

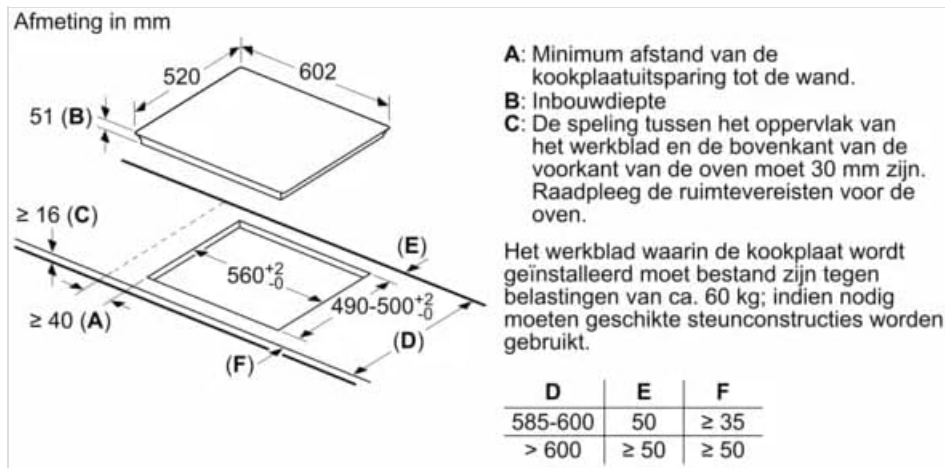 


Image 3.1: Cooktop Dimensions and Installation Cut-out.

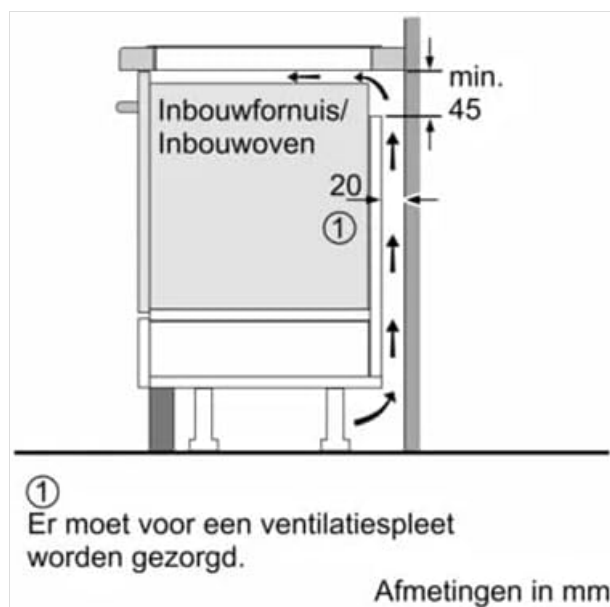 


Image 3.2: Ventilation Requirements (Above Oven).

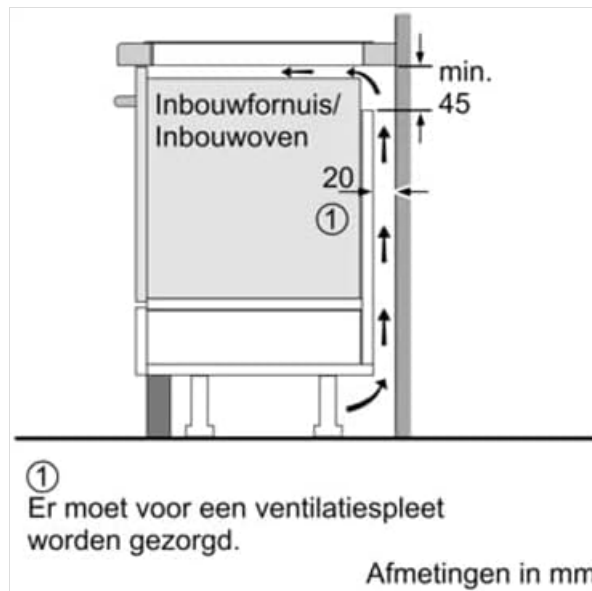 


Image 3.3: Ventilation Requirements (Above Drawer).

4. OPERATING INSTRUCTIONS

Your Siemens Induction Cooktop offers intuitive controls and advanced cooking functions.

4.1 Control Panel Overview

The cooktop features a dual LightSlider control for precise power level adjustments and access to various functions.

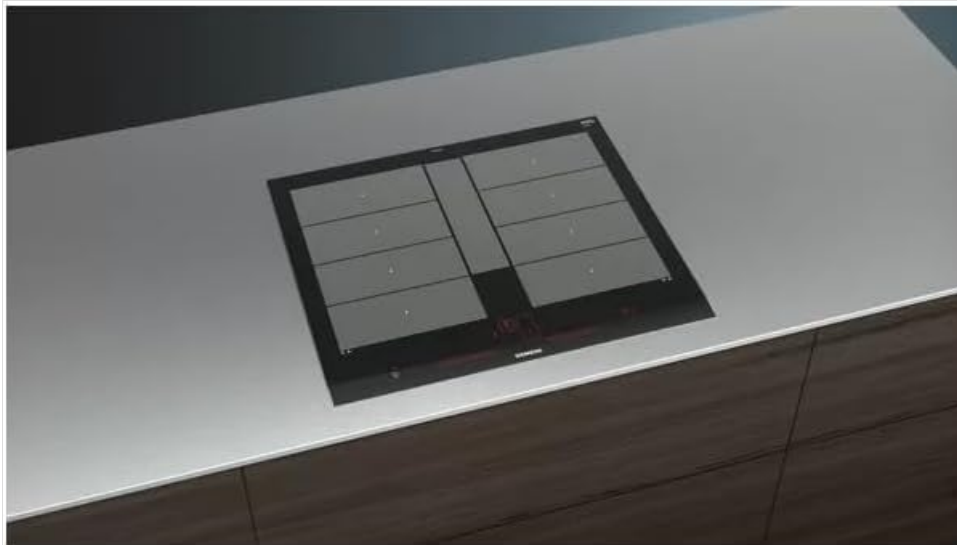 


Image 4.1: Control Panel and Cooking Zones.

4.2 Basic Operation

- **Switching On/Off:** Press the main switch to turn the cooktop on or off.
- **Selecting a Cooking Zone:** Place a suitable pot on the desired cooking zone. The cooktop will electronically recognize the presence of the cookware.
- **Adjusting Power:** Use the LightSlider control to select one of the 17 power levels.

4.3 Advanced Features

- **Flex Induction Plus:** This feature allows combining two cooking zones into a larger flexible zone, ideal for large pots or griddle plates. The cooktop has 2 Flex Induction Plus zones.

- **PowerBoost Function:** Provides a temporary increase in power to rapidly heat liquids or cookware. Available for all heating zones.
- **Frying Sensor:** With 5 temperature settings, the frying sensor helps maintain a consistent temperature for optimal frying results.
- **Timer Function:** Set a timer with a switch-off function for each cooking zone. An audible signal indicates the end of the cooking time. A cooking time counter is also available.
- **Restart Function:** Allows you to quickly resume cooking with previous settings after a brief interruption.
- **Quick Start Function:** Enables rapid selection of a cooking zone and power level.
- **FLEXMOTION:** Automatically transfers settings when cookware is moved to another flexible zone.
- **Energy Consumption Indicator:** Displays the energy consumed during cooking.
- **ShortClean Function:** Temporarily locks the control panel for 30 seconds to allow for quick cleaning without changing settings.

4.4 Safety Functions

- **Child Lock:** Activates a safety lock to prevent unintended operation by children.
- **Residual Heat Indicator:** A two-stage indicator shows which cooking zones are still hot after use.
- **Safety Time Switch:** Automatically switches off the cooktop after a certain period of inactivity.
- **Electronic Pan Recognition:** Ensures that heating only occurs when suitable cookware is placed on the zone.

5. MAINTENANCE AND CLEANING

Regular cleaning and proper maintenance will ensure the longevity and optimal performance of your cooktop.

- **Daily Cleaning:** After each use, wipe the ceramic surface with a soft cloth and a mild detergent. For stubborn stains, use a specialized ceramic hob cleaner.
- **Removing Burnt-on Food:** Use a hob scraper designed for ceramic surfaces to carefully remove burnt-on food residues.
- **Avoid Abrasives:** Do not use abrasive sponges, scouring pads, or harsh chemical cleaners, as these can scratch or damage the surface.
- **Cooling Down:** Always ensure the cooktop has cooled down completely before cleaning.



Image 5.1: Cooktop Surface Detail.

6. TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their potential solutions.

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply; Child lock activated.	Check circuit breaker; Deactivate child lock.
Cooking zone not heating.	Incorrect cookware; Pan not detected; Zone not selected.	Use induction-compatible cookware; Ensure pan is centered; Select the zone.
Unusual noises during operation.	Normal induction hum; Cookware material.	This is normal for induction; Some cookware may produce more noise.
Error code displayed.	Specific malfunction.	Refer to the full user manual for specific error code meanings or contact service.

7. SPECIFICATIONS

Feature	Detail
Brand	SIEMENS
Model Number	EX675LYC1E
Product Dimensions (L x W x H)	60.2 x 52 x 5.1 cm; 15 kilograms
Installation Type	Built-in
Hob Type	Induction
Number of Cooking Zones	4
Color	Black, Stainless Steel
Voltage	230 Volts (AC)
Power	7400 Watts
Material	Ceramic
Special Features	Boost Function, Pan Detection, Flex Induction Plus, Frying Sensor
Control Type	Digital Touch
Country of Origin	Germany

8. WARRANTY AND SUPPORT

Your Siemens Induction Cooktop is covered by a manufacturer's warranty. Please refer to the warranty card included with your appliance for specific terms and conditions, including the duration and coverage details.

For technical assistance, spare parts, or service requests, please contact Siemens customer support. Have your model number (EX675LYC1E) and serial number ready when contacting support.

You can find contact information for your regional Siemens service center on the official Siemens website or in the documentation provided with your appliance.

