



Manuals.plus /

› acer /

› Acer AXC-704G-UW61 Desktop PC User Manual

acer AXC-704G-UW61

Acer AXC-704G-UW61 Desktop PC User Manual

Model: AXC-704G-UW61

INTRODUCTION

This manual provides essential information for the safe and efficient use of your Acer AXC-704G-UW61 Desktop PC. Please read these instructions carefully before setting up and operating your computer. Keep this manual for future reference.

SETUP

1. Unpacking

Carefully remove all components from the packaging. Ensure the following items are present:

- Acer AXC-704G-UW61 Desktop PC unit
- Power cord
- Keyboard
- Mouse
- Documentation (this manual, warranty information)

2. Connecting Peripherals

Connect your monitor, keyboard, mouse, and other devices to the appropriate ports on the rear of the PC.



This image displays the Acer AXC-704G-UW61 Desktop PC tower. The front panel features the optical drive bay, USB ports, and audio jacks, designed for easy access.

- **Monitor:** Connect your monitor to one of the HDMI output ports.
- **Keyboard and Mouse:** Connect the keyboard and mouse to the available USB ports.
- **Network:** For a wired internet connection, connect an Ethernet cable to the RJ-45 network port.
- **Audio:** Connect speakers or headphones to the audio line out port.

3. Power Connection

Connect the power cord to the power input on the back of the PC, then plug the other end into a grounded electrical outlet.

4. Initial Power On and Windows 10 Setup

Press the power button on the front of the PC. The system will boot up. Follow the on-screen instructions to complete the initial setup of Windows 10 Home, including language, region, network connection, and user account creation.

OPERATING INSTRUCTIONS

1. Basic Navigation (Windows 10)

Familiarize yourself with the Windows 10 interface:

- **Start Menu:** Click the Windows icon in the bottom-left corner to access applications, settings, and power options.
- **Taskbar:** The bar at the bottom of the screen displays open applications and quick-launch icons.
- **File Explorer:** Use this to manage your files and folders. It can be accessed from the taskbar or Start Menu.

2. Using the Optical Drive

Your PC is equipped with a DVD-Writer drive. To use it:

1. Press the eject button on the front of the drive to open the disc tray.
2. Place a DVD or CD onto the tray, ensuring it is seated correctly.
3. Gently push the tray back into the drive. The system will automatically detect the disc.

3. Connecting USB Devices

The PC features 2 USB 3.0 ports and 2 USB 2.0 ports. Connect USB devices such as external hard drives, printers, or webcams to any available USB port. The system will typically install necessary drivers automatically.

4. Audio Connections

Use the audio line-in and line-out ports on the rear panel for connecting microphones, speakers, or headphones. Adjust audio settings through the Windows Sound control panel.

MAINTENANCE

1. Cleaning

To maintain optimal performance and appearance:

- **Exterior:** Use a soft, damp cloth to clean the exterior surfaces. Avoid harsh chemicals.
- **Ventilation:** Ensure ventilation openings are clear of dust and obstructions to prevent overheating.
- **Screen (if applicable):** For connected monitors, use a specialized screen cleaner and a microfiber cloth.

2. Software Updates

Regularly update your Windows operating system and drivers to ensure security and performance. Access Windows Update through the Settings menu.

3. Data Backup

Periodically back up important data to an external drive or cloud storage to prevent data loss.

TROUBLESHOOTING

This section addresses common issues you might encounter.

- **No Power:** Ensure the power cord is securely connected to both the PC and the electrical outlet. Verify the outlet is functional.

- **No Display:** Check that the monitor is powered on and correctly connected to the PC's HDMI port. Try a different HDMI cable or monitor if available.
- **Slow Performance:** Close unnecessary applications. Check for malware or viruses. Ensure Windows and drivers are up to date. Consider freeing up disk space.
- **Peripheral Not Detected:** Ensure the device is properly connected to the correct port. Try a different port or restart the PC.

If problems persist, refer to the Acer support website or contact customer service.

SPECIFICATIONS

Key technical specifications for the Acer AXC-704G-UW61 Desktop PC:

Feature	Specification
Model Name	AXC 704G UW61
Operating System	Windows 10 Home, 64-bit
Processor	Intel Celeron N3050 (1.6 GHz)
RAM	4 GB DDR3L SDRAM (Max 8 GB, 2 slots)
Storage	500 GB HDD, Serial ATA/600
Optical Drive	DVD-Writer (DVD-RAM/±R/±RW)
Graphics	Intel Integrated Graphics
Video Output	2 x HDMI
USB Ports	2 x USB 3.0, 2 x USB 2.0 (Total 4)
Network	RJ-45, Bluetooth
Audio	Audio Line In, Audio Line Out
Dimensions (H x W x D)	14.5 x 3.94 x 10.4 inches
Weight	11.3 Pounds

WARRANTY AND SUPPORT

Your Acer AXC-704G-UW61 Desktop PC comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including coverage duration and service procedures.

For technical support, driver downloads, or further assistance, please visit the official Acer support website. You may need your product's serial number, typically found on a label on the PC chassis.

Acer Support Website: <https://www.acer.com/us-en/support>

