

[Manuals.plus](#) /

› [PerfectAire](#) /

› Perfect Aire 4FPC10000 EER 12.0 Window Air Conditioner User Manual

PerfectAire 4FPC10000

Perfect Aire 4FPC10000 EER 12.0 Window Air Conditioner User Manual

Model: 4FPC10000

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, installation, and maintenance of your Perfect Aire 4FPC10000 EER 12.0 Window Air Conditioner. Please read this manual thoroughly before using the appliance and retain it for future reference.

Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury. Ensure the unit is properly grounded and installed according to local electrical codes. Do not operate the unit with a damaged power cord or plug. Do not block air inlets or outlets.

PRODUCT FEATURES

- 10,000 BTU cooling capacity, suitable for areas of 400-450 sq. ft.
- 12.0 EER (Energy Efficiency Ratio) certified for energy savings.
- Electronic controls for precise temperature management.
- Auto restart function restores previous settings after a power outage.
- Multiple operating modes: Sleep, Dry, and Energy Saver.
- Window mounting kit included for easy installation.
- Tilt-out filter access for convenient cleaning.
- Full-range air direction control for optimal air distribution.
- "Follow Me" remote control feature acts as a portable thermostat for accurate room temperature sensing.
- Energy Star rated, C/UL/us certified.
- Utilizes R 410A refrigerant.

SETUP AND INSTALLATION

The Perfect Aire 4FPC10000 window air conditioner is designed for installation in standard double-hung windows. A window mounting kit is provided to facilitate secure installation.

Unpacking and Inspection

Carefully remove the unit from its packaging. Inspect for any shipping damage. Ensure all components of the window mounting kit are present.

Window Preparation

Ensure the window opening meets the required dimensions for the unit. The window must be structurally sound to support the weight of the air conditioner.

Unit Placement

Position the unit in the window opening, ensuring it is level or slightly tilted outwards to allow for proper condensate drainage. Secure the unit using the provided window mounting kit components, following the detailed instructions in the separate installation guide (not included in this general manual).



Figure 1: Front view of the Perfect Aire 4FPC10000 Window Air Conditioner. This image shows the main control panel, air vents, and the front grille.



Figure 2: Side view of the Perfect Aire 4FPC10000 Window Air Conditioner, illustrating the side vents and overall unit depth.

OPERATING INSTRUCTIONS

Your air conditioner can be operated using the control panel on the unit or the included remote control.

Control Panel

The control panel features an LED display and various buttons for mode selection, temperature adjustment, fan speed, and timer settings. Refer to the markings on the unit for specific button functions.

Remote Control

The remote control allows convenient operation from a distance. It includes a "Follow Me" feature, which uses a sensor in the remote to measure the temperature at its location, providing more accurate cooling for your immediate area.





Figure 3: The remote control for the Perfect Aire 4FPC10000, showing buttons for power, mode, fan speed, timer, temperature adjustment, and the "Follow Me" function.

Operating Modes

- **Cool Mode:** Provides cooling. Adjust temperature and fan speed as desired.
- **Fan Mode:** Circulates air without cooling. Select fan speed (Low, Med, High).
- **Dry Mode:** Reduces humidity in the room.
- **Sleep Mode:** Gradually increases the set temperature over several hours to conserve energy and provide comfortable sleeping conditions.
- **Energy Saver Mode:** The fan will cycle on and off with the compressor to save energy.

- **Auto Restart:** In case of a power interruption, the unit will automatically restart with the last settings once power is restored.
- **Follow Me:** Activates the remote control's temperature sensor for more precise room temperature monitoring.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your air conditioner.

Air Filter Cleaning

The air filter should be cleaned every two weeks, or more frequently depending on usage and air quality. The unit features tilt-out filter access for easy removal. Wash the filter with warm, soapy water, rinse thoroughly, and allow it to air dry completely before reinserting.

Unit Cleaning

Wipe the exterior of the unit with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure the power is disconnected before cleaning.

Seasonal Storage

If storing the unit for an extended period, clean the filter and unit thoroughly. Cover the unit to protect it from dust and store it in a dry place.

TROUBLESHOOTING

Before contacting customer support, review the following common issues and solutions:

- **Unit does not turn on:** Check if the power cord is securely plugged in. Verify the circuit breaker has not tripped. Ensure the unit's power button is pressed.
- **Unit is not cooling effectively:** Check if the air filter is clean. Ensure no obstructions are blocking the air intake or exhaust. Verify the set temperature is lower than the room temperature. Close all windows and doors in the room.
- **Unusual noise:** A slight rattling or gurgling sound is normal due to refrigerant flow. If the noise is loud or unusual, ensure the unit is installed securely and not vibrating against the window frame.
- **Water dripping inside:** Ensure the unit is slightly tilted outwards to allow proper drainage of condensate. Check for blockages in the drain pan or hose.

If these steps do not resolve the issue, please contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	4FPC10000
Cooling Capacity	10,000 BTU
EER (Energy Efficiency Ratio)	12.0
Coverage Area	400-450 sq. ft.

Product Dimensions (L x W x H)	22.25 x 18 x 14.75 inches
Item Weight	63 pounds
Voltage	120 Volts
Refrigerant Type	R 410A
Special Feature	Remote Controlled
Energy Star Certified	Yes

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official Perfect Aire website. You may also contact customer service for assistance with product inquiries, troubleshooting, or parts replacement.

This product is from a small business brand. Your support is appreciated.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question