



Manuals.plus /

- › **Energy Sistem** /
- › Energy Sistem MP3 Clip Bluetooth 8 GB Player User Manual

## Energy Sistem Energy MP3 Clip Bluetooth 8 GB

# Energy Sistem MP3 Clip Bluetooth 8 GB Player User Manual

Model: Energy MP3 Clip Bluetooth 8 GB (426508)

### INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Energy Sistem MP3 Clip Bluetooth 8 GB player. Please read this manual thoroughly before operating the device to ensure proper functionality and to understand all features. This device combines an MP3 player with Bluetooth connectivity, 8 GB of internal storage, FM radio, and a voice recorder, all in a compact design with a convenient clip.



*Image: Front view of the Energy Sistem MP3 Clip Bluetooth 8 GB Player.*

## SETUP

### 1. Unboxing and Components

Carefully remove all items from the packaging. The box should contain:

- Energy Sistem MP3 Clip Bluetooth 8 GB Player
- Earphones (in-ear type)
- Micro USB cable (for charging and PC connection)
- User Manual (this document)



*Image: Retail box of the Energy Sistem MP3 Clip Bluetooth 8 GB Player.*

## 2. Charging the Battery

Before first use, fully charge the device. Connect the player to a USB power source (e.g., computer USB port or USB wall adapter) using the provided Micro USB cable. The battery capacity is 200 mAh. A full charge typically takes approximately 1.5 hours.

## 3. Power On/Off

To power on the device, press and hold the Power button (usually located on the side or top) until the screen illuminates. To power off, press and hold the Power button again until the device shuts down.

## 4. Memory Expansion (MicroSD Card)

The player has 8 GB of internal memory. You can expand the storage by inserting a MicroSD card into the dedicated slot. The device supports MicroSD cards up to 64 GB. Ensure the card is inserted correctly with the contacts facing down.

## 5. Connecting to a PC

Connect the player to your computer using the Micro USB cable. The device will appear as a removable storage drive, allowing you to transfer audio files (MP3, WMA, WAV, FLAC) to its internal memory or an inserted MicroSD card. No drivers are required for this process.

# OPERATING INSTRUCTIONS

## 1. Basic Controls

The player features an LCD screen (0.8", 128x64 pixels) and physical buttons for navigation and control:

- **Play/Pause:** Starts or pauses playback.
- **Volume Up/Down:** Adjusts the audio volume.
- **Next/Previous Track:** Skips to the next or previous song.
- **Menu/Back:** Navigates through menus or returns to the previous screen.





*Image: Side view of the player, showing the clip and control buttons.*

## **2. Music Playback**

Navigate to the 'Music' section on the device. You can browse songs by folders, artists, albums, or all tracks. Select a song to begin playback. The player supports MP3, WMA, WAV, and FLAC audio formats.





*Image: Player screen displaying folder navigation for music selection.*

### **3. Bluetooth Pairing**

To connect to Bluetooth headphones or speakers:

1. Ensure your Bluetooth audio device is in pairing mode.
2. On the MP3 player, navigate to the 'Bluetooth' menu.
3. Select 'Search for devices' or 'Pair new device'.
4. Choose your audio device from the list and confirm pairing.

The player uses Bluetooth v2.1 (Class II) with a range of up to 10 meters. Battery autonomy is over 5 hours in Bluetooth mode.

### **4. FM Radio**

Access the 'FM Radio' menu. You can scan for available stations (87MHz ~ 108 MHz) and save up to 30 presets. Use the navigation buttons to tune or select presets.

### **5. Voice Recorder**

The device includes a digital voice recorder with a built-in microphone. Navigate to the 'Recorder' menu to start, pause, and save recordings.





*Image: Player screen displaying the voice recording function.*

## 6. Equalizer and Playback Modes

The player offers 7 equalization modes to customize your audio experience. Additionally, there are 7 playback and repeat modes, including a random playback option. A playback speed selector is also available.

## MAINTENANCE

### 1. Cleaning

Use a soft, dry cloth to clean the device. Avoid using liquid cleaners or solvents, as they may damage the surface or internal components.

### 2. Battery Care

To prolong battery life, avoid fully discharging the battery frequently. If the device will not be used for an extended period, charge it to about 50% before storing.

### 3. Firmware Updates

The device's firmware is updatable. Check the official Energy Sistem website periodically for any available firmware updates and follow the provided instructions for installation.

## TROUBLESHOOTING

If you encounter issues with your MP3 player, refer to the following common solutions:

- **Device does not power on:** Ensure the battery is charged. Connect the player to a power source and try again.
- **No sound:** Check the volume level. Ensure earphones are properly connected or Bluetooth headphones are paired and connected.
- **Cannot connect via Bluetooth:** Ensure the player's Bluetooth is enabled and your audio device is in pairing mode and within range (10m). Try restarting both devices.
- **Cannot transfer files to PC:** Ensure the USB cable is securely connected to both the player and the computer. Try a different USB port or cable.
- **MicroSD card not recognized:** Ensure the MicroSD card is inserted correctly. Try reinserting it or using a different compatible card.
- **Player freezes or becomes unresponsive:** Press and hold the Power button for an extended period (e.g., 10-15 seconds) to force a restart.

## TECHNICAL SPECIFICATIONS

Feature	Specification
Model Name	Energy MP3 Clip Bluetooth Mint
Model Number	426508
Display Type	LCD
Display Dimensions	0.8 inches
Display Resolution	128 x 64 pixels
Internal Memory	8 GB
MicroSD Card Support	Up to 64 GB
Bluetooth Version	v2.1 (Class II)
Bluetooth Range	10 meters
Connectivity	Micro USB (for charging and PC connection)
Compatible Audio Formats	MP3, WMA, WAV, FLAC
Battery Type	Lithium-ion
Battery Capacity	200 mAh
Nominal Voltage	3.7 V DC
Charging Time	Approx. 1.5 hours
Battery Autonomy (Music Mode)	Over 11 hours (at medium volume)
Battery Autonomy (Bluetooth Mode)	Over 5 hours
Battery Autonomy (Radio Mode)	Over 5 hours
FM Radio Band	87 MHz ~ 108 MHz
FM Radio Presets	30
Special Features	7 Equalization Modes, 7 Playback/Repeat Modes, Playback Speed Selector, Folder Navigation, Digital Voice Recorder, Clothing Clip, Updatable Firmware

## WARRANTY INFORMATION

This Energy Sistem product comes with a **3-year warranty** against manufacturing defects. Please retain your proof of purchase for warranty claims. The availability of spare parts is guaranteed for 3 years.

## SUPPORT

For further assistance, technical support, or to check for firmware updates, please visit the official Energy Sistem website. You can also refer to the FAQ section on their support page for common queries.