



[Manuals.plus](#) /

› [HAPPIJAC](#) /

› Happijac Wireless Remote Controller User Manual

HAPPIJAC 183070

Happijac Wireless Remote Controller User Manual

Model: 183070 | Brand: HAPPIJAC

1. PRODUCT OVERVIEW

The Happijac 183070 Wireless Remote Controller is designed as a replacement unit for controlling camper jacks. It features precision construction and is made from quality parts and materials to ensure optimal performance and reliability in various conditions.



Figure 1: Front view of the Happijac 183070 Wireless Remote Controller, showing its compact design and button layout.

2. SETUP AND BATTERY INSTALLATION

Before first use, ensure batteries are correctly installed. The remote typically uses standard AAA batteries (not included). Refer to the battery compartment for polarity indicators.

1. Locate the battery compartment cover on the back of the remote.
2. Slide or unclip the cover to open.

3. Insert the required batteries, matching the positive (+) and negative (-) terminals with the indicators inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.





Figure 2: Side view of the remote, showing the typical location for a battery compartment or access panel.

Note: If the remote does not power on after battery installation, double-check battery orientation and ensure the batteries are fresh.

3. OPERATING INSTRUCTIONS

The Happijac wireless remote provides intuitive control over your camper jacks. Familiarize yourself with the button layout and their corresponding functions.





Figure 3: Detailed view of the remote's control panel, illustrating the various buttons and their labels for operating camper jacks.

Button Functions:

- **ACC. IN / OUT:** These buttons control the accessory functions, typically for extending or retracting a specific component or mode.
- **UP / DOWN (Front, Rear):** These buttons control the vertical movement of the front and rear camper jacks. "UP" raises the jack, and "DOWN" lowers it.
- **LEFT SIDE / RIGHT SIDE (Triangular Buttons):** These buttons are used for fine-tuning the left and right side leveling of the camper. The arrows indicate the direction of camper movement.
- **Numbered Buttons (1-9, 0):** These buttons may correspond to individual jack control or pre-programmed positions, depending on your camper jack system. Refer to your camper jack system's manual for specific programming details.

To operate, press and hold the desired button for the duration of the required movement. Release the button to stop the movement.

4. MAINTENANCE

Proper maintenance ensures the longevity and reliable operation of your remote controller.

- **Battery Replacement:** Replace batteries when the remote's indicator light dims or if the remote becomes unresponsive. Always use new, high-quality batteries of the specified type.
- **Cleaning:** Wipe the remote with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the remote. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the remote in a dry place, away from extreme temperatures and direct sunlight, when not in use for extended periods. Remove batteries if storing for several months to prevent leakage.

5. TROUBLESHOOTING

If you encounter issues with your Happijac Wireless Remote Controller, try the following troubleshooting steps:

- **Remote Not Responding:**
 - Check and replace batteries.
 - Ensure the remote is within range of the camper jack receiver.
 - Verify there are no obstructions between the remote and the receiver.
- **Intermittent Operation:**
 - Weak batteries can cause intermittent operation; replace them.
 - Check for sources of radio interference nearby.
- **Jacks Not Moving Correctly:**
 - Ensure the camper jack system itself is powered on and functioning.
 - Refer to your camper jack system's manual for specific calibration or pairing procedures if applicable.

If problems persist after attempting these steps, contact the manufacturer's customer support.

6. SPECIFICATIONS

Feature	Detail
Model Number	183070
Brand	HAPPIJAC
Manufacturer	Lippert
Product Dimensions (L x W x H)	17.78 x 17.78 x 7.62 cm (7.0 x 7.0 x 3.0 inches)
Item Weight	45.4 g (0.1 lbs)
Material	Zinc
Colour	White
Country of Origin	USA
UPC	835779001527

7. WARRANTY AND SUPPORT

This Happijac product is manufactured by Lippert and is designed for durability and performance. For specific warranty information, please refer to the documentation included with your purchase or visit the official Lippert Components

website.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact Lippert customer service directly. Contact details can typically be found on their official website or on the product packaging.

Disclaimer: Product specifications and appearance are subject to change without notice. Always refer to the latest information provided by the manufacturer.