

Gorilla babo RMT-D187A

Gorilla babo Universal Remote Control Instruction Manual

For Sony RMT-D187A and Compatible DVD Players

1. INTRODUCTION

This manual provides instructions for the Gorilla babo Universal Remote Control, designed as a replacement or secondary remote for various Sony DVD Player models, including those originally compatible with the Sony RMT-D187A remote control.

1.1. Compatibility

This universal remote is compatible with the following Sony DVD Player models:

- RMT-D187A, RMTD187A
- DVPFX950, DVP-FX950
- DVPNS611HP
- DVPNS710, DVPNS710H, DVPNS710H/B, DVPNS710HB, DVPNS710HWM
- DVPSR101, DVPSR101B
- DVPSR200, DVPSR200B, DVPSR200P, DVPSR200PB
- DVPSR500H, DVPSR500H/WM, DVPSR500HWM

1.2. Package Contents

- 1 x Gorilla babo Universal Remote Control

Note: Batteries are not included and must be purchased separately.

2. SETUP

2.1. Battery Installation

To begin using your remote control, you must install two AA batteries.

1. Locate the battery compartment on the back of the remote control.

2. Slide the battery compartment cover downwards and lift it off.
3. Insert two AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Rear view of the remote control with the battery cover removed, revealing the two AA battery slots. Observe the polarity markings for correct battery insertion.







Image: Rear view of the remote control with the battery cover securely closed after battery installation.

3. OPERATING INSTRUCTIONS

This universal remote control is pre-programmed for compatible Sony DVD players and typically requires no additional setup. Simply insert batteries and point the remote towards your DVD player to begin operation.

3.1. Button Layout and Functions



Image: Front view of the Gorilla babo Universal Remote Control, displaying all buttons and their labels.





1

2

3

VOL

+

4

5

6

-

7

8

9

TIME/TEXT

CLEAR

0

AUDIO

SUBTITLE

TOP MENU

MENU

RETURN

DISPLAY

PREV

REPLAY

ADVANCE

NEXT

PLAY

FAST/SLOW
PLAY

PAUSE

STOP

DVD

RMT-D187A 



Image: Angled front view of the Gorilla babo Universal Remote Control, providing a clearer perspective of the button layout.

Button	Function
POWER (I/O)	Turns the DVD player on or off.
TV INPUT	Switches TV input source (if supported by TV and programmed).
VOL +/-	Adjusts volume (if supported by DVD player or programmed for TV).
Number Buttons (0-9)	Direct track selection or input.
TIME/TEXT	Displays time information or text features.
AUDIO	Selects audio tracks or languages.
SUBTITLE	Toggles subtitles on or off, or selects subtitle language.
CLEAR	Clears current selection or input.
TOP MENU	Accesses the main menu of the DVD.
MENU	Accesses the DVD's menu.
Navigation Pad (Up, Down, Left, Right, Enter)	Navigates through menus and confirms selections.
RETURN	Goes back to the previous menu or screen.
DISPLAY	Displays on-screen information about the current playback.
PREV (◀◀)	Skips to the beginning of the current track or previous track.
REPLAY	Repeats a short segment of playback.
ADVANCE	Skips forward a short segment of playback.
NEXT (▶▶)	Skips to the next track or chapter.
FAST/SLOW PLAY	Adjusts playback speed.
PLAY (▶)	Starts or resumes playback.
PAUSE (⏸)	Pauses playback.
STOP (■)	Stops playback.

4. MAINTENANCE

4.1. Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or solvents, as these can damage the remote's surface or internal components.

4.2. Storage

When not in use for extended periods, remove the batteries to prevent leakage, which can damage the remote. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

5. TROUBLESHOOTING

If you encounter issues with your remote control, please refer to the following common solutions:

- **Remote not responding:**
 - Ensure batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AA batteries.
 - Check for any obstructions between the remote and the DVD player's infrared sensor.
 - Ensure you are within the effective range and pointing the remote directly at the DVD player.
- **Specific buttons not working:**
 - This remote is designed for specific Sony DVD player models. Some advanced functions or buttons not present on the original RMT-D187A remote may not be supported by your DVD player.
 - Clean the remote's surface, especially around the unresponsive buttons, to ensure no debris is interfering.
- **Intermittent operation:**
 - This often indicates low battery power. Replace batteries.
 - Ensure there are no strong light sources (like direct sunlight or fluorescent lights) interfering with the infrared signal.

6. SPECIFICATIONS

Feature	Detail
Brand	Gorilla babo
Model (Replaces)	Sony RMT-D187A
Connectivity Technology	Infrared (IR)
Compatible Devices	Sony DVD/Blu-ray Players (specific models listed in Section 1.1)
Max Number of Supported Devices	1 (DVD Player)
Power Source	2 x AA Batteries (not included)
Item Weight	2.39 ounces (approx. 67.7 grams)

Feature	Detail
Package Dimensions	6.81 x 4.84 x 1.22 inches (approx. 17.3 x 12.3 x 3.1 cm)

7. WARRANTY AND SUPPORT

7.1. Warranty Information

This Gorilla babo Universal Remote Control comes with a **60-Days Warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the product functions as intended under normal use. Please retain your proof of purchase for warranty claims.

7.2. Customer Support

For any questions, technical assistance, or warranty claims, please contact your retailer or the manufacturer directly. Refer to the contact information provided at the point of purchase or on the product packaging.