

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Indesit](#) /
- › Indesit Washing Machine Spin/Temperature Knob User Manual - C00270603

Indesit C00270603

Indesit Washing Machine Spin/Temperature Knob User Manual

Model: C00270603 | Brand: Indesit

1. INTRODUCTION

This manual provides essential information for the proper installation, operation, and maintenance of your new Indesit C00270603 White Spin/Temperature Knob. Please read these instructions carefully before attempting to install or use the product to ensure safe and efficient operation. Keep this manual for future reference.

2. PRODUCT OVERVIEW

The Indesit C00270603 is a genuine replacement control knob designed for Indesit washing machines. It allows users to select spin speed or temperature settings, depending on the specific function it replaces on your appliance. This white knob is designed for a precise fit and reliable performance.



Figure 2.1: Front view of the Indesit C00270603 White Spin/Temperature Knob. This image shows the smooth, white finish and the indicator line for setting selection.



Figure 2.2: Side view of the Indesit C00270603 White Spin/Temperature Knob, illustrating the internal shaft connection point. This view highlights the design for secure attachment to the washing machine's control panel.

3. INSTALLATION INSTRUCTIONS

Before beginning any installation, ensure the washing machine is disconnected from the main power supply to prevent electrical shock. This knob is a direct replacement part and typically requires no tools for installation.

1. **Disconnect Power:** Unplug the washing machine from the wall socket.
2. **Remove Old Knob (if applicable):** Gently pull the old knob directly off the control shaft. If it is stuck, try wiggling it slightly while pulling. Avoid excessive force to prevent damage to the control panel or shaft.
3. **Inspect Shaft:** Check the control shaft for any damage or debris. Ensure it is clean and intact.
4. **Install New Knob:** Align the new Indesit C00270603 knob with the control shaft. The knob has a specific orientation; ensure the flat side of the shaft aligns with the corresponding slot inside the knob.
5. **Push Firmly:** Push the new knob firmly onto the shaft until it is securely seated. Do not force it if it doesn't slide on easily; re-check alignment.
6. **Test Fit:** Gently turn the knob to ensure it rotates smoothly and engages with the washing machine's internal mechanism.
7. **Reconnect Power:** Once the knob is securely installed and tested, plug the washing machine back into the power supply.

4. OPERATING INSTRUCTIONS

This knob functions identically to the original part it replaces. To operate:

- **Selection:** Gently turn the knob clockwise or counter-clockwise to select the desired spin speed or temperature setting on your washing machine's control panel.
- **Alignment:** Ensure the indicator line on the knob aligns precisely with the desired setting marking on your washing machine's fascia.
- **Engagement:** The knob should turn smoothly and click into place for each setting. If it feels loose or does not engage properly, refer to the Troubleshooting section.

5. MAINTENANCE

To ensure the longevity and proper function of your Indesit control knob, follow these simple maintenance

guidelines:

- **Cleaning:** Wipe the knob regularly with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, as these can damage the finish.
- **Avoid Force:** Do not apply excessive force when turning the knob. It is designed to operate with a gentle touch.
- **Inspection:** Periodically check that the knob remains securely attached to the control shaft.

6. TROUBLESHOOTING

If you encounter any issues with your new control knob, refer to the following common problems and solutions:

- **Knob is Loose:**
 - Ensure the knob is pushed firmly onto the control shaft.
 - Check if the internal slot of the knob or the control shaft itself is damaged. If damaged, the part may need replacement.
- **Knob Does Not Turn Smoothly:**
 - Verify that the knob is correctly aligned with the shaft.
 - Check for any debris or obstruction around the shaft or behind the knob.
 - If the issue persists, the internal mechanism of the washing machine's control panel might be faulty, requiring professional service.
- **Knob Does Not Select Settings:**
 - Ensure the knob is fully seated and aligned.
 - This could indicate an issue with the washing machine's internal selector switch rather than the knob itself. Consult your washing machine's service manual or a qualified technician.

7. SPECIFICATIONS

Feature	Detail
Brand	Indesit
Model Number	C00270603
Item Weight	800 grams
Part Type	Spin/Temperature Control Knob
Color	White

8. WARRANTY AND SUPPORT

This Indesit replacement part is typically covered by the manufacturer's standard warranty for spare parts. For specific warranty terms and conditions, please refer to the documentation provided with your original washing machine or visit the official Indesit website.

For technical support, further assistance, or to inquire about other genuine Indesit spare parts, please contact Indesit customer service or an authorized service center. Contact details can usually be found on the Indesit official website or in your washing machine's user manual.

Online Resources: www.indesit.com

© 2025 Indesit. All rights reserved. This manual is for informational purposes only.