

[Manuals.plus](#) /

› [Roundhill Furniture](#) /

› Roundhill Furniture Habit Solid Wood Tufted Parsons Dining Chair (Set of 2) Instruction Manual

Roundhill Furniture C161TA

Roundhill Furniture Habit Solid Wood Tufted Parsons Dining Chair (Set of 2) Instruction Manual

Model: C161TA

1. INTRODUCTION

Thank you for choosing the Roundhill Furniture Habit Solid Wood Tufted Parsons Dining Chair (Set of 2). This manual provides essential information for the assembly, safe use, and maintenance of your new dining chairs. These chairs feature a button-tufted design for a tailored aesthetic, upholstered in durable polyester fabric with solid oak wood frames. They are designed to offer comfort and style to your dining area.



Figure 1: Two Roundhill Furniture Habit Tan Tufted Parsons Dining Chairs.

2. SAFETY INFORMATION

- Assembly may require careful handling of small parts. Keep small components away from children.
- Ensure all components are securely fastened before using the chairs. Regularly check and tighten all screws to maintain stability.
- Maximum weight recommendation: 200 pounds (90.7 kg). Do not exceed this weight limit.
- Do not stand on the chairs.
- Avoid placing chairs near heat sources or in direct sunlight for prolonged periods to prevent material degradation.

3. PACKAGE CONTENTS

Before assembly, verify that all parts are present and undamaged. Each set includes two dining chairs and the necessary hardware for assembly.

Typical Components Per Chair:

- 1 x Chair Backrest
- 1 x Seat Base
- 2 x Front Legs
- 2 x Back Legs
- Hardware Pack (screws, washers, Allen wrench)

Note: The exact number and type of screws may vary slightly. Refer to the included instruction sheet in your package for precise details.

4. SETUP AND ASSEMBLY

Assembly is straightforward and typically requires one person. It is recommended to assemble the chairs on a soft, clean surface to prevent scratching the floor or the chair components.

Assembly Steps:

1. **Identify Components:** Separate the long screws from the short screws. Typically, the longer screws are used for attaching the back legs to the seat base, and shorter screws are for the front legs.
2. **Attach Front Legs:** Carefully align the front legs with the designated holes on the underside of the seat base. Insert the appropriate screws (usually shorter ones) and hand-tighten them initially. Do not fully tighten yet.
3. **Attach Back Legs:** Align the back legs with the holes on the underside of the seat base. Insert the appropriate screws (usually longer ones). For the back of the chair, if there are five holes, insert all five screws (four long, one short) a little bit at a time, alternating between them. This helps ensure proper alignment and prevents stripping. Hand-tighten initially.
4. **Level the Chair:** Once all legs are loosely attached, place the chair upright on a flat, level surface. Apply gentle pressure to the seat to ensure all four legs make even contact with the floor.
5. **Final Tightening:** While the chair is on a level surface, carefully tighten all screws using the provided Allen wrench. Avoid over-tightening to prevent damage to the wood.

Tip: For optimal stability, ensure the seat and backrest are level before fully tightening all screws. Using a power drill is not recommended as it can easily over-tighten and damage the components.

Your browser does not support the video tag.

Video 1: Official assembly guide for Roundhill Furniture dining chairs. This video demonstrates the process of attaching the legs to the chair base using screws and an Allen wrench, emphasizing the importance of proper alignment and tightening.



Figure 2: Detail of the chair's solid wood leg with an oak finish.

5. USAGE (OPERATING)

These chairs are designed for indoor dining room and kitchen use. Their padded and tufted high-backs provide comfortable seating. The armless design allows for easy movement and fitting around various table styles.



Figure 3: Front view of the dining chairs, highlighting the tufted back and padded seat.

6. MAINTENANCE

Cleaning Instructions:

- For general cleaning, wipe the chairs with a clean, damp cloth.
- For spills or stains on the polyester fabric upholstery, promptly blot the area with a clean, dry cloth. For tougher stains, a mild fabric cleaner can be used, following the product's instructions and spot-testing in an inconspicuous area first.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the fabric and wood finish.
- Regular vacuuming with an upholstery attachment can help remove dust and debris.

General Care:

- Periodically check all screws and connections to ensure they remain tight. Re-tighten as necessary to maintain the chair's structural integrity.
- Protect the chair legs from floor damage by using felt pads, especially on hard floors.

7. TROUBLESHOOTING

Wobbling Chair:

If your chair wobbles after assembly, it is likely due to uneven tightening of the leg screws. To resolve this:

- Loosen all screws connecting the legs to the seat base.
- Place the chair on a flat, level surface.
- Apply gentle, even pressure to the seat to ensure all four legs are firmly on the ground.
- While maintaining pressure, gradually tighten all screws, starting with the middle ones and then moving to the corners.

Stains on Fabric:

Refer to the cleaning instructions in the Maintenance section. Prompt action is key to successful stain removal.

8. SPECIFICATIONS

Brand	Roundhill Furniture
Model Name	Habit
Model Number	C161TA
Color	Tan
Product Dimensions	26"D x 18"W x 39.2"H
Seat Height	19 Inches
Seat Depth	18 Inches
Back Style	Solid Back
Arm Style	Armless
Material	Polyester Fabric, Solid Wood (Oak finish)
Fill Material	Foam
Maximum Weight Recommendation	200 Pounds
Item Weight (per chair)	18 pounds
Included Components	Two Dining Chairs
Product Care Instructions	Wipe Clean

9. WARRANTY AND SUPPORT

For warranty information or further product support, please refer to the documentation included with your purchase or contact Roundhill Furniture customer service directly. Contact details can typically be found on the manufacturer's official website or on the product packaging.

© 2023 Roundhill Furniture. All rights reserved.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question