

Mitsubishi RCU-404

Mitsubishi RCU-404 Universal Remote Control Instruction Manual

Model: RCU-404

Brand: Mitsubishi

1. INTRODUCTION

Thank you for choosing the Mitsubishi RCU-404 Universal Remote Control. This remote is designed to simplify your home entertainment experience by controlling up to four different devices: your Television (TV), Digital Broadcast Satellite (DBS) receiver, Video Cassette Recorder (VCR), and Digital Versatile Disc (DVD) player. This manual provides comprehensive instructions for setting up, operating, and maintaining your new remote control.

2. FEATURES

- **4-in-1 Control:** Manages up to four devices including TV, DBS, VCR, and DVD.
- **Easy Programming:** Features simple setup with universal codes and an automatic code search function.
- **Wide Compatibility:** Works with most major brands and models of electronic devices.
- **Ergonomic Design:** Comfortable grip with soft, well-distributed buttons for intuitive use.
- **Playback Controls:** Dedicated buttons for play, rewind, fast forward, stop, pause, and record functions.
- **Efficient Power Consumption:** Operates with standard batteries for extended use.

3. PACKAGE CONTENTS

- 1x Mitsubishi RCU-404 Universal Remote Control

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA or AA standard batteries (not included), ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.



Image: Front view of the Mitzu RCU-404 Universal Remote Control, showing all buttons and layout.

4.2 Programming the Remote

The Mitzu RCU-404 can be programmed using either an automatic code search or manual code entry. It is recommended to try the automatic search first.

Method 1: Automatic Code Search

1. Turn on the device you wish to control (e.g., TV, DVD player).
2. Press and hold the **SETUP** button on the remote until the indicator light illuminates.
3. Press the device button you want to program (e.g., **TV**, **DVD**, **CBL**, **AUX**). The indicator light will blink once and then remain lit.
4. Point the remote at the device and repeatedly press the **POWER** button (or **CH+** button) until the device turns off (or changes channel). Pressing the button too quickly may cause you to miss the correct code.
5. Once the device responds, press the **SETUP** button again to save the code. The indicator light will turn off.
6. Test other functions (e.g., Volume, Channel) to ensure the remote is fully programmed. If not, repeat the process.

Method 2: Manual Code Entry

1. Turn on the device you wish to control.
2. Refer to the included code list (if available) or the manufacturer's website for specific device codes for your brand.
3. Press and hold the **SETUP** button on the remote until the indicator light illuminates.
4. Press the device button you want to program (e.g., **TV**, **DVD**, **CBL**, **AUX**). The indicator light will blink once and then remain lit.
5. Enter the 3-digit code for your device brand using the number buttons. The indicator light will blink after each digit.
6. If the code is valid, the indicator light will turn off. If the code is invalid, the light will flash rapidly and remain lit, indicating you should try another code.
7. Point the remote at the device and press the **POWER** button to test. If the device turns off, the code is correct.
8. Test other functions. If the remote does not control all functions, try the next code listed for your brand.

5. OPERATING INSTRUCTIONS

Once programmed, operating your Mitzu RCU-404 is straightforward:

1. **Select Device:** Press the corresponding device button (**TV**, **DBS**, **VCR**, or **DVD**) for the device you wish to control. The indicator light will briefly illuminate to confirm selection.
2. **Power On/Off:** Press the **POWER** button to turn the selected device on or off.
3. **Volume Control:** Use the **VOL+** and **VOL-** buttons to adjust the volume. Press the **MUTE** button to silence the audio.
4. **Channel Control:** Use the **CH+** and **CH-** buttons to change channels. Use the number pad (0-9) to directly enter channel numbers.
5. **Input Selection:** Press the **INPUT** button to cycle through the input sources of your TV.
6. **Playback Controls:** For VCR and DVD players, use the dedicated playback buttons: **PLAY**, **PAUSE**, **STOP**, **REW** (rewind), **FF** (fast forward), and **REC** (record).
7. **Navigation:** Use the directional arrow buttons and the **OK** button for menu navigation on compatible devices.

6. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's performance diminishes or the indicator light fails to illuminate. Always replace all batteries at the same time with new ones of the same type.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if the remote will not be used for an extended period.

7. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are correctly inserted and have sufficient charge. Replace if necessary.
 - Ensure there is a clear line of sight between the remote and the device's infrared sensor.
- **Device not responding after programming:**
 - The entered code may be incorrect. Try another code from the code list for your device brand.
 - Repeat the automatic code search process, ensuring you press the **SETUP** button to save the code once the device responds.
- **Some buttons do not work:**
 - Some codes may only support basic functions. Try a different code for your device to see if it offers broader functionality.
 - Ensure you have selected the correct device mode (TV, DBS, VCR, DVD) before pressing the button.

8. SPECIFICATIONS

Brand	Mitzu
-------	-------

Model Name	RCU-404
Color	Black
Max. Compatible Devices	Up to 10 (designed for TV, DBS, VCR, DVD)
Compatible Devices	Television, DBS, VCR, DVD
Connectivity Technology	Infrared (IR)
Power Source	2 x AAA or AA standard batteries (not included)
Item Weight	180 Grams
Dimensions (Approx.)	14.5 cm (Length) x 5.3 cm (Width) x 2.8 cm (Thickness)
Country of Origin	China



Image: Mitzu RCU-404 Universal Remote Control showing approximate dimensions: 14.5 cm length, 5.3 cm width, and 2.8 cm thickness.

9. WARRANTY AND SUPPORT

For detailed warranty information, technical assistance, or to obtain a comprehensive list of device codes, please refer to the product packaging or contact Mitzu customer service directly. Contact information can typically be found on the product box or the official Mitzu website.