

[Manuals.plus](#) /

> [HORI](#) /

> HORI Fighting Commander for PlayStation 4 & 3 Instruction Manual

HORI Fighting Commander

HORI Fighting Commander for PlayStation 4 & 3 Instruction Manual

Model: Fighting Commander

Brand: HORI

INTRODUCTION

The HORI Fighting Commander is an officially licensed controller designed for 2D fighting games, also suitable for other 2D software titles. It features a precise D-Pad, a six-button layout, and an ergonomic design for comfortable use during extended gaming sessions. This wired controller ensures immediate response times and is compatible with PlayStation 4, PlayStation 3, and PC.



Figure 1: Top view of the HORI Fighting Commander controller.

SETUP

1. **Connect the Controller:** Plug the USB cable of the Fighting Commander controller into an available USB port on your PlayStation 4, PlayStation 3, or PC.
2. **Select Platform Mode:** Locate the platform switch on the underside of the controller. Slide the switch to the desired platform: '4' for PlayStation 4, '3' for PlayStation 3, or 'PC' for personal computer.



Figure 2: HORI Fighting Commander with its wired USB connection.

OPERATING INSTRUCTIONS

Six-Button Layout

The controller features a classic six-button face layout, optimized for fighting games. These buttons correspond to standard PlayStation face buttons (Triangle, Circle, Cross, Square) and two additional buttons (R1, R2) positioned for easy access.

D-Pad Function Toggle

The D-Pad can be toggled to function as a standard D-Pad, Left Analog Stick (LS), or Right Analog Stick (RS). Use the 'DP LS RS' switch located near the PlayStation button to select your preferred input mode.



Figure 3: Detail of the D-Pad and function toggle switch.

Turbo Function

Activate the Turbo function for rapid, repeated button presses. Press the 'TURBO' button, then press the desired face button (Triangle, Circle, Cross, Square, R1, R2) to apply Turbo. Press 'TURBO' and the button again to deactivate.

Shoulder Button Mapping

The controller includes a toggle switch on the top edge to remap the shoulder buttons (L1, L2, R1, R2) to L3/R3. This allows for flexible control schemes, particularly useful in fighting games where specific button combinations are critical.



Figure 4: Rear view showing shoulder buttons and mapping switch.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the controller. Do not use liquid cleaners or solvents, as these may damage the surface or internal components.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures. Avoid coiling the cable too tightly to prevent damage.

TROUBLESHOOTING

- **Controller Not Responding:** Ensure the USB cable is securely connected to both the controller and the console/PC. Verify the platform switch is set to the correct position.
- **Buttons Not Working:** Check if the Turbo function is accidentally activated for the affected button. If issues persist, try connecting the controller to a different USB port or another compatible device to isolate the problem.
- **D-Pad Input Issues:** Confirm the 'DP LS RS' switch is set to the desired D-Pad mode.

SPECIFICATIONS

Feature	Detail
---------	--------

Model Name	Fighting Commander
Brand Name	HORI
Compatible Devices	PC, PlayStation 3, PlayStation 4
Controller Type	Gamepad
Connectivity Technology	Wired
Additional Features	Ergonomic design, R/L toggle switch, Turbo functions
Button Quantity	6 (face buttons)
Hardware Platform	PlayStation 4
Power Source	Corded Electric
Item Weight	0.5 Pounds
Item Dimensions	2.01 x 5 x 2.99 inches
Color	Black
UPC	873124005783
ASIN	B01GVOFIAA

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official HORI website or contact HORI customer service. Keep your purchase receipt for warranty claims.