

Logitech LOG920003051

Logitech K270 Wireless Keyboard

USER MANUAL

Introduction

The Logitech K270 Wireless Keyboard offers a full-size traditional keyboard layout, including a numeric pad, designed for efficient and comfortable typing. It features eight hotkeys for instant access to frequently used applications and websites, enhancing productivity.

This keyboard utilizes a tiny Logitech Unifying receiver that plugs into your USB port, allowing connection of up to five additional compatible Logitech devices. The 2.4 GHz wireless technology ensures a reliable signal distance of up to 33 feet, depending on environmental conditions. Built for durability, the K270 features a spill-resistant design and UV-coated keys.

Package Contents

- Logitech K270 Wireless Keyboard
- Logitech Unifying Receiver
- 2 AAA Batteries (pre-installed or included)
- User Documentation

Setup

1. **Insert Batteries:** If not already installed, open the battery compartment on the underside of the keyboard and insert the two AAA batteries, ensuring correct polarity.
2. **Connect the Unifying Receiver:** Plug the tiny Logitech Unifying receiver into an available USB port on your computer.
3. **Power On:** Turn on the keyboard using the On/Off switch located on the top right side of the keyboard. The keyboard should automatically connect to the receiver.
4. **Install Logitech Unifying Software (Optional):** For advanced customization and to connect additional compatible devices, download and install the Logitech Unifying Software from the official Logitech website.



Image: Top-down view of the Logitech K270 Wireless Keyboard, showing the full layout including the numeric pad and function keys.



Image: Angled view of the Logitech K270 Wireless Keyboard, highlighting its slim profile and key arrangement.

Operating Instructions

Basic Keyboard Use

The Logitech K270 functions as a standard full-size keyboard. Simply begin typing after successful setup. The 2.4 GHz wireless connection provides a reliable and lag-free experience up to 33 feet (10 meters) from your computer, though actual range may vary based on environmental conditions and computer setup.

Hotkeys and Function Keys

The keyboard features eight dedicated hotkeys located above the function keys (F1-F12) for quick access to common functions:

- **Play/Pause:** Control media playback.
- **Mute:** Mute audio output.
- **Volume Down:** Decrease audio volume.
- **Volume Up:** Increase audio volume.
- **Home:** Open your default web browser's home page.
- **Email:** Open your default email client.
- **PC Sleep:** Put your computer into sleep mode.
- **Calculator:** Open the calculator application.

Standard function keys (F1-F12) can be accessed directly or by holding the 'Fn' key, depending on your system's configuration and any Logitech software settings.

Logitech Unifying Receiver

The included Unifying receiver allows you to connect up to five additional compatible Logitech wireless devices (such as mice or other keyboards) to the same receiver, freeing up USB ports. Use the Logitech Unifying Software to manage and pair additional devices.



Image: Angled view of the Logitech K270 Wireless Keyboard, showcasing the right side with the numeric keypad and hotkeys.

Maintenance

The Logitech K270 keyboard is designed with durability in mind, featuring a spill-resistant design and UV-coated keys to prevent fading.

- **Cleaning:** To clean the keyboard, gently wipe the surface with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners. Ensure the keyboard is powered off before cleaning.
- **Spill Resistance:** While spill-resistant, it is not waterproof. In case of a spill, immediately power off the keyboard, disconnect it from the computer, and allow it to dry completely before re-using. Do not submerge the keyboard in liquid.
- **Battery Replacement:** Replace batteries when the low battery indicator light illuminates or when keyboard performance degrades. Use two AAA alkaline batteries.

Troubleshooting

Problem	Solution
Keyboard not responding	<p>Ensure the keyboard is powered on.</p> <p>Check battery levels and replace if necessary.</p> <p>Ensure the Unifying receiver is securely plugged into a working USB port. Try a different USB port.</p> <p>Move the keyboard closer to the receiver to rule out range issues.</p> <p>Re-pair the keyboard using the Logitech Unifying Software.</p>

Problem	Solution
Lag or intermittent connection	Reduce interference by moving other wireless devices away from the receiver. Ensure there are no large metal objects between the keyboard and receiver. Try plugging the receiver into a USB port on the front of your computer or using a USB extender.
Hotkeys not working	Ensure Logitech software (if installed) is up to date and running. Check your operating system's keyboard settings.

Specifications

Brand	Logitech
Model Number	LOG920003051
Connectivity Technology	Wireless (2.4 GHz, USB Unifying Receiver)
Keyboard Description	Wireless, Full-size with Numeric Pad
Special Feature	Spill Resistant, UV-Coated Keys
Color	Black
Power Source	Battery Powered (2 x AAA)
Operating System Compatibility	Windows Vista, Windows XP, Mac OS X (and newer versions)
Item Weight	1.59 pounds (approx. 0.72 kg)
Product Dimensions (LxWxH)	18.1 x 17.2 x 0.8 inches (approx. 46 x 43.7 x 2 cm)

Warranty and Support


For detailed warranty information, technical support, and additional resources, please visit the official Logitech support website. You can find drivers, FAQs, and contact information for customer service there.

Logitech Support Website: support.logi.com

Please have your product model number (K270 or LOG920003051) and serial number ready when contacting support.

© 2024 Logitech. All rights reserved.

Related Documents

	<p>Logitech Wireless Keyboard K270 Quick Start Guide</p> <p>A quick start guide for the Logitech Wireless Keyboard K270, detailing its features, setup, and troubleshooting in multiple languages.</p>
---	--

