

[Manuals.plus](#) /

› [MelodySusie](#) /

› MelodySusie PC120B Pen-Shaped Portable Nail Drill Instruction Manual

MelodySusie PC120B

MelodySusie PC120B Pen-Shaped Portable Nail Drill Instruction Manual

Model: PC120B

Brand: MelodySusie

INTRODUCTION

Welcome to your new MelodySusie PC120B Pen-Shaped Portable Nail Drill. This manual provides essential information for safe and effective use, maintenance, and troubleshooting. Please read it thoroughly before operating the device.

SAFETY INFORMATION

Before each use, ensure that the bits are securely fastened and that there are no loose parts that could cause vibration or functional issues.

- Do not use the device if you have an open wound on your nail bed or hand.
- If you have any skin diseases, heat sensitivity, allergic reactions, onychomycosis, or any other disorder, you should consult your doctor and medical professional before using the device.
- The operator shall be responsible for any consequences including product damage or accidents if not strictly compliant with the included instructions.

PRODUCT FEATURES

- **PC120B Multifunctional:** Designed with 6 kinds of metal bits (also works with all kinds of 3/32" shank bits) and 6 sanding bands, which are used for grinding, carving, cutting, polishing for all nail arts as well as cuticle removal.
- **Adjustable Speed and Easy to use:** 0-20,000RPM with a speed control button, which makes this electric nail file easier and safer to polish your nails. Just need to connect the power cord with it to start working. It is professional for both home and salon use.
- **Low Noise and Low Heat:** This electro file is with a powerful yet quiet motor. Also, the smart heat dissipation can avoid overheating efficiently. (no more than 20 minutes of continuous use each time is recommended).
- **Portable and Light:** Compact and lightweight design make it easy to carry and portable to bring it out, you can do your nail art work anytime anywhere.



This image illustrates how the MelodySusie nail drill effectively addresses common nail concerns such as removing acrylic/gel, dead skin, cuticles, and thick nails.

MELODYSUSIE

Founded in 2009, MelodySusie is dedicated to enhancing the nail art experience with a perfect mix of quality and artistry. We integrate fashion, professionalism, health, and environmental consciousness into our products.

Today, MelodySusie is a global leader in the nail industry, offering an extensive range of high-quality nail products tailored for diverse users. We are committed to providing the ultimate nail solution to our users and setting new standards in the nail industry.

This image showcases the compact and portable design of the MelodySusie nail drill, easily fitting into a small pouch for convenient travel and storage.

TOP 1[👑]

Brand in Nail Drill



Beloved by
10,000,000+ Users



Innovation for
Over **17** Years



3 Types in Nail Drill
Pen / Clip-On / Desktop

Products with high-performance and self-developed motors.

This infographic highlights the standout features of the MelodySusie nail drill, including its 20,000 RPM speed, stepless speed control, low heat and noise, stable operation, and lightweight design.

PACKAGE CONTENTS

- 1 x MelodySusie PC120B Nail Drill Pen
- 1 x AC Power Adapter
- 6 x Metal Drill Bits (various shapes)
- 6 x Sanding Bands (initial set)
- User Manual



This image displays the complete package contents: the MelodySusie PC120B nail drill pen, its AC power adapter, a set of six metal drill bits, and a small bag of sanding bands.

SETUP

1. **Attach the Drill Bit:** Select the desired drill bit. Gently insert the bit firmly into the drill head until it clicks into place. Ensure it is secure to prevent vibration during operation.
2. **Connect Power Supply:** Connect the power cord from the drill pen to the AC power adapter.
3. **Plug into Outlet:** Insert the AC power adapter into a suitable electrical outlet.



This diagram illustrates the initial setup steps: first, securely insert a chosen drill bit into the pen's head; second, connect the power cord to the drill; and third, plug the AC adapter into a wall socket.

OPERATING INSTRUCTIONS

4. **Turn On and Adjust Speed:** Locate the sliding switch on the power cord. Slide the switch to the right for clockwise spin or to the left for anti-clockwise spin. Use the speed control dial to accelerate or decelerate the rotation speed.
5. **Perform Nail Work:** Gently apply the rotating bit to your nails for polishing, shaping, or removal tasks. Maintain light pressure and consistent movement.
6. **Change Rotation Direction (if needed):** If you need to change the direction of rotation, turn off the machine, adjust the switch, and then turn it back on.
7. **Turn Off:** After polishing is finished, please turn off the machine and return the control switch to the middle position.
8. **Remove Drill Bit:** Gently pull out the drill bit from the drill head.



This diagram shows how to operate the nail drill: adjust the rotation direction and speed using the controls on the power cord, then gently use the drill on the nail surface for desired effects.

Recommended Usage

For optimal performance and to prevent overheating, it is recommended not to exceed 20 minutes of continuous use each time. The MelodySusie PC120B is suitable for both home and salon use, offering versatility for various nail care needs.



This image highlights the versatility of the nail drill, showing it being used by individuals at home for personal nail care and by professionals in a salon setting.

MAINTENANCE

- **Cleaning:** After each use, disconnect the device from power. Use a soft cloth or brush to gently clean the drill pen and bits to remove dust and debris. Do not use harsh chemicals or abrasive materials.

- **Bit Storage:** Store drill bits in their designated case to prevent damage and keep them organized.
- **General Care:** Keep the device in a dry, cool place. Avoid dropping the device or subjecting it to strong impacts.

TROUBLESHOOTING

Common Issues and Solutions

Issue	Possible Cause	Solution
Excessive Vibration	Bit not securely attached or damaged. Incorrect bit size.	Ensure bit is firmly locked. Replace damaged bits. Use appropriately sized bits.
Unstable Speed	Damaged or loose speed adjustment button. Low battery (for cordless models, though this is corded).	Check speed button. Ensure stable power connection.
Overheating	Continuous use for too long. Incorrect voltage.	Limit continuous use to 20 minutes. Use at specified voltage.
Uneven/Ineffective Result	Incorrect bit for task. Improper angle/pressure. Worn bits.	Select appropriate bit. Adjust angle/pressure. Replace worn bits.
Machine Stops During Use	Loose power connection.	Check power cord and adapter connection.

If issues persist, contact MelodySusie customer support.



This image shows a frequently asked questions section, detailing solutions for issues such as drill bit vibration and unstable speed control.



This image presents another FAQ section, providing guidance for problems like uneven nail filing results and unexpected machine shutdowns.

SPECIFICATIONS

Feature	Detail
Model Name	PC120B
Max RPM	20,000 RPM

Feature	Detail
Operation	Corded
Speed Mode	Stepless
Material	Aluminum
Weight	60 Grams
Product Dimensions	5.63"L x 0.47"W x 0.47"H



This image displays a detailed specification table for the MelodySusie PC120B nail drill, outlining its maximum RPM, corded operation, stepless speed control, aluminum material, weight, and product dimensions.

WARRANTY AND SUPPORT

MelodySusie products come with a standard warranty. For detailed warranty information, product registration, or technical support, please visit the official MelodySusie website or contact their customer service directly.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

