

[Manuals.plus](#) /

› [Pressalit](#) /

› Pressalit R8712 Electric Height-Adjustable Wall-Mounted Changing Table User Manual

Pressalit R8712

Pressalit R8712 Electric Height-Adjustable Wall-Mounted Changing Table

Model: R8712 | Brand: Pressalit

1. INTRODUCTION

The Pressalit R8712 is a wall-mounted, height-adjustable changing table designed for ease of use and stability. It features an integrated electric motor for smooth and stable height adjustment, making it suitable for both public and private environments. This manual provides essential information for the safe installation, operation, and maintenance of your changing table.

2. SAFETY INFORMATION

- **WARNING:** Never leave a child unattended on the changing table. Always keep one hand on the child.
- Ensure the changing table is securely mounted to a suitable wall structure. Refer to the installation instructions carefully.
- Do not exceed the maximum load capacity of 75 kg (165 lbs).
- Keep the electric motor and control unit away from water and moisture.
- Regularly inspect all components for wear, damage, or loose connections. Discontinue use if any damage is found.
- Keep children away from moving parts during height adjustment.

3. PACKAGE CONTENTS

Please verify that all components are present before beginning installation:

- Changing surface (acrylic plastic)
- Wall-mounted frame (powder-coated steel)
- Integrated electric motor
- Manual control unit
- High-quality metal wire basket(s)
- Mounting hardware (screws, anchors, etc. - specific types may vary)

4. SETUP AND INSTALLATION

4. SETUP AND INSTALLATION

Proper installation is crucial for the safety and stability of the changing table. It is recommended that installation be performed by two adults, although assembly may be possible with one person.

4.1 Mounting the Frame

1. Choose a suitable wall location, ensuring sufficient space for operation and access.
2. Mark the drilling points for the wall bracket according to the provided template (if included).
3. Drill holes and insert appropriate wall anchors. **Note:** The unit can be mounted on plaster walls if suitable inserts are used. Consult a professional if unsure about wall type or anchor selection.
4. Securely attach the wall-mounted frame to the wall using the provided screws. Ensure it is level and firmly fixed.

4.2 Assembling the Changing Surface and Baskets

1. Attach the changing surface to the frame according to the instructions in the separate assembly guide (if applicable).
2. Connect the electric motor to the power supply and the control unit as directed.
3. Install the metal wire storage basket(s) onto the designated points beneath the changing surface.



Image: The Pressalit R8712 changing table, featuring a white changing surface, a white height-adjustable frame, and two white wire storage baskets, is shown mounted against a dark tiled wall. A remote control for height adjustment is visible on the right side.

5. OPERATING INSTRUCTIONS

The Pressalit R8712 changing table features an electric motor for convenient height adjustment.

- **Power Connection:** Ensure the changing table is properly connected to a grounded power outlet.
- **Using the Control Unit:** The manual control unit typically has 'Up' and 'Down' buttons.
- **Adjusting Height:** Press and hold the 'Up' button to raise the changing surface. Press and hold the 'Down' button to

lower it. Release the button to stop movement at the desired height.

- **Smooth Operation:** The electric motor provides smooth and stable movement. Avoid obstructing the movement path during adjustment.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and hygienic use of your changing table.

- **Cleaning the Surface:** Wipe the acrylic plastic changing surface with a soft cloth dampened with mild soap and water. Avoid abrasive cleaners or solvents.
- **Cleaning the Frame:** The powder-coated steel frame can be cleaned with a damp cloth. Dry thoroughly.
- **Electrical Components:** Ensure the power is disconnected before cleaning near the motor or control unit. Wipe these components with a dry cloth only.
- **Inspection:** Periodically check all screws and connections to ensure they are tight. Inspect the power cord for any damage.

7. TROUBLESHOOTING

If you encounter issues with your changing table, refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
Changing table does not move.	No power supply. Control unit malfunction.	Check if the power cord is securely plugged in. Ensure the power outlet is functional. Contact customer support if the control unit is unresponsive.
Movement is jerky or unstable.	Overload. Loose mounting.	Ensure the weight on the table does not exceed 75 kg. Check all wall mounting screws for tightness.
Unusual noises during operation.	Obstruction in moving parts. Motor issue.	Inspect for any objects obstructing the height adjustment mechanism. If noises persist, discontinue use and contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Name	R8712
Manufacturer	Pressalit
Type	Electric Height-Adjustable Wall-Mounted Changing Table
Dimensions (W x H x D)	1400 x 1000 x 800 mm
Weight	42 kg
Max. Load Capacity	75 kg
Frame Material	Powder-coated Steel, Metal, Plastic

Feature	Detail
Changing Surface Material	Plastic, Acrylic Plastic
Color	White
Shape	Rectangular
Additional Features	Height adjustable, Integrated electric motor

9. WARRANTY AND SUPPORT

For warranty information, technical support, or replacement parts, please contact Pressalit customer service directly. Refer to the product packaging or the manufacturer's official website for contact details.