

[Manuals.plus](#) /

› [iLiving](#) /

› iLiving i3 Foldable Electric Scooter Mobility User Manual

iLiving i3

iLiving i3 Foldable Electric Scooter Mobility User Manual

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your iLiving i3 Foldable Electric Scooter Mobility. Please read this manual thoroughly before using the scooter to ensure proper understanding and to prevent injury or damage.

The iLiving i3 is designed for personal mobility, offering a lightweight, portable, and comfortable solution for adults requiring assistance with movement. Its foldable design allows for easy transport and storage.



Image: The iLiving i3 Foldable Electric Scooter in its fully assembled, ready-to-use state. The scooter features a blue frame, a black padded seat with armrests, and a handlebar with controls.

SAFETY INFORMATION

Your safety is paramount. Adhere to all warnings and instructions provided in this manual. Failure to do so may result in serious injury or damage to the scooter.

- Always wear appropriate safety gear, including a helmet, when operating the scooter.
- Do not operate the scooter under the influence of alcohol or medication that may impair your judgment or reaction time.
- Ensure the scooter is fully unfolded and locked into position before use.

- Do not exceed the maximum weight capacity of 300 pounds (136 kg).
- Avoid steep inclines and uneven terrain that could cause the scooter to tip over.
- Keep hands and feet clear of moving parts during operation and folding/unfolding.
- Regularly inspect the scooter for any signs of wear or damage before each use.

SETUP AND INITIAL USE

Unpacking

Carefully remove all components from the packaging. Verify that all included items are present: iLiving i3 Foldable Scooter, 1 Set Armrest, 1 x AC Wall Charger, and this User's Manual.

Charging the Battery

1. Locate the charging port on the scooter.
2. Connect the AC Wall Charger to the charging port.
3. Plug the charger into a standard electrical outlet.
4. Allow the battery to charge fully before first use. The charging indicator on the charger will typically change color when charging is complete. A full charge can provide up to 14 miles of travel.

The scooter includes one Lithium-Ion battery. For optimal battery life, avoid completely draining the battery before recharging.

Unfolding the Scooter

The iLiving i3 features a patented quick-and-easy three-step fold and unfold system.

1. Ensure the scooter is on a flat, stable surface.
2. Release the locking mechanism that secures the scooter in its folded position.
3. Gently lift the handlebar stem and unfold the main body until it clicks into place.
4. Raise the seat and secure it. Attach the armrests if they are not already installed.
5. Verify all locking mechanisms are engaged before sitting on or operating the scooter.



Image: The iLiving i3 Foldable Electric Scooter in a partially folded state, demonstrating its compact design for storage or transport.





Image: The iLiving i3 Foldable Electric Scooter in its fully folded configuration, highlighting its compact footprint for easy portability.

OPERATING INSTRUCTIONS

Controls Overview

The handlebar features the main controls for operating the scooter:

- **Power Switch:** Turns the scooter on and off.
- **Speed Control Dial:** Adjusts the maximum speed of the scooter.
- **Throttle Lever:** Engages the motor for forward or reverse movement. Push forward for forward, pull back for reverse.
- **Battery Indicator:** Displays the current battery charge level.
- **Horn Button:** Activates the scooter's horn.
- **Free Wheel Release Switch:** This switch disengages the motor, allowing the scooter to be pushed manually. Ensure this switch is in the "engaged" position for powered operation.

Driving the Scooter

1. Ensure the Free Wheel Release Switch is in the "engaged" position.
2. Turn on the power switch.
3. Adjust the speed control dial to your desired speed setting. Start with a low speed until you are comfortable.
4. Gently press the throttle lever to begin moving. Release the throttle to slow down or stop. The scooter uses electromagnetic brakes, which engage automatically when the throttle is released.
5. Use the handlebar to steer.

Folding the Scooter for Transport

To fold the scooter for transport or storage, reverse the unfolding steps:

1. Ensure the scooter is powered off.
2. Remove any items from the basket (if installed).
3. Lower the seat and fold down the armrests.
4. Release the locking mechanisms that hold the scooter in its unfolded position.
5. Gently fold the main body and handlebar stem until the scooter is in its compact form.
6. Engage the locking mechanism to secure the scooter in the folded position.

The compact folded size makes it suitable for air travel and easy storage.

Using the USB Charging Port

The iLiving i3 is equipped with a USB port, allowing you to charge small electronic devices such as mobile phones while on the go. Locate the USB port on the control panel and connect your device using a compatible USB cable.

MAINTENANCE

Battery Care

- Charge the battery regularly, even if the scooter is not used frequently.
- Avoid storing the scooter with a completely discharged battery.
- Store the battery in a cool, dry place.

- Use only the provided iLiving AC Wall Charger.

Cleaning

Wipe down the scooter with a damp cloth. Do not use abrasive cleaners or spray water directly onto electrical components.

General Inspection

- Check tire pressure and condition regularly.
- Ensure all nuts, bolts, and fasteners are secure.
- Inspect electrical cables for any signs of wear or damage.
- Test the brakes and horn before each use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Scooter does not power on.	Battery is discharged. Power switch is off. Free Wheel Release Switch is disengaged.	Charge the battery. Turn on the power switch. Ensure the Free Wheel Release Switch is in the "engaged" position.
Scooter moves slowly or not at all.	Low battery charge. Speed control dial set too low. Overload (exceeding weight capacity).	Recharge the battery. Adjust speed control dial. Reduce load on the scooter.
Unusual noises during operation.	Loose components. Motor or wheel issue.	Inspect for loose parts and tighten. Contact customer support if noise persists.

If you encounter issues not listed here or if solutions do not resolve the problem, please contact iLiving customer support.

SPECIFICATIONS

Feature	Detail
Model	i3
Product Dimensions (Unfolded)	21 x 37 x 35 inches
Item Weight (with batteries)	53 Pounds (approx. 24 kg)
Maximum Weight Recommendation	300 Pounds (approx. 136 kg)
Battery Type	Lithium Ion (1 included)
Range Per Charge	Up to 14 miles
Seat Height	16 Inches
Frame Material	Aluminum

Feature	Detail
Brake Style	Electromagnetic
Power Source	Battery Powered
Included Components	1 Set Armrest, 1 x AC Wall Charger, 1 x iLiving i3 Foldable Scooter, User's Manual
ASIN	B01H4X6KTA
UPC	856957005274

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please contact the manufacturer, TLM International, Inc. Refer to your purchase documentation for specific warranty terms and contact details.

It is recommended to register your product upon purchase to facilitate any future support needs.

© 2026 iLiving. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01H4X6KTA>

More documents and user manuals: <https://manuals.plus/>