

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Ozeri](#) /

› [Ozeri Touch Professional Tempered Glass Digital Kitchen Scale User Manual](#)

### Ozeri ZK013-W

# Ozeri Touch Professional Tempered Glass Digital Kitchen Scale

User Instruction Manual

[Introduction](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Support](#)

## 1. INTRODUCTION

The Ozeri Touch Professional Tempered Glass Digital Kitchen Scale is designed for precise and efficient measurement of ingredients in your kitchen. It features advanced touch-sensitive buttons, a durable tempered glass surface, and high-precision GFX sensors to ensure accurate and fast readings. Its sleek, thin design makes it a modern addition to any kitchen.

This manual provides detailed instructions on how to set up, operate, and maintain your Ozeri Touch Digital Kitchen Scale to ensure optimal performance and longevity.



Figure 1: Ozeri Touch Professional Tempered Glass Digital Kitchen Scale (White model).

## 2. SETUP

---

### 2.1 Unpacking

Carefully remove the scale from its packaging. Inspect the scale for any signs of damage. If any damage is observed, do not use the product and contact customer support.

### 2.2 Battery Installation

The Ozeri Touch Digital Kitchen Scale requires 2 Lithium Metal batteries (included). The battery compartment is designed for easy access, requiring no screwdriver.

1. Locate the battery compartment on the underside of the scale.
2. Open the battery compartment cover.
3. Insert the 2 Lithium Metal batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

### 2.3 Placement

Place the scale on a flat, stable, and hard surface to ensure accurate readings. Avoid placing it on soft or uneven surfaces, which can affect its precision.

## 3. OPERATION

---

### 3.1 Turning On/Off

- **To Turn On:** Gently tap the "**TARE**" button (power button). The LCD screen will illuminate and display "0.00".
- **To Turn Off:** Press and hold the "**TARE**" button for a few seconds. The scale will also automatically power off after 2 minutes of inactivity to conserve battery life.



Figure 2: Close-up view of the scale's display and touch-sensitive buttons.

### 3.2 Changing Units

The scale can display measurements in various units: pounds (lb), ounces (oz), grams (g), kilograms (kg), fluid ounces (fl.oz.), and milliliters (ml).

- Press the "**UNIT**" button to cycle through the available measurement units.
- The selected unit will be displayed on the LCD screen.

### 3.3 Tare Function

The Tare function allows you to subtract the weight of a container or previously added ingredients, enabling you to measure subsequent ingredients accurately.

1. Place an empty container (e.g., bowl, plate) on the scale. The display will show its weight.
2. Tap the "**TARE**" button. The display will reset to "0.00".
3. Add your ingredients to the container. The display will now show only the net weight of the ingredients.



Figure 3: Using the scale to measure coffee grounds, demonstrating the tare function.

### 3.4 Measurement Capacity and Accuracy

- **Capacity:** The scale can measure from 0.05 ounces (1 gram) up to 12 pounds and 10.8 ounces (5750 grams).
- **Graduations:** Measurements are provided in increments of 1 gram or 0.05 ounces.



Figure 4: The scale accurately measuring sugar in a small bowl.

### 3.5 Display Indicators

- **"Lo" or Low Battery Indicator:** Appears when the batteries are running low and need to be replaced.
- **"O-Ld" or Overload Indicator:** Appears if the weight on the scale exceeds its maximum capacity. Remove items immediately to prevent damage.

## 4. MAINTENANCE

---

### 4.1 Cleaning

The tempered glass surface of the Ozeri Touch scale is easy to clean. Simply wipe the surface with a damp cloth. Avoid using abrasive cleaners or submerging the scale in water.

### 4.2 Storage

Store the scale in a dry place at room temperature. It is recommended to store the scale on a horizontal surface to maintain its calibration and accuracy over time.

## 5. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Scale does not turn on or turns off quickly.	Low or depleted batteries.	Replace the 2 Lithium Metal batteries with new ones. Ensure correct polarity.
Inaccurate readings.	Scale is on an uneven or soft surface; scale is overloaded; external vibrations.	Place the scale on a flat, stable, hard surface. Ensure weight does not exceed 12 lbs 10.8 oz (5750 g). Avoid vibrations during measurement.
"O-Ld" (Overload) displayed.	Weight exceeds maximum capacity.	Remove items from the scale immediately to prevent damage.
"Lo" (Low Battery) displayed.	Batteries are low.	Replace the batteries.

## 6. SPECIFICATIONS

---

Feature	Detail
<b>Brand</b>	Ozeri
<b>Model Number</b>	ZK013-W
<b>Color</b>	White
<b>Material</b>	Tempered Glass
<b>Weight Limit</b>	12 Pounds (5750 grams)
<b>Measurement Graduations</b>	1 gram / 0.05 ounces
<b>Display Type</b>	LCD
<b>Power Source</b>	2 Lithium Metal batteries (included)
<b>Product Dimensions</b>	9.1 x 5.9 x 0.6 inches
<b>Item Weight</b>	16 ounces (1 pound)
<b>Special Features</b>	Touch Sensitive Buttons, Tare Function, Auto Shut Off, Low Battery Indicator, Overload Indicator

## 7. WARRANTY AND SUPPORT

---

### 7.1 Warranty Information

Specific warranty details for the Ozeri Touch Professional Tempered Glass Digital Kitchen Scale are typically provided with the product packaging or on the official Ozeri website. Please refer to these sources for the most current warranty terms and conditions.

## 7.2 Customer Support

For further assistance, technical support, or inquiries regarding your Ozeri product, please visit the official Ozeri store or contact their customer service department.

- **Official User Manual (PDF):** [Download PDF Manual](#)
- **Ozeri Store:** [Visit Ozeri Store on Amazon](#)

© 2024 Ozeri. All rights reserved.