

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Kaiser](#) /

› [Kaiser MSA-6515BT Amplified Speaker System User Manual](#)

Kaiser MSA-6515BT

Kaiser MSA-6515BT Amplified Speaker System User Manual

Model: MSA-6515BT

INTRODUCTION

Thank you for choosing the Kaiser MSA-6515BT Amplified Speaker System. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

SAFETY INSTRUCTIONS

To ensure safe operation and prevent damage, please observe the following precautions:

- Do not expose the speaker to rain or moisture to prevent electric shock or fire.
- Do not block ventilation openings. Ensure adequate airflow around the unit.
- Place the speaker on a stable, flat surface to prevent it from falling.
- Disconnect the power cord during lightning storms or when unused for long periods.
- Do not attempt to service the unit yourself. Refer all servicing to qualified personnel.
- Keep the speaker away from heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- Use only attachments/accessories specified by the manufacturer.
- Avoid placing heavy objects on the power cord or speaker.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Kaiser MSA-6515BT Amplified Speaker
- Adjustable Speaker Stand
- Wired Microphone
- Remote Control

- Power Cable
- Battery Charging Cable

PRODUCT OVERVIEW

Front View





Figure 1: Front view of the Kaiser MSA-6515BT amplified speaker, featuring the main speaker grille and the KSR brand logo at the bottom.

Side View and Portability Features



Figure 2: Side view of the speaker, illustrating the robust side handle and the wheels located at the bottom for convenient portability.

Rear Panel and Controls





Figure 3: Detailed view of the rear control panel, including the digital display, various input/output jacks, and independent volume and tone controls.

The rear panel houses all essential controls and connection ports. Familiarize yourself with these components:

- **Digital Display:** Shows current mode, track information, or FM frequency.
- **USB/SD Card Slots:** For playing audio files from memory devices.
- **Playback Controls:** Play/Pause, Skip Forward/Backward, Mode selection.
- **Microphone Inputs (MIC 1, MIC 2):** XLR (Cannon) and 6.3mm (1/4 inch) jacks for connecting microphones.
- **Line Input (RCA):** For connecting external audio devices like CD players or mixers.
- **Line Output (RCA):** For connecting to another amplifier or speaker.
- **Speakon Output:** For connecting to a passive speaker.
- **Volume Controls:** Independent knobs for Master Volume, Microphone Volume, Line Input Volume, Bass, and Treble.
- **Power Switch and AC Input:** For connecting the power cable and turning the unit on/off.

SETUP

Unpacking and Placement

1. Carefully remove the speaker and all accessories from the packaging.
2. Place the speaker on a stable, level surface. For optimal sound projection, use the included adjustable speaker stand.
3. Ensure there is adequate space around the speaker for ventilation.

Connecting Power

1. Ensure the speaker's power switch is in the OFF position.
2. Connect the included power cable to the AC input on the rear panel of the speaker.
3. Plug the other end of the power cable into a standard electrical outlet.

OPERATING INSTRUCTIONS

Powering On/Off

1. To turn on the speaker, flip the power switch on the rear panel to the ON position. The digital display will illuminate.
2. To turn off the speaker, flip the power switch to the OFF position.

Bluetooth Connectivity

1. Turn on the speaker.
2. Press the "Mode" button on the rear panel or remote control until "Bluetooth" appears on the display.
3. On your Bluetooth-enabled device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
4. Select "MSA-6515BT" from the list of devices. Once paired, a confirmation sound will be heard.
5. You can now play audio from your device through the speaker. Optimal range is up to 2 meters.

FM Radio Operation

1. Press the "Mode" button until "FM" appears on the display.

2. Press the Play/Pause button to initiate an automatic scan for FM stations. The speaker will save all found stations.
3. Use the Skip Forward/Backward buttons to navigate between saved stations.

USB/SD Card Playback

1. Insert a USB flash drive or SD card (with audio files) into the corresponding slot on the rear panel.
2. The speaker should automatically switch to USB/SD mode and begin playback. If not, press the "Mode" button to select USB/SD.
3. Use the playback controls (Play/Pause, Skip Forward/Backward) to manage your audio.

Microphone and Line Inputs

- **Microphone:** Connect the wired microphone to either the XLR (Cannon) or 6.3mm (1/4 inch) MIC input. Adjust the "MIC Volume" knob to control the microphone's level.
- **Line Input:** Connect external audio sources (e.g., mixer, CD player) to the RCA Line Input. Adjust the "Line Volume" knob.
- **Tone Control:** Use the "Bass" and "Treble" knobs to adjust the overall sound characteristics.
- **Master Volume:** Adjust the "Master Volume" knob for the overall output level of the speaker.

Connecting Additional Speakers

- **RCA Output:** Use the RCA Line Output to send the audio signal to another amplified speaker or an external amplifier.
- **Speakon Output:** Connect a passive speaker to the Speakon output for expanded sound coverage. Ensure the passive speaker's impedance matches the MSA-6515BT's output requirements (8 ohms).

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the speaker. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Ventilation:** Regularly check that the ventilation grilles are free from dust and debris.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; Power switch off; Outlet malfunction.	Ensure power cable is securely connected. Turn power switch ON. Test outlet with another device.
No sound output	Volume too low; Incorrect input mode selected; Device not connected properly.	Increase Master Volume. Select correct input mode (Bluetooth, USB, FM, Line). Check all cable connections.
Bluetooth pairing failure	Device too far; Bluetooth not enabled on source device; Speaker not in pairing mode.	Move device closer to speaker. Ensure Bluetooth is enabled on your device. Select Bluetooth mode on speaker.

Problem	Possible Cause	Solution
Microphone not working	Microphone volume low; Microphone not connected; Faulty microphone.	Increase MIC Volume. Ensure microphone is securely connected. Test with another microphone if available.
USB/SD playback issues	Unsupported file format; Corrupt files; USB/SD card not inserted correctly.	Ensure audio files are in a supported format (e.g., MP3). Reinsert USB/SD card. Try a different USB/SD card.

SPECIFICATIONS

Model Name	MSA-6515BT
Speaker Type	Professional Amplified Speaker
Speaker Size	15 Inches
Audio Power Output	33W PMPO / 2W RMS
Impedance	8 ohms
Connectivity Technology	Bluetooth, RCA, USB, SD
Bluetooth Range	Up to 2 meters (optimal link)
Inputs	RCA (audio), 6.3mm (microphone), Cannon (microphone), USB, SD
Outputs	RCA (amplifier), Speakon (passive speaker)
Power Source	Electric Cable
Average Battery Duration	5 Hours
Dimensions (D x W x H)	40 cm x 49 cm x 75.5 cm
Weight	21 Kilograms
Included Components	Amplified speaker, wired microphone, remote control, adjustable stand, power cable, battery charging cable.



Figure 4: Dimensions of the Kaiser MSA-6515BT speaker.

WARRANTY AND SUPPORT

This Kaiser MSA-6515BT Amplified Speaker System comes with a limited warranty. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support, service, or warranty claims, please contact Kaiser customer service through their official channels. Keep your purchase receipt as proof of purchase.

© 2023 Kaiser. All rights reserved.

Related Documents - MSA-6515BT

 <p>KAI SER MOD. MSA-6515BT Altavoces acústicos montados en caja acústica (Bafle) boombox 15" (38,1 cm)</p> <p><small>Detalles y actualizaciones puede estar disponible dentro del sitio web de Kaiser. Los cambios son reservados, las colores y el diseño pueden variar. "Leer completamente el manual antes de usar este producto por primera vez. www.kaisersound.com - 01000 123456 - 01000 123457 - 01000 123458</small></p>	<p><u>Manual de Usuario KAI SER MSA-6515BT Altavoz Boombox 15"</u></p> <p>Manual completo para el altavoz acústico KAI SER MSA-6515BT Boombox de 15 pulgadas. Incluye instrucciones de armado, conexión, funcionamiento, panel de control, especificaciones técnicas, advertencias de seguridad y póliza de garantía.</p>
 <p>KAI SER MOD. MSA-7618 Altavoz acústico montado en caja acústica (Bafle) boombox 18" (45,72 cm)</p> <p><small>Detalles y actualizaciones puede estar disponible dentro del sitio web de Kaiser. Los cambios son reservados, las colores y el diseño pueden variar. "Leer completamente el manual antes de usar este producto por primera vez. www.kaisersound.com - 01000 123456 - 01000 123457 - 01000 123458</small></p>	<p><u>Kaiser MSA-7618 Boombox Speaker Manual</u></p> <p>User manual for the Kaiser MSA-7618 18-inch boombox speaker, covering setup, operation, features, and specifications. Learn how to connect, charge, and use the speaker with various audio sources and microphones.</p>
 <p>KAI SER MOD. MSA-9908BT Altavoces acústicos montados en caja acústica (Bafle) boombox 8" (20,32 cm)</p> <p><small>Detalles y actualizaciones puede estar disponible dentro del sitio web de Kaiser. Los cambios son reservados, las colores y el diseño pueden variar. "Leer completamente el manual antes de usar este producto por primera vez. www.kaisersound.com - 01000 123456 - 01000 123457 - 01000 123458</small></p>	<p><u>Kaiser MSA-9908BT Acoustic Speakers Boombox 8" - User Manual</u></p> <p>User manual for the Kaiser MSA-9908BT acoustic speakers boombox 8". Includes setup, operation, specifications, and warranty information.</p>
 <p>KAI SER MOD. MSA-7508 Altavoces acústicos montados en caja acústica (Bafle) boombox 8" (20,32 cm)</p> <p><small>Detalles y actualizaciones puede estar disponible dentro del sitio web de Kaiser. Los cambios son reservados, las colores y el diseño pueden variar. "Leer completamente el manual antes de usar este producto por primera vez. www.kaisersound.com - 01000 123456 - 01000 123457 - 01000 123458</small></p>	<p><u>Kaiser MSA-7508 Boombox Speaker - User Manual and Specifications</u></p> <p>Comprehensive user manual and specifications for the Kaiser MSA-7508 acoustic speaker boombox. Includes setup, operation, features, troubleshooting, and warranty information.</p>

 <p>KAISER MODELO: MSA-5615 Altavoces acústicos montados en caja acústica (Bafle) boombox 15" (38,1 cm)</p> <p>Este producto es una representación de los colores y el diseño. Pueden variar. Las imágenes son representativas, los colores y el diseño pueden variar. Leer completo el manual antes de usar este producto por primera vez. www.mitsue.com https://www.mitsue.com Mitsue Corp. Mitsue</p>	<p>Kaiser MSA-5615 Portable Boombox Speaker - User Manual and Specifications Comprehensive user manual and technical specifications for the Kaiser MSA-5615 portable boombox speaker, including setup, operation, features, and warranty information.</p>
 <p>KAISER MODELO: MSA-7908BTE Altavoces acústicos montados en caja acústica (Bafle) boombox 8" (20,32 cm)</p> <p>Este producto es una representación de los colores y el diseño. Pueden variar. Las imágenes son representativas, los colores y el diseño pueden variar. Leer completo el manual antes de usar este producto por primera vez. www.mitsue.com https://www.mitsue.com Mitsue Corp. Mitsue</p>	<p>Manual de Usuario y Especificaciones: Altavoz Kaiser MSA-7908BTE Boombox 8" Guía completa para el altavoz Kaiser MSA-7908BTE, incluyendo instrucciones de uso, armado, carga, funcionamiento, descripción general, especificaciones técnicas, control remoto, micrófono y póliza de garantía.</p>

Documents - Kaiser – MSA-6515BT



[Manual de Usuario KAISER MSA-6515BT Altavoz Boombox 15"](#)

Manual completo para el altavoz acústico KAISER MSA-6515BT Boombox de 15 pulgadas. Incluye instrucciones de armado, conexión, funcionamiento, panel de control, especificaciones técnicas, advertencias de seguridad y póliza de garantía.
lang:es score:41 filesize: 530.97 K page_count: 8 document date: 2021-06-28