

Hatco TPT-208

Hatco TPT-208 4 Slice Commercial Toaster User Manual

Model: TPT-208

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, installation, and maintenance of your Hatco TPT-208 4 Slice Commercial Toaster. Please read this manual thoroughly before using the appliance and retain it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.

- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Do not operate unattended.
- This appliance operates on 208V. Ensure your power supply matches this requirement.

3. PRODUCT OVERVIEW

The Hatco TPT-208 is a commercial-grade 4-slice toaster designed for efficiency and durability. It features wide slots suitable for various bread types, including bagels and waffles.



Image: Hatco TPT-208 4 Slice Commercial Toaster. This stainless steel toaster features four wide slots, two toast levers, and two color control knobs. A 'CAUTION-HOT' warning is visible on the top surface. The front panel includes branding and operational indicators.

Key Components

- **Toasting Slots:** Four 1 1/4 inch wide slots for various bread products.
- **Toast Levers:** Engage the toasting cycle and lower food into the slots.

- **Color Control Knobs:** Adjust the browning level from light to dark. Two independent controls for two pairs of slots.
- **Selector Switch:** Allows for single-sided or double-sided toasting (e.g., for bagels).
- **Crumb Tray:** Removable tray for easy cleaning of crumbs.

4. SETUP

Unpacking

- Carefully remove the toaster from its packaging.
- Remove all packing materials and protective films.
- Inspect the toaster for any shipping damage. If damaged, contact your supplier immediately.

Placement

- Place the toaster on a stable, level, heat-resistant surface.
- Ensure adequate clearance (at least 6 inches) from walls and other objects to allow for proper ventilation and prevent fire hazards.
- Do not place the toaster near flammable materials such as curtains or paper.

Electrical Connection

- Verify that the electrical supply matches the toaster's requirements: 208V.
- Plug the toaster into a grounded 208V electrical outlet. Do not use extension cords or adapters.

5. OPERATING INSTRUCTIONS

First Use

- Before first use, operate the toaster empty for a few cycles at a medium setting to burn off any manufacturing residues. This may produce a slight odor and smoke, which is normal.
- Ensure the area is well-ventilated during this initial operation.

Toasting Bread

1. Place slices of bread into the toasting slots. Ensure bread is not oversized or jammed.
2. Adjust the desired browning level using the 'COLOR CONTROL' knob for the corresponding pair of slots. Settings range from 'LIGHT' to 'DARK'.
3. Push the toast lever down until it locks into place. The toasting cycle will begin.
4. When the desired browning is achieved, the toast will automatically pop up, and the cycle will end.
5. Carefully remove the toasted bread. Be aware that the toaster surfaces will be hot.

Toasting Bagels or Waffles (Single-Sided Toasting)

- For single-sided toasting, push the selector button to the 'OUT' position. This setting toasts the inside surface only.
- Place the cut side of the bagel or waffle facing inwards into the slots.
- Adjust the 'COLOR CONTROL' knob to your preference.
- Push the toast lever down to start the cycle.

- The toaster will automatically pop up the item when done.

6. MAINTENANCE AND CLEANING

- **Always unplug the toaster from the electrical outlet and allow it to cool completely before cleaning.**
- **Exterior Cleaning:** Wipe the exterior surfaces with a damp cloth and mild detergent. Do not use abrasive cleaners or scouring pads, as they may scratch the stainless steel finish.
- **Crumb Tray:** Pull out the removable crumb tray located at the bottom of the toaster. Empty crumbs into a waste bin. Wipe the tray clean with a damp cloth and dry thoroughly before reinserting.
- **Interior Cleaning:** Never insert metal objects into the toasting slots to clean. If food becomes lodged, unplug the toaster and carefully dislodge it with a non-metallic utensil.
- Do not immerse the toaster in water or any other liquid.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outage; circuit breaker tripped; faulty outlet.	Ensure toaster is securely plugged into a 208V outlet. Check circuit breaker. Test outlet with another appliance.
Toast is too light/dark.	Color control setting is incorrect.	Adjust the 'COLOR CONTROL' knob to a higher setting for darker toast or a lower setting for lighter toast.
Toast does not pop up.	Lever not fully depressed; food jammed.	Ensure the toast lever is pushed down until it locks. If food is jammed, unplug the toaster and carefully remove it with a non-metallic utensil.
Uneven toasting.	Inconsistent bread thickness; toaster elements aging.	Ensure bread slices are of uniform thickness. If problem persists, contact service.

8. SPECIFICATIONS

Brand	Hatco
Model	TPT-208
Color	Stainless
Material	Stainless Steel
Specific Uses	Bagel, Bread, Waffle
Wattage	850 watts
Number of Slices	4

Special Feature	Selector Switch for Single/Double Sided Toasting, Durable Stainless Steel Construction, Versatile Toasting Capabilities
Style	Compact
Voltage	208 Volts
Number of Settings	2
UPC	753760740425
Manufacturer	Hatco
ASIN	B01HA8IN6M
Date First Available	August 4, 2013

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact Hatco customer service directly. Keep your purchase receipt for warranty claims.

Contact information for Hatco can typically be found on their official website or on the product packaging.

Related Documents - TPT-208

	<p>Hatco Electric Booster Water Heaters: Installation and Operating Manual</p> <p>This manual provides installation, operation, and safety instructions for Hatco Electric Booster Water Heaters (Imperial, Compact, Mini-Compact series), covering specifications, sizing, electrical, plumbing, and maintenance for commercial kitchens.</p>
	<p>Hatco Intelligent Toast-Qwik Conveyor Toaster Parts List</p> <p>This document provides a comprehensive parts list for the Hatco Intelligent Toast-Qwik Conveyor Toaster, including models ITQ-875-1C, ITQ-1000-1C, and ITQ-1750-2C. It details part numbers, descriptions, and quantities for various components, along with exploded view diagrams for easy identification.</p>
	<p>Hatco Glo-Ray Heated Shelf Installation and Operating Manual</p> <p>Comprehensive guide for Hatco Glo-Ray Heated Shelves (GRS, GRSB, GRSBF series), covering installation, operation, safety, and maintenance for optimal food holding in commercial kitchens. Visit www.hatcocorp.com for more.</p>



[Hatco Glo-Ray Heated Shelf Installation and Operating Manual \(GRS, GRSB, GRSBF Series\)](#)

Comprehensive guide for Hatco Glo-Ray Heated Shelves (GRS, GRSB, GRSBF series), covering installation, operation, safety, maintenance, and troubleshooting for optimal food warming performance in commercial kitchens.



[Hatco Glo-Ray Heated Shelf Installation and Operating Manual](#)

This manual provides comprehensive installation, operation, and maintenance instructions for Hatco's Glo-Ray® Heated Shelf units, including GRS, GRSB, and GRSBF series. Learn about safety, specifications, and troubleshooting for these food warming solutions.



[Hatco Glo-Ray Heated Shelf Installation and Operating Manual](#)

This manual details the installation, operation, and maintenance of Hatco Glo-Ray Heated Shelves, covering GRS, GRSB, and GRSBF series. It includes product specifications, safety warnings, and operational guidance for food service professionals.