

Majestic RS-137

Majestic RS-137 Radio Alarm Clock User Manual

Model: RS-137 (109137_WH)

1. INTRODUCTION

Thank you for purchasing the Majestic RS-137 Radio Alarm Clock. This manual provides essential information for the safe and efficient operation of your device. Please read these instructions carefully before use and retain them for future reference.

2. SAFETY INFORMATION

- Ensure the power supply voltage matches the requirements specified on the device (AC 230V, 50Hz).
- Do not expose the device to rain, moisture, or extreme temperatures.
- Avoid placing the unit near heat sources or in direct sunlight.
- Do not open the casing; refer all servicing to qualified personnel.
- Keep out of reach of children.
- Dispose of batteries responsibly according to local regulations.

3. PACKAGE CONTENTS

Please check that the following items are included in your package:

- Majestic RS-137 Radio Alarm Clock Unit
- AC Power Adapter
- User Manual (this document)

4. PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your Majestic RS-137 Radio Alarm Clock.



Figure 1: Top view of the Majestic RS-137 Radio Alarm Clock, showing the LCD display, control buttons, and projection lens.



Figure 2: The Majestic RS-137 Radio Alarm Clock with its time projection feature active, displaying the time on a surface.

Controls and Display:

- **LCD Display:** Shows time, alarm status, and radio frequency.
- **Projection Lens:** Projects the time onto a surface.
- **180° Flip Button:** Rotates the projected time display.
- **MEM/M+ Button:** Used for storing and recalling radio presets.
- **ON/OFF Button:** Powers the radio on or off.
- **SNOOZE/SLEEP/DIMMER Button:** Activates snooze, sets sleep timer, and adjusts display brightness.
- **Alarm 1 Button:** Sets and activates Alarm 1.
- **Alarm 2 Button:** Sets and activates Alarm 2.
- **Tuning/Time Set Buttons:** Adjusts radio frequency or time/alarm settings.
- **Volume Control:** Digital volume adjustment.

5. SETUP

5.1 Power Connection

1. Plug the AC power adapter into the DC input jack on the back of the alarm clock.
2. Plug the other end of the adapter into a standard AC 230V, 50Hz wall outlet.
3. The display will light up, and the clock will be ready for initial setup.

5.2 Battery Backup Installation

The Majestic RS-137 uses a CR2032 lithium battery (3V) for backup power. This battery preserves time and alarm settings during a power outage.

1. Locate the battery compartment on the bottom of the unit.
2. Open the battery compartment cover.
3. Insert one CR2032 battery, ensuring the correct polarity (+/-).
4. Close the battery compartment cover securely.

6. OPERATING INSTRUCTIONS

6.1 Setting the Time

1. Press and hold the 'Time Set' button (often combined with a tuning button) until the time display flashes.
2. Use the 'Tuning/Time Set' buttons (e.g., < / > or + / -) to adjust the hour.
3. Press 'Time Set' again to confirm the hour and move to minute adjustment.
4. Use the 'Tuning/Time Set' buttons to adjust the minutes.
5. Press 'Time Set' one more time to save the current time.

6.2 Setting Alarms (Dual Alarm)

The RS-137 features two independent alarms (Alarm 1 and Alarm 2).

1. Press and hold the 'Alarm 1' or 'Alarm 2' button until the alarm time display flashes.
2. Use the 'Tuning/Time Set' buttons to adjust the desired alarm hour.
3. Press the respective 'Alarm' button again to confirm the hour and move to minute adjustment.
4. Use the 'Tuning/Time Set' buttons to adjust the desired alarm minutes.
5. Press the 'Alarm' button again to select the alarm source (Buzzer or Radio).
6. Press the 'Alarm' button one last time to save the alarm setting. The alarm icon will appear on the display.
7. To activate/deactivate an alarm, press the 'Alarm 1' or 'Alarm 2' button briefly. The alarm icon will appear/disappear.

6.3 Radio Operation (PLL Radio)

1. Press the 'ON/OFF' button to turn on the radio.
2. Use the 'Tuning/Time Set' buttons to manually tune to your desired radio station.
3. To auto-scan for stations, press and hold the 'Tuning/Time Set' buttons.
4. **Storing Presets:** Tune to a station, then press and hold the 'MEM/M+' button until a preset number flashes. Use 'Tuning/Time Set' to select the preset number, then press 'MEM/M+' again to save.
5. **Recalling Presets:** Briefly press the 'MEM/M+' button to cycle through stored presets.
6. Adjust the volume using the digital volume control buttons.

6.4 Time Projection Function

1. Locate the 'PROJECTION' button (often near the projection lens). Press it to turn the time projection on or off.
2. Adjust the angle of the projection lens to direct the time onto a wall or ceiling.
3. Use the '180° FLIP' button to rotate the projected time for optimal viewing.

6.5 Snooze and Sleep Timer

- **Snooze:** When an alarm sounds, press the 'SNOOZE/SLEEP/DIMMER' button to temporarily silence the alarm for a few minutes (default snooze time). The alarm will sound again after the snooze period.
- **Sleep Timer:** While the radio is playing, press the 'SNOOZE/SLEEP/DIMMER' button repeatedly to cycle through available sleep timer durations (e.g., 90, 60, 30, 15 minutes, OFF). The radio will automatically turn off after the selected time.

6.6 Display Dimmer

Press the 'SNOOZE/SLEEP/DIMMER' button (when no alarm is sounding and the radio is off) to adjust the brightness level of the LCD display.

7. MAINTENANCE

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace the CR2032 backup battery annually or when the time settings are lost during a power outage.
- Ensure proper ventilation around the unit.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power/Display off	Power adapter not connected; Power outlet faulty.	Check power adapter connection; Try a different outlet.
Time/settings lost after power outage	Backup battery depleted or not installed.	Install or replace the CR2032 backup battery.
Alarm does not sound	Alarm not activated; Alarm volume too low.	Ensure alarm icon is displayed; Increase volume.
Poor radio reception	Antenna not extended; Interference.	Extend the wire antenna fully; Reposition the unit.
Projection unclear or not visible	Lens out of focus; Room too bright.	Adjust the focus of the projection lens; Ensure room is dark.

9. SPECIFICATIONS

Model Number	RS-137 (109137_WH)
Power Input	AC 230V, 50Hz
Power Consumption	5 W (typical)
Backup Battery	CR2032 Lithium, 3V
Display Type	LCD
Number of Alarms	2
Built-in Speakers	1
Dimensions (W x D x H)	140 mm x 52 mm x 55 mm
Weight	300 g
Color	Black/White
Material	Acrylonitrile Butadiene Styrene (ABS)

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or visit the official Majestic website. Keep your proof of purchase for any warranty claims.

	Majestic SVE 337P Digital Alarm Clock with Time Projection - User Manual Comprehensive user manual for the Majestic SVE 337P digital alarm clock, featuring dual alarms, time projection, and USB charging. Includes setup, operation, safety warnings, specifications, and warranty information.
	Majestic DAB 843 Digital DAB/DAB+/FM Radio with Alarm - User Manual Comprehensive user manual for the Majestic DAB 843 digital radio. Learn about its features, operation, safety instructions, DAB/FM tuning, alarm settings, and technical specifications.
	MAJESTIC VFR36C Vent Free Firebox Owner's Manual Comprehensive owner's manual for the MAJESTIC VFR36C Vent Free Firebox. Includes product specifications, minimum hearth dimensions, technical information, factory and field-installed options, and accessory details from Monessen Hearth Systems Co.
	Majestic SVE 236 WI: Manuale di Istruzioni e Caratteristiche Manuale d'istruzioni completo per la sveglia digitale Majestic SVE 236 WI. Dettagli su impostazione ora e allarmi, funzione snooze, ricarica wireless Qi, porta USB, regolazione luminosità e risoluzione problemi. Prodotto da New Majestic S.p.A.
	Majestic VF36C Vent Free Firebox Owner's Manual and Specifications Detailed owner's manual and product specifications for the Majestic VF36C Vent Free Firebox, including dimensions, technical information, factory-installed options, and field-installed accessories. Provided by Appliance Factory Parts.
	Manuale Utente Majestic Sileno 29 Guida completa al telefono cellulare Majestic Sileno 29, che copre le istruzioni per l'uso, le specifiche tecniche, la sicurezza e la risoluzione dei problemi.



[pdf]

may LIBRETTO RS 137 New Majestic Libretto newmajestic sites default files |||

RS 137 RADIO SVEGLIA CON PROIEZIONE DISPLAY LED MANUALE D ISTRUZIONI LEGGERE ATTENTAMENTE IL SEGUENTE MANUALE D ISTRUZIONI PRIMA DELL UTILIZZO DELL APPARECCHIO E CONSERVARLO PER UN EVENTUALE UTILIZZO FUTURO. AVVERTENZE DI SICUREZZA Per un utilizzo sicuro e le massime prestazioni, leggere attentame...

lang:it score:24 filesize: 644.1 K page_count: 12 document date: 2023-11-21



[pdf] Declaration of Conformity

4 MSimonetti DICHIARAZIONE CONFORMITA RS 137 produz 01 2024 New Majestic newmajestic sites default files |||

Dichiarazione di Conformit UE EU Declaration of Conformity DoC Nome del fabbricante / Company name: New MAJESTIC S.p.A. Indirizzo postale / Postal address: Via Rossi Martini, 41 CAP e Citt / Postcode and Town/City: 26013, Crema CR - Italy Telefono / Telephone: 39 0373 / 31415 Indirizz...

lang:it score:23 filesize: 98.95 K page_count: 1 document date: 2024-03-25



[pdf] Declaration of Conformity

6 MSimonetti DICHIARAZIONE CONFORMITA RS 137 produz 07 2024 New Majestic 0 newmajestic sites default files |||

Dichiarazione di Conformit UE EU Declaration of Conformity DoC Nome del fabbricante / Company name: New MAJESTIC S.p.A. Indirizzo postale / Postal address: Via Rossi Martini, 41 CAP e Citt / Postcode and Town/City: 26013, Crema CR - Italy Telefono / Telephone: 39 0373 / 31415 Indirizz...

lang:it score:22 filesize: 99.06 K page_count: 1 document date: 2024-09-12

