

Hape E3021

Hape Four-Stage Rocket Ship Model E3021 Instruction Manual

For Model: E3021

INTRODUCTION

Thank you for choosing the Hape Four-Stage Rocket Ship. This wooden space toy is designed to provide an engaging and educational play experience for children aged 3 years and older. It simulates life aboard a space shuttle or station, featuring multiple operational zones and interactive accessories. This manual provides essential information for the setup, operation, maintenance, and care of your product.

SETUP AND ASSEMBLY

The Hape Four-Stage Rocket Ship requires assembly. Please follow the detailed assembly instructions and diagrams provided in the product packaging. Ensure all components are present before beginning assembly.

Included Components:

- Rocket Ship Structure (multiple wooden pieces)
- Radar
- Space Rover
- Solar Panel
- Planetary Landing Base
- Figures (Astronauts, Alien)
- Elevator mechanism (wheel and string)
- Various small accessories

During assembly, ensure all connections are secure. Adult supervision is recommended for assembly.

Designed to resemble actual space shuttles, complete with various functional areas

Multiple accessories enhance the flexibility of play



Detailed wall printing enhances the realism of the scenario

Made with durable, child-safe paint finish and solid wood construction

Image: Overview of the rocket ship's functional areas and included accessories, illustrating the detailed design and interactive elements.

OPERATING INSTRUCTIONS

The Hape Four-Stage Rocket Ship encourages imaginative play and exploration. Here's how to interact with its key features:

Elevator Operation:

- Locate the manual elevator wheel and string mechanism.
- Turn the wheel to raise or lower the elevator cage between the rocket's four stages.
- Place figures or small accessories inside the elevator for transport.

Accessory Interaction:

- Position the radar, space rover, solar panel, and planetary landing base in various areas around the rocket or on the landing base to create different play scenarios.
- Use the astronaut figures and alien figure to populate the rocket and engage in role-playing adventures.
- The realistic details on the rocket's walls provide visual cues for different sections, such as control

rooms, living quarters, and laboratories.



Image: A child interacting with the assembled rocket ship, demonstrating its scale and play potential with figures and accessories.

MAINTENANCE

Proper care will ensure the longevity of your Hape Four-Stage Rocket Ship.

Cleaning:

- Wipe the wooden surfaces with a slightly damp cloth.
- Do not use harsh chemicals, abrasive cleaners, or immerse the toy in water.
- Dry thoroughly after cleaning.

Storage:

- Store the toy in a dry place, away from direct sunlight and extreme temperatures, to prevent warping or fading of the wood.
- Keep small accessories in a designated container to prevent loss.

Safety Check:

- Periodically inspect the toy for any signs of damage, loose parts, or splinters.
- Discontinue use if any significant damage is found and contact customer support for guidance.

TROUBLESHOOTING

If you encounter any issues with your Hape Four-Stage Rocket Ship, please refer to the following common

solutions:

Elevator Not Moving Smoothly:

- Check if the string is tangled or obstructed.
- Ensure the elevator cage is properly aligned within its tracks.

Missing or Damaged Parts:

- Carefully review the included components list against your product.
- If parts are missing or damaged upon arrival, please contact Hape customer support immediately.

SPECIFICATIONS

Feature	Detail
Brand	Hape
Model Name	E3021
Age Range	3 years to 99 years
Color	Multicolor
Theme	Space
Material	Wood
Power Source (Accessory)	Solar energy (refers to included solar panel accessory)
Included Components	Radar, Space Rover, Solar Panel, Planetary Landing Base, Figures, Alien
Item Dimensions (L x W x H)	47.8 x 47.8 x 74 cm (18.8 x 18.8 x 29.1 inches)

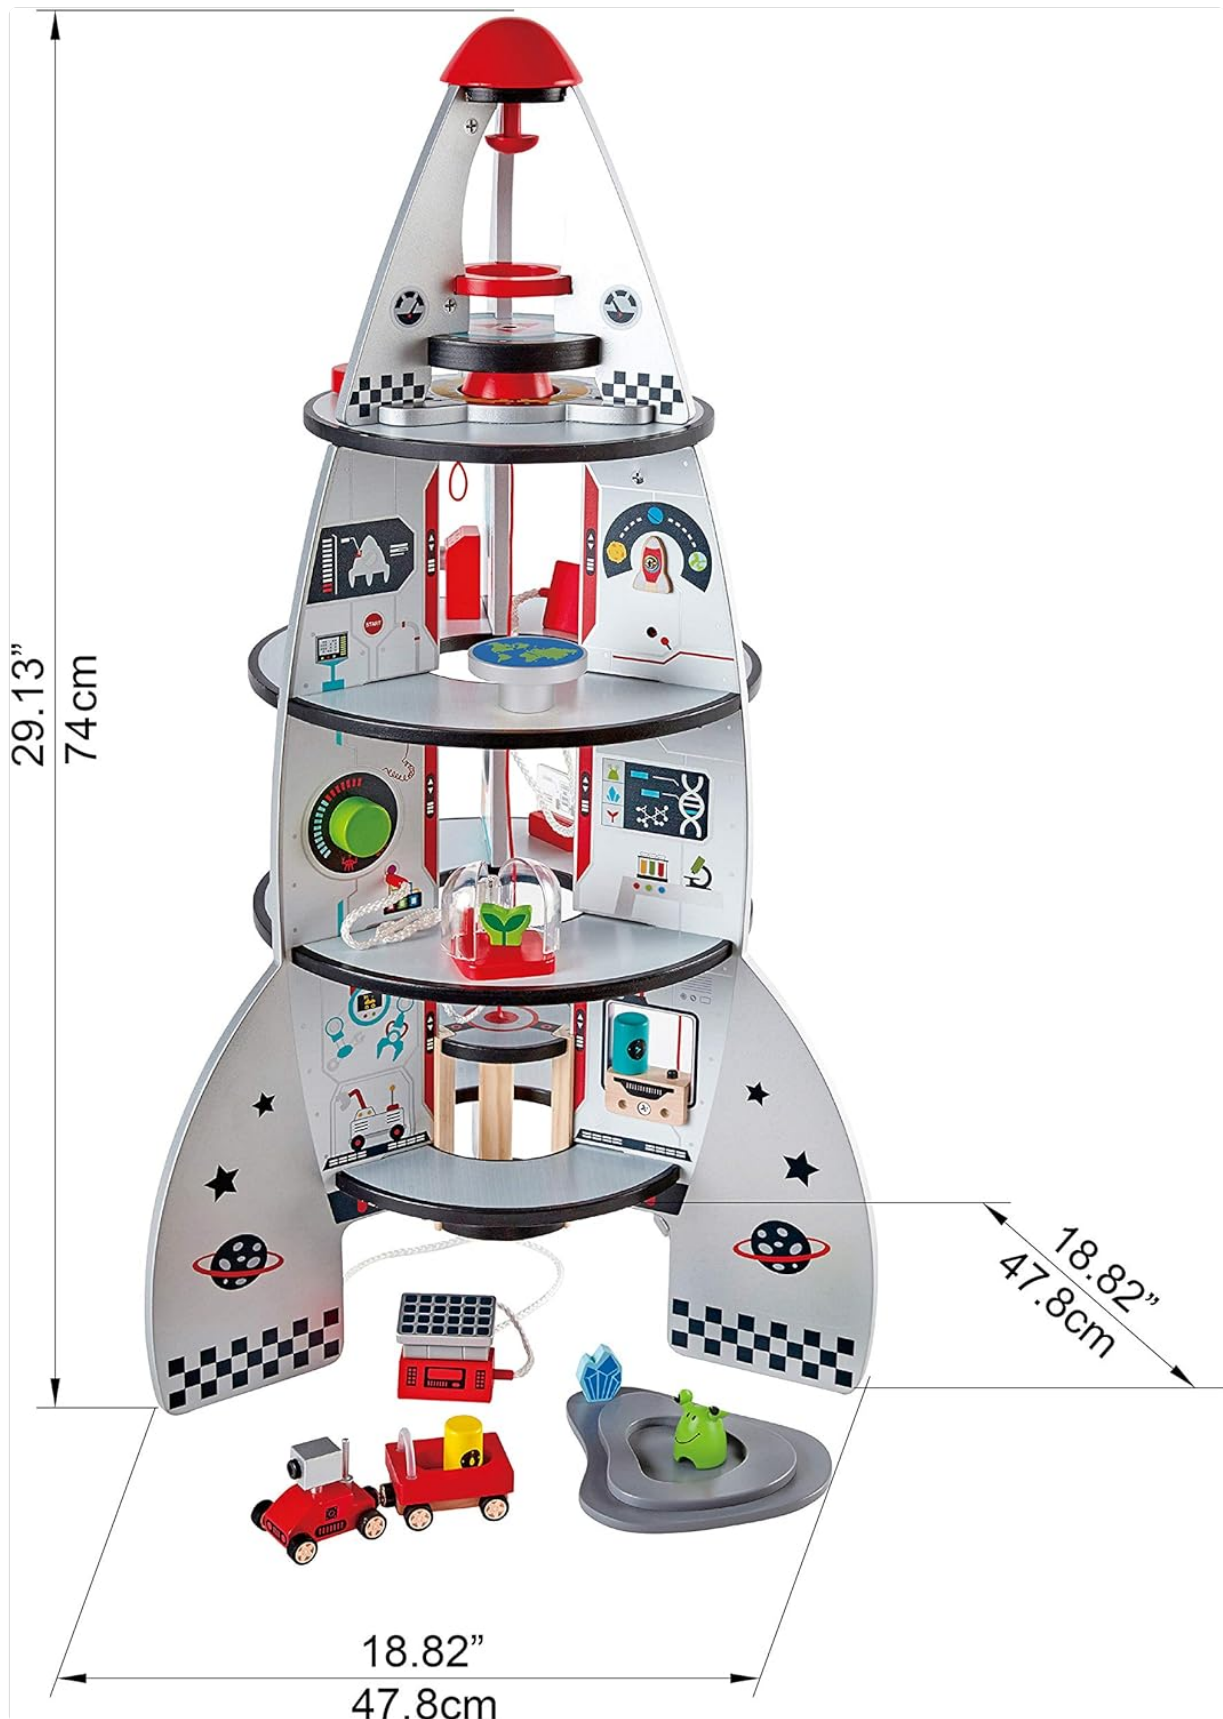


Image: Dimensional drawing of the rocket ship, indicating its height and base measurements.

WARRANTY INFORMATION

Hape products are manufactured to high-quality standards. This product is covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included in your product packaging or visit the official Hape website for detailed warranty terms and conditions.

CUSTOMER SUPPORT

For further assistance, questions, or to report any issues not covered in this manual, please contact Hape customer service. Contact information can typically be found on the Hape official website or on the product packaging.

Please have your product model number (E3021) and purchase information ready when contacting support.