

VersionTECH. HF01B

VersionTECH. Portable Handheld Fan User Manual

Brand: VersionTECH. | Model: HF01B

1. INTRODUCTION

Thank you for choosing the VersionTECH. Portable Handheld Fan. This device is designed to provide powerful and portable cooling, suitable for various personal and outdoor uses. Its compact, foldable design and rechargeable battery make it an ideal companion for travel, office, or any situation requiring a refreshing breeze. Please read this manual carefully before using the fan to ensure proper operation and maintenance.

2. PACKAGE CONTENTS

Upon opening the package, please verify that all the following items are included:

- 1 x VersionTECH. Portable Handheld Fan
- 1 x USB Charging Cable (Micro USB)
- 1 x Metal Clip
- 1 x User Manual



Packing List

Handheld Fan*1

USB Cable*1

Manual*1

Lanyard*1

Figure 2.1: Contents of the VersionTECH. Portable Handheld Fan package.

3. PRODUCT FEATURES

- **Powerful Airflow:** Equipped with a high-effective brushless motor and 6 fan blades, providing strong wind up to 3m distance.
- **Adjustable Speed Levels:** Three distinct speed settings (Low, Medium, High) for customized cooling.
- **Foldable & Multipurpose Design:** The fan can fold up to 180°, allowing for handheld, tabletop, or clip-on use.
- **Long-lasting Battery:** Integrated 4000mAh rechargeable battery offers extended operation time.
- **Portable & Lightweight:** Compact dimensions (1"D x 4.06"W x 8.07"H) and light weight (7.83 ounces) for easy carrying.
- **Safe Design:** Features a protective cover to prevent accidental contact with fan blades.
- **USB Rechargeable:** Conveniently charges via Micro USB from various power sources.



Figure 3.1: Illustration of the fan's 6-blade design and brushless motor for enhanced airflow.



Figure 3.2: The fan's protective cover ensures safety by preventing direct contact with the blades.

4. SETUP AND CHARGING

4.1 Initial Charge

Before first use, it is recommended to fully charge the fan. The fan comes with a built-in 4000mAh rechargeable battery.

1. Locate the Micro USB charging port on the fan's handle.
2. Connect the provided USB charging cable to the fan's port.
3. Connect the other end of the USB cable to a compatible USB power source (e.g., computer USB port, AC adapter, car charger, power bank).
4. A charging indicator light will illuminate (typically red) during charging. The light will change color (typically green) once fully charged.

A full charge typically takes approximately 3 hours. The battery life varies by speed setting: up to 14 hours on low speed, 8 hours on medium speed, and 4 hours on high speed.

Type-C Charging



Figure 4.1: Connecting the fan to a power source for charging.



Figure 4.2: Battery life duration based on fan speed.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off and Speed Adjustment

The fan features a single power button for controlling its functions.

1. **To Power On:** Press the power button once to turn on the fan at the lowest speed setting (Speed 1).
2. **To Adjust Speed:** Press the power button repeatedly to cycle through the speed settings:
 - 1st Press: Speed 1 (Soft wind, approx. 3m/s)
 - 2nd Press: Speed 2 (Strong wind, approx. 6m/s)
 - 3rd Press: Speed 3 (High wind, approx. 9m/s)
3. **To Power Off:** After Speed 3, pressing the button again will turn the fan off. Alternatively, you can long press the power button for approximately 3 seconds at any speed to turn off the fan directly.

3 Adjustable Speeds

Long Press to Close the Fan



Speed 1 Soft wind 3m/s



Speed 2 Strong wind 6m/s



Speed 3 High wind 9m/s



Figure 5.1: Fan speed settings and corresponding wind strength.



Long Press for **3s**
to close the fan quickly

Figure 5.2: Long press the power button to quickly turn off the fan.

5.2 Usage Modes

The fan's 180° foldable handle allows for versatile use:

- **Handheld Mode:** Keep the handle extended for portable, on-the-go cooling.
- **Tabletop Mode:** Fold the handle back to create a stable base, allowing the fan to stand on a flat surface.
- **Clip-on Mode:** Attach the included metal clip to the fan's handle, then clip it onto objects like sun umbrellas, desks, or strollers for hands-free operation.



Figure 5.3: The fan's foldable design for portability and versatile use.

Summer Breeze Bliss



Figure 5.4: Fan used in tabletop mode.

Figure 5.5: Fan used in clip-on mode with an umbrella.

6. CARE AND MAINTENANCE

To ensure the longevity and optimal performance of your fan, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the fan's exterior. For stubborn dirt, a slightly damp cloth can be used, but ensure no water enters the fan's internal components. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To preserve battery life, avoid fully discharging the battery frequently. Recharge the fan when the airflow becomes noticeably weaker. Do not expose the fan to direct sunlight for prolonged periods, especially during charging.
- **Avoid Obstructions:** Ensure the fan's intake and exhaust vents are clear of dust and debris to maintain proper airflow.

7. TROUBLESHOOTING

If you encounter issues with your VersionTECH. Portable Handheld Fan, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan fully.
Weak airflow.	Low battery level; Fan speed set too low; Obstruction in fan blades/vents.	Recharge the fan; Increase the fan speed; Clean any obstructions from the fan blades and vents.
Fan does not charge.	Charging cable is faulty; Power source is not working; Charging port is damaged.	Try a different USB cable; Connect to a different USB power source; Contact customer support if the port appears damaged.
Unusual noise during operation.	Obstruction in fan blades; Fan not placed on a stable surface.	Turn off the fan and check for any foreign objects in the blades; Ensure the fan is on a flat, stable surface.

If the problem persists after attempting these solutions, please refer to the Warranty and Support section for further assistance.

8. SPECIFICATIONS

Feature	Detail
Brand	VersionTECH.
Model Number	HF01B
Color	Black
Dimensions (Folded)	1"D x 4.06"W x 8.07"H
Item Weight	7.83 ounces
Power Source	Battery Powered (Rechargeable)
Battery Capacity	4000mAh
Charging Time	Approx. 3 hours
Number of Speed Levels	3
Noise Level	40 dB
Number of Blades	6
Connector Type	Micro USB
Material	Plastic
Indoor/Outdoor Usage	Indoor, Outdoor

9. SAFETY INFORMATION

- Do not place the fan in direct sunlight for prolonged periods, especially when charging.
- Keep the fan away from water or other liquids. Do not operate with wet hands.
- Do not insert fingers or any objects into the fan grille while it is operating.
- This fan is not a toy. Keep out of reach of small children.
- Use only the provided USB cable or a certified equivalent for charging.
- Do not attempt to disassemble or repair the fan yourself. Contact qualified personnel for service.

10. WARRANTY AND SUPPORT

VersionTECH. products are designed for reliability and performance. This product is covered by a standard return policy, typically allowing returns or replacements within 30 days of purchase. For specific warranty details, technical support, or any inquiries regarding your fan, please refer to the contact information provided with your purchase or visit the official VersionTECH. brand store online.

Note: Video content was not available in the provided product data for embedding in this manual.

© 2025 VersionTECH. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why does the charging light on my VersionTECH HF-308 handheld fan turn orange instead of green after

charging for over 4 hours?

According to the VersionTECH HF01B (and similar models like the HF-308) manual, a full charge typically takes approximately 3 hours. The charging indicator light should illuminate red during charging and change to green once...

[Read full answer](#)