

[Manuals.plus](#) /

› [Fagor](#) /

› Fagor AF-600EC Air Fryer User Manual

Fagor AF-600EC

Fagor AF-600EC Air Fryer

USER MANUAL

Introduction

This user manual provides comprehensive instructions for the safe and efficient operation of your Fagor AF-600EC Air Fryer. Please read this manual thoroughly before first use and keep it for future reference. This appliance is designed for healthy cooking, utilizing hot air circulation to prepare food with significantly less oil.

Important Safety Information

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Do not immerse the appliance, cord, or plug in water or other liquid.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not use the appliance if the plug, the mains cord, or the appliance itself is damaged.
- Keep the appliance and its cord out of reach of children.
- Do not let the mains cord hang over the edge of a table or worktop.
- Do not place the appliance against a wall or against other appliances. Leave at least 10 cm free space on the back and sides and 10 cm free space above the appliance.
- Do not place anything on top of the appliance.
- During hot air frying, hot steam is released through the air outlet openings. Keep your hands and face at a safe distance from the steam and from the air outlet openings.
- The surfaces may become hot during use. Do not touch hot surfaces. Use handles or knobs.
- Unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool down before putting on or taking off parts.

Product Overview

Familiarize yourself with the components of your Fagor AF-600EC Air Fryer.



Figure 1: Front view of the Fagor AF-600EC Air Fryer, showcasing its sleek black design and digital control panel with time and temperature display, along with touch buttons for menu, heat, power, and temperature/timer adjustments.

1. **Digital Control Panel:** Features a clear display for time and temperature, along with intuitive touch controls.

2. **Air Inlet:** Located at the top of the unit for air circulation.
3. **Air Outlet:** Located at the back of the unit for hot air release.
4. **Frying Basket:** Removable basket for holding food during cooking.
5. **Basket Handle:** Ergonomic handle for safe removal of the frying basket.
6. **Power Cord:** For connecting the appliance to a power outlet.

Setup

1. **Unpacking:** Carefully remove the air fryer and all packaging materials. Retain packaging for future storage or transport.
2. **Initial Cleaning:** Before first use, clean the frying basket and pan with hot water, dish soap, and a non-abrasive sponge. Wipe the inside and outside of the appliance with a damp cloth. Ensure all parts are completely dry before use.
3. **Placement:** Place the air fryer on a stable, horizontal, and heat-resistant surface. Ensure there is at least 10 cm of free space around the back, sides, and above the appliance for proper ventilation. Do not place it directly against a wall or under cabinets.
4. **Power Connection:** Plug the power cord into a grounded wall outlet.

Operating Instructions

The Fagor AF-600EC Air Fryer features a digital control panel for easy operation.



Figure 2: The Fagor AF-600EC Air Fryer with its removable basket pulled out, demonstrating how food, such as french fries, is placed inside for cooking. The basket features a convenient handle for safe removal.

1. Preparation:

- Pull the frying basket out of the appliance using the handle.
- Place the ingredients into the basket. Do not exceed the MAX indication or the recommended capacity of 0.6 kg for food.
- Slide the frying basket back into the air fryer. Ensure it clicks securely into place.

2. **Power On:** Press the power button on the digital control panel to turn on the appliance.
3. **Setting Temperature and Time:**
 - Use the temperature adjustment buttons (usually '+' and '-') to set the desired cooking temperature between 80°C and 210°C.
 - Use the time adjustment buttons (usually '+' and '-') to set the desired cooking time, up to 30 minutes.
 - The digital display will show the selected temperature and time.
4. **Starting Cooking:** Once temperature and time are set, the air fryer will automatically begin the cooking process after a few seconds, or you may press a start button if available (refer to specific icon on panel).
5. **Shaking Ingredients (Optional):** For some recipes, especially fries, it is recommended to shake the ingredients halfway through the cooking time. To do this, pull the basket out, shake it gently, and then slide it back in. The air fryer will resume cooking.
6. **End of Cooking:** When the set cooking time has elapsed, the air fryer will emit an audible signal and automatically shut off.
7. **Removing Food:** Carefully pull out the frying basket. Use tongs to remove the cooked food. Do not turn the basket upside down, as excess oil may drip onto the food.
8. **Power Off:** Press the power button to turn off the appliance if it hasn't automatically shut off, and unplug it from the wall outlet.

Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

- **Before Cleaning:** Always unplug the appliance and allow it to cool down completely before cleaning.
- **Frying Basket and Pan:** The frying basket and pan are non-stick coated. Clean them with hot water, dish soap, and a non-abrasive sponge. For stubborn residue, soak them in hot water with some dish soap for about 10 minutes. They are generally dishwasher safe, but hand washing is recommended to preserve the non-stick coating.
- **Appliance Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaning agents or scouring pads.
- **Interior:** Clean the inside of the appliance with a damp cloth. If necessary, remove food residues from the heating element with a cleaning brush.
- **Storage:** Ensure all parts are clean and dry before storing the appliance. Store the air fryer in a cool, dry place.

Troubleshooting

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
The air fryer does not work.	The appliance is not plugged in.	Plug the mains plug into a grounded wall socket.
	The timer has not been set.	Set the timer to the required preparation time.
Food is not cooked evenly.	Some types of food need to be shaken halfway through the preparation time.	Shake the basket halfway through the cooking process.

Problem	Possible Cause	Solution
White smoke comes out of the appliance.	Fat residues from previous use are burning.	Clean the basket and pan thoroughly after each use.
	The basket contains too much oil.	Wipe off excess oil from ingredients before placing them in the basket.

Specifications

Feature	Detail
Model Number	AF-600EC (965010008)
Power	1300 W
Capacity	2.2 Liters (up to 0.6 kg food)
Voltage	230 Volts
Temperature Range	80°C - 210°C
Timer	Up to 30 minutes
Dimensions (L x W x H)	26.5 x 25 x 33 cm
Weight	2.88 kg
Material	Plastic

Warranty and Support

Fagor products are manufactured to high-quality standards. In the unlikely event of a defect due to faulty materials or workmanship, your product is covered by the manufacturer's warranty from the date of purchase. Please retain your proof of purchase for any warranty claims.

For technical support, service, or spare parts, please contact Fagor customer service. Contact details can typically be found on the official Fagor website or on the product packaging.

For more information, visit the official Fagor store:[Fagor Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B01HHY4USY>

More documents and user manuals: <https://manuals.plus/>