

[manuals.plus](#) /› [Hape](#) /› [Hape Play Kitchen \(Model E8056\) - Instruction Manual](#)**Hape E8056**

Hape Play Kitchen (Model E8056) - Instruction Manual

1. INTRODUCTION

This instruction manual provides essential information for the safe and proper assembly, operation, and maintenance of your Hape Play Kitchen (Model E8056). Designed for toddlers aged 36 months to 10 years, this wooden playset encourages imaginative pretend play in a safe and engaging environment. Please read this manual thoroughly before use and retain it for future reference.

Safety Note: This wooden toy kitchen set is 100% safe and non-toxic, designed for children ages 3 and up.

2. WHAT'S IN THE Box

Your Hape Play Kitchen set includes the following components:

- Wooden Kitchen Playset (main unit with stovetop, sink, and oven)
- 2 x Plates
- 2 x Forks
- 2 x Knives
- 1 x Pan
- 1 x Pot with Lid
- 1 x Mixing Spoon
- 1 x Spatula
- 1 x Salt Shaker
- 1 x Pepper Shaker


The playset is designed to be easy-to-assemble and space-saving, providing a complete kitchen experience for young children.

3. ASSEMBLY INSTRUCTIONS

The Hape Play Kitchen is designed for easy assembly. Please follow the detailed instructions and diagrams provided in the separate assembly guide included with your product. A Phillips head screwdriver may be required for some steps. Ensure all parts are securely fastened before allowing children to play.

Kid-Sized Kitchen

22.75"

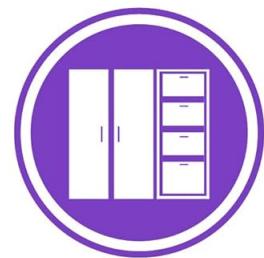

Space-Saver



Easy Assembly

Figure 1: The Hape Play Kitchen is designed to be kid-sized, space-saving, and easy to assemble. Dimensions are approximately 22.75 inches in height and 17 inches in width.

4. OPERATING INSTRUCTIONS

The Hape Play Kitchen offers various interactive features for imaginative play:

- **Stovetop:** Place pots and pans on the stovetop burners. The knobs can be turned to simulate cooking.
- **Sink:** Use the sink and faucet for pretend washing of dishes or food. The faucet handles can be turned.

- **Oven:** The oven door opens and closes, allowing for pretend baking.
- **Storage:** Cabinets and shelves provide space to store the included accessories and other play food items.
- **Accessories:** Utilize the plates, cutlery, pan, pot, mixing spoon, spatula, and salt/pepper shakers to enhance the cooking experience.



Figure 2: The Hape Play Kitchen features a stovetop, sink, oven, and a variety of wooden accessories for immersive pretend play.

13 Kitchen Accessories



Figure 3: The playset includes 13 kitchen accessories and features magnetic closures on the oven door for realistic play.

Video 1: This video demonstrates various Hape wooden play food and kitchen accessories, including items that complement the Hape Play Kitchen. It showcases children engaging in pretend cooking, washing vegetables, and using kitchen appliances like a coffee maker and toaster.

5. MAINTENANCE

To ensure the longevity and hygiene of your Hape Play Kitchen:

- Wipe down all surfaces with a damp cloth and mild soap as needed.
- Avoid using abrasive cleaners or harsh chemicals, as these can damage the wood and paint finish.
- Ensure the playset is completely dry before storing or allowing continued play.
- Store in a dry place away from direct sunlight or extreme temperatures to prevent warping or fading.



100% Safe



Premium Wood



Easy Clean



Figure 4: The kitchen is made from premium wood, ensuring durability and easy cleaning for lasting play.

6. TROUBLESHOOTING

If you encounter any issues with your Hape Play Kitchen, please consider the following:

- Loose Parts:** Periodically check all screws and fasteners to ensure they are tight. Tighten any loose components with a Phillips head screwdriver.
- Damaged Parts:** If any part of the playset becomes damaged, discontinue use immediately to prevent injury. Contact customer support for replacement parts or further assistance.
- Missing Accessories:** Verify the contents against the "What's in the Box" section. If items are missing, contact customer support.

7. SPECIFICATIONS

- **Product Dimensions:** 21.6 x 27.8 x 12.6 inches
- **Item Weight:** 1 pounds
- **Item Model Number:** E8056
- **Manufacturer Recommended Age:** 36 months - 10 years
- **Manufacturer:** Hape
- **Release Date:** April 1, 2019

8. WARRANTY AND SUPPORT

For warranty information, replacement parts, or any other support inquiries, please refer to the contact information provided on the product packaging or visit the official Hape website. Ensure you have your product model number (E8056) and proof of purchase available when contacting support.

Related Documents - E8056

	<p><u>Hape Busy City Rail Set - Toy Train Track Assembly Instructions and Warnings</u></p> <p>Comprehensive guide to the Hape Busy City Rail Set, including assembly notes, multilingual warnings about choking hazards, manufacturer details, and a visual description of the toy train track layout. Suitable for children aged 3 and up.</p>
	<p><u>Hape Red Excavator Toy (E8207) - Sand & Garden Play, Ages 24 Months+</u></p> <p>Information about the Hape Red Excavator toy (Model E8207), designed for sand and garden play for children aged 24 months and older. Complies with European and American safety standards EN 71 and ASTM F963. Includes manufacturer details for TOYNAMICS IBERIA, S.L.U.</p>
	<p><u>BonoboBox Baby Toys for 9 Months: Rattles, Books, and Teethers</u></p> <p>This brochure from BonoboBox showcases a selection of developmental toys suitable for babies aged 9 months. It features rattles, a bath book, a wooden insect book, geo rattles, and teething toys, highlighting their benefits for coordination, sensory development, and learning.</p>



[Brighten Up Toys, Games, Puzzles Catalog 2025/2026](#)

Explore the Brighten Up Toys, Games, and Puzzles catalog for 2025/2026, featuring a wide selection of educational and fun products for children of all ages, including board games, puzzles, STEM kits, arts and crafts, and more.