

ELECTMALL BOX 915WL

ELECTMALL BOX 915WL Clear Storage Boxes - Instruction Manual

Model: 915WL | Brand: ELECTMALL BOX

1. INTRODUCTION

Thank you for choosing the ELECTMALL BOX 915WL Clear Storage Boxes. This manual provides essential information for the proper setup, operation, and maintenance of your new storage containers. These versatile clear plastic boxes are designed for organizing various small items, including arts and crafts supplies, beads, and tackle.

2. PRODUCT FEATURES

- **Clear Plastic Construction:** Made from high-quality, transparent plastic for easy identification of contents.
- **Compact and Portable:** Each box measures approximately 17.8cm x 9.4cm x 3cm (7" x 3.7" x 1.18"), ideal for transport and storage.
- **Secure Closure:** Features a hinged lid designed to keep contents secure.
- **Multi-purpose Use:** Suitable for organizing arts and crafts supplies, beads, fishing tackle, small hardware, and other small items.
- **Quantity:** This package includes 5 individual storage boxes.

3. SETUP

The ELECTMALL BOX 915WL storage boxes require minimal setup.

1. **Unpack:** Carefully remove all 5 storage boxes from their packaging.
2. **Inspect:** Check each box for any signs of damage during transit. If any damage is found, refer to the Warranty and Support section.
3. **Initial Cleaning:** Before first use, it is recommended to wipe down the boxes with a damp cloth and mild soap, then dry thoroughly. This removes any manufacturing residues.



Image 1: A single ELECMALL BOX 915WL clear plastic storage box. The box is rectangular with a translucent, hinged lid. A small, integrated tab is visible on one end, designed for easy handling or hanging. The transparent material allows for visibility of contents.

4. OPERATING INSTRUCTIONS

Using your ELECMALL BOX 915WL storage boxes is straightforward.

1. **Opening the Box:** Gently lift the front edge of the lid until it unlatches from the base. The lid is hinged and will swing open.
2. **Storing Items:** Place your desired items, such as beads, craft supplies, or small tools, inside the box. Ensure items fit without forcing the lid closed.
3. **Closing the Box:** Align the lid with the base and press down firmly on the front edge until you hear or feel a click, indicating the lid is securely latched.
4. **Transport:** The integrated tab on one end can be used for easier gripping or to attach a small clip for transport, if desired.

5. MAINTENANCE

Proper care will extend the life of your storage boxes.

- **Cleaning:** Clean the boxes with a soft cloth, warm water, and a mild detergent. Avoid abrasive cleaners or scouring pads, as these can scratch the plastic.
- **Drying:** Ensure the boxes are completely dry before storing items, especially if the contents are sensitive to moisture.
- **Storage Conditions:** Store the boxes away from direct sunlight and extreme temperatures to prevent material degradation or warping.
- **Avoid Overfilling:** Do not overfill the boxes, as this can stress the hinges and latches, potentially leading to damage.

6. TROUBLESHOOTING

Most issues with these storage boxes are minor and easily resolved.

- **Lid does not close securely:**
 - Check if the box is overfilled. Remove some contents if necessary.
 - Ensure no items are obstructing the latch mechanism.
 - Verify the lid is properly aligned with the base before pressing to close.
- **Box appears scratched or cloudy:**
 - This can occur from abrasive cleaning or rough handling. Minor scratches are cosmetic and do not affect functionality.
 - For persistent cloudiness after cleaning, ensure all detergent residue has been rinsed off.

7. SPECIFICATIONS

Feature	Detail
Model Number	915WL
Material	High-Quality Plastic
Item Dimensions (L x W x H)	17.8 cm x 9.4 cm x 3 cm (7" x 3.7" x 1.18")
Item Weight (per box)	Approximately 84 grams (2.96 oz)
Package Quantity	5 PCS
Color	Clear / Transparent

8. WARRANTY AND SUPPORT

Specific warranty details for the ELECMALL BOX 915WL Clear Storage Boxes are not provided in this manual. For information regarding warranty coverage, returns, or customer support, please refer to the retailer or platform where the product was purchased. You may also visit the official ELECMALL BOX website or contact their customer service directly for assistance.

Please retain your purchase receipt as proof of purchase for any warranty claims or support inquiries.

