

Telefunken RC4875

Telefunken RC4875 TV Remote Control Instruction Manual

Model: RC4875

1. INTRODUCTION

This manual provides instructions for the proper use and maintenance of your Telefunken RC4875 TV Remote Control. This genuine remote control is designed for specific Telefunken TV models and also replaces the RC4870 model. It features an ergonomic design for comfortable handling and requires no programming for immediate use.



Image 1: The Telefunken RC4875 TV Remote Control. This image displays the front view of the remote control, highlighting its button layout and ergonomic shape.

2. SETUP

2.1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.

Note: This remote control requires no programming. Once batteries are installed, it is ready for use with compatible Telefunken TV models.

3. OPERATING INSTRUCTIONS

The Telefunken RC4875 remote control uses infrared (IR) technology. Ensure a clear line of sight between the remote control and your television's IR receiver for optimal performance. The maximum operating range

is approximately 10 meters.

3.1. Basic Functions

- **Power Button:** Press to turn the TV on or off.
- **Volume Up/Down:** Adjusts the sound level.
- **Channel Up/Down:** Changes the TV channel.
- **Number Buttons (0-9):** Directly input channel numbers.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Used to navigate menus and confirm selections.
- **Menu Button:** Accesses the TV's main menu.
- **Source/Input Button:** Selects different input sources (e.g., HDMI, AV).

4. MAINTENANCE

4.1. Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries simultaneously with new alkaline batteries of the same type (AAA).

4.2. Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. Do not use liquid cleaners, abrasive materials, or solvents, as these may damage the remote control's finish or internal components.

5. TROUBLESHOOTING

- **Remote control not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the TV's IR receiver.
 - Point the remote control directly at the TV's IR receiver.
- **Limited range or intermittent response:**
 - Ensure batteries are fresh.
 - Check for strong light sources (e.g., direct sunlight, fluorescent lights) that might interfere with the IR signal.
 - Reduce the distance between the remote control and the TV.

6. SPECIFICATIONS

Feature	Detail
Brand	Telefunken
Model Number	RC4875
Connectivity Technology	Infrared

Compatible Devices	Television
Controller Type	Button Control
Maximum Range	10 Meters
Battery Description	Alkaline
Special Feature	Ergonomic
Part Number	REMOTERC4875
Country of Origin	Turkey