

## SAMI RS 2912

# Sami RS 2912 AM/FM Pocket Radio User Manual

Model: RS 2912

## INTRODUCTION

### Product Overview

The Sami RS 2912 is a compact, pocket-sized AM/FM transistor radio designed for portable listening. It features a built-in speaker, a convenient belt clip for easy carrying, and includes earphones for private listening. The radio operates on two AA batteries (not included) and is equipped with a telescopic antenna to enhance signal reception.

This manual provides detailed instructions for the proper setup, operation, and maintenance of your Sami RS 2912 radio, ensuring optimal performance and longevity.



Image: Front view of the Sami RS 2912 AM/FM pocket radio, showing the tuning dial, power indicator, and speaker grille.

## SETUP

---

### 1. Battery Installation

1. Locate the battery compartment cover on the back of the radio.
2. Slide or lift the cover to open the compartment.
3. Insert two (2) AA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.

4. Replace the battery compartment cover securely.



Image: Back view of the Sami RS 2912 radio, highlighting the battery compartment cover and the integrated belt clip.

## 2. Connecting Earphones

To listen privately, plug the included earphones into the 3.5mm auxiliary jack located on the side of the radio. Inserting earphones will automatically mute the built-in speaker.

## 3. Antenna Adjustment

For optimal AM/FM reception, extend the telescopic antenna fully. For AM reception, rotating the radio itself may also improve signal quality. For FM, adjusting the angle and length of the antenna is recommended.



Image: Front view of the Sami RS 2912 radio with its telescopic antenna fully extended for improved reception.

## 4. Using the Belt Clip

The integrated belt clip on the back of the radio allows for convenient attachment to a belt, pocket, or strap, making the radio easy to carry while on the go.

## OPERATING INSTRUCTIONS

---

### 1. Power On/Off

Locate the power switch, typically combined with the volume control. Rotate the dial clockwise to turn the radio on and increase volume. Rotate counter-clockwise until a click is heard to turn the radio off.

### 2. Band Selection (AM/FM)

Use the AM/FM band selector switch, usually located on the side or top of the radio, to choose between Amplitude Modulation (AM) and Frequency Modulation (FM) bands.

### 3. Tuning to a Station

Once the desired band is selected, slowly rotate the tuning dial to scan through available frequencies. The frequency scale on the front of the radio will indicate the current tuning position. Stop when you hear a clear broadcast.

### 4. Volume Control

Adjust the volume by rotating the volume dial (often integrated with the power switch) to your preferred listening level.

## MAINTENANCE

---

### 1. Cleaning

- Wipe the radio's exterior with a soft, dry cloth.
- Do not use liquid cleaners, abrasive pads, or chemical solvents, as these can damage the finish or internal components.

### 2. Battery Care

- Replace batteries when the sound becomes weak or distorted.
- Remove batteries if the radio will not be used for an extended period to prevent leakage and damage.

### 3. Storage

Store the radio in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. Avoid dropping or subjecting the radio to strong impacts.

## TROUBLESHOOTING

---

### Common Issues and Solutions

- **No Power:**

Check if the batteries are inserted correctly with the right polarity. Ensure the batteries are fresh and not depleted.

- **Poor Reception:**

Fully extend the telescopic antenna. Try repositioning the radio or rotating it for better signal. For AM, environmental factors can significantly affect reception.

- **No Sound:**

Ensure the volume is turned up. If earphones are plugged in, check if they are fully inserted and functional. If using the speaker, ensure earphones are unplugged.

## SPECIFICATIONS

Brand	SAMI
Model Number	RS 2912 (Manufacturer Model: 3142)
Color	Silver
Dimensions (Approx.)	10 x 5.5 x 2.5 cm
Connectivity Technology	Auxiliary (3.5mm earphone jack)
Special Features	Belt clip, Telescopic antenna, Pocket radio
Compatible Devices	Devices with 3.5 mm audio jack
Power Source	Requires 2 AA batteries (not included)
Supported Radio Bands	AM, FM
Tuning Technology	Analog
Included Components	Earphones
International Article Code (UPC/EAN)	08435128411254

## WARRANTY AND SUPPORT

Warranty information for the Sami RS 2912 AM/FM Pocket Radio is not provided within this manual. For details regarding warranty coverage, service, or technical support, please refer to the documentation included with your purchase or contact your retailer or the manufacturer directly.



