

Savoy House 5-147-BK

Savoy House Ellijay 3-Light Post Lantern (Model 5-147-BK) Instruction Manual

[Introduction](#) [Safety Information](#) [Package Contents](#) [Setup & Installation](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#) [Support](#)

1. INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your Savoy House Ellijay 3-Light Post Lantern, Model 5-147-BK. Please read all instructions carefully before beginning installation and retain this manual for future reference.

The Savoy House Ellijay 3-Light Post Lantern is an outdoor lighting fixture designed for post-mount installation. It features a black finish and clear glass panels, providing illumination for outdoor spaces.

2. IMPORTANT SAFETY INFORMATION

- **WARNING:** Risk of electric shock. Disconnect power at the fuse box or circuit breaker before installation or servicing.
- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). Consult a qualified electrician if you are unfamiliar with proper electrical wiring connections.
- This fixture is intended for outdoor use and is water resistant. Ensure all connections are properly sealed to prevent water intrusion.
- Do not install this fixture on a surface that is not stable or capable of supporting its weight.
- Use only the specified bulb type and wattage to avoid overheating and potential fire hazards.
- Do not handle the fixture or attempt bulb replacement while power is connected or if the fixture is wet.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation. If any parts are missing or damaged, do not attempt to assemble or install the fixture. Contact customer support for assistance.

- Post Lantern Fixture (Model 5-147-BK)
- Mounting Hardware (screws, wire nuts, etc. - *specific items may vary*)
- Instruction Manual

Note: Light bulbs are typically not included and must be purchased separately.

4. SETUP AND INSTALLATION

Professional Installation Recommended: Due to the nature of electrical wiring and outdoor installation, it is highly recommended to consult a qualified electrician for installation to ensure safety and compliance with local codes.

4.1 Pre-Installation Steps

1. **Turn Off Power:** Locate the circuit breaker or fuse box that supplies power to the installation location and turn off the power. Verify that the power is off using a voltage tester.
2. **Prepare the Post:** Ensure the post where the lantern will be mounted is securely installed and has appropriate wiring extending from it. The post should be standard size for post-mount lanterns.
3. **Unpack Fixture:** Carefully remove the fixture and all parts from the packaging. Lay out all components on a clean, flat surface.

4.2 Mounting the Fixture

1. **Connect Wires:** Connect the fixture's wires to the supply wires from the post.
 - Connect the black wire (hot) from the fixture to the black wire (hot) from the supply using a wire nut.
 - Connect the white wire (neutral) from the fixture to the white wire (neutral) from the supply using a wire nut.
 - Connect the green or bare copper wire (ground) from the fixture to the green or bare copper wire (ground) from the supply using a wire nut.

Ensure all connections are secure and insulated.

2. **Secure Fixture to Post:** Carefully align the base of the lantern fixture with the top of the post. Secure the fixture to the post using the provided mounting screws. Ensure the fixture is stable and level.
3. **Install Glass Panels (if separate):** If the glass panels are not pre-installed, carefully slide them into the designated slots on the fixture frame. Ensure they are seated securely.
4. **Secure Top Section:** Carefully place the top section of the lantern onto the main body. Ensure it sits securely and is properly aligned. Some models may require small screws or clips to fasten the top. Refer to the specific diagrams if provided with your product.



Image 1: Savoy House Ellijay 3-Light Post Lantern (Model 5-147-BK) showing its overall design.



Image 2: Dimensions of the Savoy House Ellijay 3-Light Post Lantern. Height: 17.5 inches, Width: 9 inches.

5. OPERATING INSTRUCTIONS

1. **Install Bulbs:** Before restoring power, screw three (3) incandescent bulbs with a B15D base, up to 60 watts each,

into the sockets. Do not exceed the maximum wattage.

- 2. **Restore Power:** Once the fixture is fully assembled and bulbs are installed, return to the circuit breaker or fuse box and restore power to the circuit.
- 3. **Turn On/Off:** The lantern will operate via the wall switch or external control (e.g., photocell, timer) connected to the circuit.

6. MAINTENANCE

6.1 Cleaning

To clean the fixture, ensure power is off and the fixture is cool. Wipe with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these can damage the finish or glass. Avoid spraying water directly onto the fixture.

6.2 Bulb Replacement

WARNING: Disconnect power at the circuit breaker before replacing bulbs. Allow bulbs to cool completely before touching.

- 1. **Turn Off Power:** Ensure power to the fixture is completely off.
- 2. **Access Bulbs:** To access the bulbs, you may need to carefully lift or unlatch the top section of the lantern. Some models feature a hinged top or removable glass panels. Exercise caution to avoid damaging the glass or frame.
- 3. **Remove Old Bulbs:** Unscrew the old bulbs from their sockets.
- 4. **Install New Bulbs:** Screw in new incandescent bulbs with a B15D base, up to 60 watts each. Do not overtighten.
- 5. **Reassemble Fixture:** Carefully reattach the top section or glass panels, ensuring they are secure.
- 6. **Restore Power:** Restore power at the circuit breaker.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fixture does not light up.	Power is off at the circuit breaker.	Check the circuit breaker and ensure power is on.
	Loose wire connections.	With power off, check wire connections and tighten if necessary.
	Bulb is faulty or not screwed in properly.	Replace bulb or ensure it is fully screwed into the socket.
	Incorrect bulb type or wattage.	Verify bulbs meet specifications (B15D base, max 60W incandescent).
Top section of the lantern does not sit securely.	Misalignment during assembly.	Carefully re-align the top section, ensuring all edges and tabs (if any) are correctly positioned.
	Missing or improperly installed securing clips/screws.	Check for any small screws or clips that may be used to secure the top. Ensure they are installed as per any included diagrams.
	Obstruction preventing full seating.	Inspect for any debris or bent components that might be preventing the top from seating properly.
		If issues persist, contact customer support.

Problem	Possible Cause	Solution
Water inside the fixture.	Improper sealing during installation. Damaged glass or seals.	Ensure all mounting surfaces and wire entries are properly sealed with weather-resistant sealant. Inspect glass panels and seals for cracks or damage. Replace if necessary.

8. SPECIFICATIONS

Model Number:	5-147-BK
Brand:	Savoy House
Color:	Black
Material:	Metal
Style:	Transitional
Fixture Form:	Post Light
Usage:	Outdoor
Power Source:	AC
Light Source:	Incandescent
Number of Lights:	3
Voltage:	110 Volts
Max Wattage (per bulb):	60 Watts
Bulb Base:	B15D
Brightness:	2160 Lumens (Total, assuming 3x 60W incandescent)
Water Resistance:	Water Resistant
Dimensions (L x W x H):	9" x 9" x 17.5"
Item Weight:	5 Pounds

9. WARRANTY INFORMATION

This Savoy House product is covered by a **1-year limited manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from improper installation, accident, misuse, abuse, or unauthorized modifications.

For warranty claims or further details, please contact Savoy House customer support.

10. CUSTOMER SUPPORT

If you have any questions regarding the installation, operation, or maintenance of your Savoy House Ellijay 3-Light Post Lantern, please contact Savoy House customer support. For technical assistance or parts replacement, please have your

model number (5-147-BK) and purchase date available.

Website: www.savoyhouse.com (Note: Specific contact information may be available on the official website)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question