

[Manuals.plus](#) /

› [Synergy Digital](#) /

› Synergy Digital SDCP-C307 Cordless Phone Battery User Manual

Synergy Digital SDCP-C307

Synergy Digital SDCP-C307 Cordless Phone Battery User Manual

Model: SDCP-C307 | Brand: Synergy Digital

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Synergy Digital SDCP-C307 Ni-CD 900 mAh rechargeable cordless phone battery. Please read this manual thoroughly before installation and retain it for future reference.



Image 1.1: Front view of the Synergy Digital SDCP-C307 cordless phone battery.

2. SAFETY INFORMATION

Observe the following safety precautions to prevent injury or damage to the battery and device:

- **DO NOT DISASSEMBLE:** Attempting to disassemble the battery can lead to short circuits, fire, or exposure to hazardous materials.
- **DO NOT DISPOSE OF IN FIRE:** Batteries may explode or leak if disposed of in fire.
- **DO NOT STORE IN HIGH TEMPERATURES:** Avoid storing the battery in temperatures exceeding 60°C (140°F). High temperatures can reduce battery life and pose a safety risk.
- **CHARGE ONLY WITH SPECIFIED CHARGER:** Use only the charger provided with your cordless phone or a compatible charger designed for Ni-CD batteries. Using an incompatible charger can damage the battery or cause overheating.
- **KEEP OUT OF REACH OF CHILDREN:** Batteries can be a choking hazard and contain chemicals that are harmful if ingested.
- **AVOID SHORT CIRCUITS:** Do not allow metal objects to come into contact with the battery terminals.

- **PROPER DISPOSAL:** Dispose of used batteries according to local regulations. Do not discard with household waste.

3. PACKAGE CONTENTS

Your Synergy Digital SDCP-C307 Combo-Pack includes:

- 2 x Synergy Digital SDCP-C307 Ni-CD 900 mAh Cordless Phone Batteries

4. SPECIFICATIONS

Feature	Specification
Model Number	SDCP-C307
Battery Type	Ni-CD (Nickel Cadmium)
Voltage	3.6V
Capacity	900 mAh (Milliamp Hours)
Compatible Devices	Cordless Telephones (e.g., Toshiba FD9859)
Manufacturer	Synergy Digital

5. SETUP AND INSTALLATION

Follow these steps to install the battery in your cordless phone:

1. **Locate the Battery Compartment:** On most cordless phones, the battery compartment is located on the back of the handset. Refer to your phone's original manual if you cannot find it.
2. **Remove the Battery Compartment Cover:** Slide or unclip the cover to open the compartment.
3. **Remove Old Battery (if applicable):** Carefully disconnect the old battery's connector from the phone's socket. Remove the old battery.
4. **Connect New Battery:** Take one Synergy Digital SDCP-C307 battery. Align the battery connector with the socket inside the phone's battery compartment. Gently push the connector in until it clicks securely into place. Ensure the polarity is correct (red wire to red, black wire to black, if visible).



Image 5.1: Close-up view of the battery connector, showing the red and black wires.

5. **Position the Battery:** Place the new battery into the compartment, ensuring it fits snugly without forcing it.
6. **Replace the Cover:** Reattach the battery compartment cover, ensuring it is securely closed.

6. OPERATING INSTRUCTIONS

6.1 Initial Charging

After installing the new battery, place the cordless phone handset on its charging base. For optimal performance, allow the battery to charge continuously for **12-16 hours** before its first use, even if the phone indicates a full charge sooner. This initial charge helps to condition the Ni-CD battery for maximum capacity and lifespan.

6.2 Regular Charging

For daily use, return the handset to the charging base when not in use. Ni-CD batteries do not suffer from memory effect as severely as older battery types, but occasional full discharge and recharge cycles can help maintain performance.

6.3 Battery Life

The battery life will vary depending on usage patterns, phone model, and environmental factors. A fully charged 900 mAh battery typically provides several hours of talk time and multiple days of standby time.

7. MAINTENANCE

- **Cleaning:** Keep the battery terminals and phone charging contacts clean and free of dust or debris. Use a dry, soft cloth for cleaning.
- **Storage:** If storing the battery for an extended period, charge it fully, then remove it from the phone. Store it in a cool, dry place. Recharge the battery every 3-6 months to prevent deep discharge.
- **Disposal:** When the battery reaches the end of its useful life, do not dispose of it in regular household trash. Ni-CD batteries contain cadmium, which is a heavy metal. Recycle the battery at an authorized recycling center or return it to a designated collection point.

8. TROUBLESHOOTING

8.1 Phone Not Turning On After Battery Installation

- **Check Connection:** Ensure the battery connector is firmly seated in the phone's socket.
- **Initial Charge:** Place the handset on the charging base for at least 12-16 hours for the initial charge.
- **Verify Battery Orientation:** Ensure the battery is placed correctly in the compartment.

8.2 Short Battery Life

- **Initial Charge Cycle:** If this is a new battery, ensure the initial 12-16 hour charge cycle was completed.
- **Charging Contacts:** Clean the charging contacts on both the handset and the base with a dry cloth.
- **Battery Age:** All rechargeable batteries have a finite lifespan. If the battery is several years old, it may be time for a replacement.
- **Environmental Factors:** Extreme temperatures can affect battery performance.

8.3 Battery Not Charging

- **Power to Base:** Ensure the charging base is properly plugged into a working power outlet.
- **Handset Placement:** Confirm the handset is correctly seated on the charging base and the charging indicator light (if present) is on.
- **Phone Malfunction:** If other batteries also fail to charge, the issue might be with the phone or charging base,

not the battery.

9. WARRANTY AND SUPPORT

For warranty information or technical support regarding your Synergy Digital SDCP-C307 battery, please contact Synergy Digital directly through their official website or customer service channels. Keep your purchase receipt as proof of purchase.

© 2023 Synergy Digital. All rights reserved.
Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question