

HCDZ HCDZ-9527

HCDZ Replacement Remote Control User Manual

Model: HCDZ-9527 for Onkyo RC-728M HT-S5405B A/V Receivers

INTRODUCTION

This manual provides instructions for the HCDZ Replacement Remote Control, model HCDZ-9527. This remote is designed as a direct replacement for specific Onkyo A/V receivers, including models RC-728M and HT-S5405B. It requires no programming and operates using infrared technology.

SETUP

Battery Installation

The HCDZ Replacement Remote Control requires two (2) AA batteries for operation. Batteries are not included with the remote control.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to remove it.
3. Insert two (2) AA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: Back of the remote control with the battery cover open, illustrating the battery insertion process.

OPERATING INSTRUCTIONS

Basic Operation

Once batteries are correctly installed, the HCDZ Replacement Remote Control is ready for immediate use with compatible Onkyo A/V receivers. No additional programming or setup is required.

- **Power On/Off:** Press the **POWER** button to turn your Onkyo receiver on or off.
- **Volume Control:** Use the **VOLUME +** and **VOLUME -** buttons to adjust the audio output level.
- **Input Selection:** Press the designated input buttons (e.g., **CD**, **DVD**, **TUNER**) to switch between different audio/video sources connected to your receiver.

- **Mute:** Press the **MUTE** button to temporarily silence the audio output. Press it again to restore sound.



Image: Back of the remote control with the battery cover closed, ready for use.

MAINTENANCE

Proper care and maintenance will extend the life of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Avoid using abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AA).
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common solutions:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AA batteries.
 - Ensure there are no obstructions between the remote control and the A/V receiver's infrared sensor.
 - Confirm the remote is pointed directly at the receiver.
- **Limited Range:**
 - Ensure batteries are fresh.
 - Check for strong light sources (e.g., direct sunlight, fluorescent lights) that might interfere with the infrared signal.
- **Specific Buttons Not Working:**
 - This remote is a replacement and may not have all the exact functions or buttons as the original Onkyo remote. Refer to your Onkyo receiver's manual for specific functions.
 - Clean the remote control, especially around the buttons, to ensure no debris is preventing contact.

SPECIFICATIONS

Brand	HCDZ
Model Number	HCDZ-9527
Compatible Devices	Onkyo Home Theater A/V Receivers (e.g., RC-728M, HT-S5405B)
Connectivity Technology	Infrared (IR)
Power Source	2 x AA Batteries (not included)
Maximum Range	10 Meters (approx. 33 feet)
Special Feature	Ergonomic Design

WARRANTY AND SUPPORT

This HCDZ replacement remote control is designed for reliable performance. Specific warranty details may vary depending on the retailer or region of purchase. For any questions or support regarding this product, please contact your original point of purchase or the HCDZ customer service channel provided by your retailer.