

VINABTY RM-ANP109, RM-ANP084, RM-ANP085, RM-ANP110

VINABTY RM-ANP109 Remote Control User Manual

For Sony Audio/Video Systems HT-CT260 Series

INTRODUCTION

This manual provides instructions for the VINABTY RM-ANP109 replacement remote control. This remote is designed to function as a direct replacement for various Sony Audio/Video Systems, including models in the HT-CT260, SA-CT260, HT-CT260C, HT-CT260H, HT-CT260HP, SA-CT260H, SA-WCT260H, RM-ANP084, and HT-CT260W series. It operates using infrared (IR) technology and requires no programming for immediate use.

SETUP

1. Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: Open battery compartment of the remote control, ready for AAA battery insertion.

2. Compatibility

This remote control is compatible with the following Sony Audio/Video System models:

- HT-CT260
- SA-CT260
- HT-CT260C
- HT-CT260H
- HT-CT260HP
- SA-CT260H
- SA-WCT260H
- RM-ANP084
- HT-CT260W

No programming is required. Once batteries are installed, the remote is ready for use with compatible systems.

OPERATING INSTRUCTIONS

Remote Control Layout



Image: Front view of the VINABTY RM-ANP109 remote control, displaying all functional buttons.

Button Functions

The remote control features standard functions for your Sony Audio/Video System:

- **Power (/)**: Turns the system on or off.
- **Input**: Selects the audio/video input source.

- **Muting:** Mutes or unmutes the audio output.
- **TV VOL (+/-):** Adjusts the television volume.
- **TV CH (+/-):** Changes television channels.
- **VOL (+/-):** Adjusts the system's main volume.
- **Sound Field (STD, MOVIE, MUSIC, GAME, P.AUDIO, STEREO):** Selects various sound modes for optimized audio experience.
- **NIGHT:** Activates or deactivates Night Mode for reduced dynamic range.
- **Display:** Toggles display information on the system.
- **Navigation Buttons (▲, ▼, ◀, ▶, Enter):** Used for menu navigation and selection.
- **RETURN:** Returns to the previous menu or screen.
- **AMP MENU:** Accesses the amplifier's menu settings.
- **Bluetooth (PAIRING, Play/Pause, Skip):** Controls Bluetooth functions, including pairing and media playback.

Basic Operation

To operate your system, point the remote control directly at the infrared sensor on your Sony Audio/Video System. Ensure there are no obstructions between the remote and the system. Press the desired function button to control your device.

MAINTENANCE

To ensure the longevity and proper functioning of your remote control:

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Care:** Replace batteries when the remote's response becomes sluggish or stops working. Remove batteries if the remote will not be used for an extended period to prevent leakage.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

If you experience issues with your remote control, consider the following:

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new AAA batteries.
 - Ensure there is a clear line of sight between the remote and the system's IR sensor.
 - Verify that the remote is compatible with your specific Sony Audio/Video System model.
- **Intermittent functionality:**
 - This may indicate low battery power. Replace the batteries.
 - Ensure no strong light sources (like direct sunlight or fluorescent lights) are interfering with the IR signal.

SPECIFICATIONS

| | |
|---------------------------------|--|
| Product Dimensions | 5 x 1.9 x 0.5 inches |
| Item Weight | 2.1 ounces |
| Manufacturer | xinhao |
| Compatible Models | RM-ANP109, RM-ANP084, RM-ANP085, RM-ANP110 |
| Batteries Required | 2 AAA batteries |
| Special Feature | Ergonomic design |
| Color | Black |
| Max Number of Supported Devices | 1 (Specific Sony Audio/Video System) |
| Compatible Devices | Home Theater (Sony Audio/Video Systems) |

WARRANTY INFORMATION

Specific warranty details for this replacement remote control are typically provided by the seller at the time of purchase. Please refer to your purchase documentation or contact the seller directly for information regarding warranty coverage and terms.

SUPPORT

For further assistance or inquiries regarding your VINABTY RM-ANP109 remote control, please contact the seller or retailer from whom you purchased the product. They can provide specific support related to your purchase.