

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Chicco](#) /

› [Chicco Easy Meal Multifunction Baby Food Maker Instruction Manual - Model 06776](#)

Chicco 06776

Chicco Easy Meal Multifunction Baby Food Maker Instruction Manual

Model: 06776

INTRODUCTION

The Chicco Easy Meal Baby Food Maker is designed to assist in preparing healthy and nutritious baby food during the transition from milk to solid foods. This appliance offers multiple functions including steaming, blending, chopping, warming, and defrosting, simplifying the process of creating homemade meals for your baby.

Please read this instruction manual carefully before using the appliance for the first time and keep it for future reference. Proper use and maintenance will ensure the longevity and safe operation of your Chicco Easy Meal.

SAFETY INFORMATION

Always observe basic safety precautions when using electrical appliances. This appliance is intended for household use only.

- Ensure the appliance is placed on a stable, flat, heat-resistant surface.
- Do not immerse the main unit in water or any other liquid.
- Keep out of reach of children.
- Always unplug the appliance from the power outlet before cleaning, assembling, or disassembling parts.
- Exercise caution when handling sharp blades.
- This product is BPA-free, ensuring food safety.
- The appliance features a safety lock mechanism to prevent operation if parts are not correctly assembled.
- Do not operate the appliance if the power cord or plug is damaged, or if the appliance malfunctions or is dropped. Contact customer support for assistance.

PRODUCT COMPONENTS

The Chicco Easy Meal Baby Food Maker consists of the following main components:

- Main Unit with Motor Base
- Blender Jar (1000 ml capacity)
- Steaming Basket (550 ml capacity)
- Lid
- Stainless Steel Blades
- Cut Express Grater
- Switch System Handle



Image: Chicco Easy Meal Baby Food Maker with its grater accessory. The main unit is white and grey, featuring a transparent blending jar and a control knob. The separate grater attachment is also white.

SETUP AND INITIAL USE

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Cleaning:** Before first use, wash all removable parts (blender jar, steaming basket, lid, blades, grater) with warm soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
3. **Assembly:**
 - Place the main unit on a stable surface.
 - Insert the stainless steel blades into the blender jar.
 - Place the steaming basket inside the blender jar for steaming functions.

- Secure the lid onto the blender jar.

4. **Power Connection:** Plug the appliance into a suitable electrical outlet.

OPERATING INSTRUCTIONS

The Chicco Easy Meal offers multiple functions for preparing baby food:

1. Steaming

Steaming preserves nutrients and flavor. The basket's design ensures even steam distribution.

1. Prepare ingredients: Wash, peel, and chop fruits, vegetables, or meat into small pieces.
2. Place ingredients into the steaming basket (maximum 550 ml capacity).
3. Pour the recommended amount of water into the main unit's water reservoir (refer to specific recipes or the water level indicator).
4. Place the steaming basket with ingredients into the blender jar, then secure the lid.
5. Turn the control knob to the steaming function. The appliance will begin steaming.
6. Once steaming is complete, the appliance will automatically switch off or signal completion. Carefully remove the lid and steaming basket.

COTTURA A VAPORE VELOCE GRAZIE ALLA FORMA DEL CEStELLO



Image: The Chicco Easy Meal Baby Food Maker in operation, demonstrating the steaming function. Chopped vegetables are visible within the transparent steaming basket, indicating the cooking process.

2. Blending / Homogenizing

After steaming, ingredients can be blended to the desired consistency using the stainless steel blades.

1. After steaming, carefully remove the steaming basket from the blender jar.
2. Empty the steamed ingredients directly into the blender jar, ensuring the blades are in place.
3. Add a small amount of cooking water from the steaming process or breast milk/formula to achieve the desired consistency.
4. Secure the lid.
5. Turn the control knob to the blending function. Use short pulses for better control over texture.
6. Once blended, turn off the appliance and carefully remove the lid.

OMOGENEIZZAZIONE TURBO



Image: A close-up of the Chicco Easy Meal's blending function. The transparent jar is tilted, pouring smooth, orange pureed food into a white bowl, illustrating the final product after blending.

3. Chopping with Cut Express

The Cut Express grater allows for thin slicing of ingredients directly into the steaming basket.

1. Attach the Cut Express grater to the top of the steaming basket.
2. Place ingredients (e.g., carrots, zucchini) onto the grater.
3. Gently push the ingredients through the grater, allowing them to fall directly into the steaming basket.
4. Once chopped, proceed with the steaming process.

CUT EXPRESS: PEZZI SOTTILI DIRETTAMENTE NEL CESTELLO



Image: The Chicco Easy Meal Baby Food Maker with the Cut Express grater attachment. A small piece of carrot is being grated, with the thin slices falling directly into the steaming basket below.

4. Switch System for Easy Blending

The Switch System allows you to easily invert the steaming basket over the blades for blending without transferring ingredients manually.

1. After steaming, ensure the lid is securely on the steaming basket.
2. Using the Switch System handle, lift the steaming basket and invert it directly over the blades in the blender jar.
3. The steamed ingredients will fall into the blender jar.
4. Proceed with blending as described in the "Blending" section.

SWITCH SYSTEM: CUOCI, GIRA E FRULLA



Image: A hand demonstrating the Chicco Easy Meal's Switch System. The steaming basket, filled with cooked vegetables, is being inverted over the blender blades, allowing for easy transfer of ingredients for blending.

5. Warming and Defrosting

The appliance can also be used to warm or defrost pre-prepared baby food.

1. Place the food to be warmed or defrosted into a suitable container (e.g., a small jar or bowl) that fits inside the steaming basket.
2. Place this container into the steaming basket.
3. Add water to the main unit's reservoir.
4. Select the warming or defrosting function (refer to the control knob markings).
5. Monitor the process and ensure food reaches the desired temperature. Always check food temperature before serving to your baby.

MAINTENANCE AND CLEANING

Regular cleaning ensures hygiene and extends the life of your appliance.

- **Always unplug the appliance before cleaning.**
- **Main Unit:** Wipe the main unit with a damp cloth. Do not immerse it in water.
- **Removable Parts:** The blender jar, steaming basket, lid, and blades should be washed by hand with warm soapy water. Rinse thoroughly and dry immediately.
- **Dishwasher Safety:** This appliance is **not dishwasher safe**. Hand washing is required for all removable parts.
- **Descaling:** Over time, mineral deposits may accumulate in the water reservoir, especially in areas with hard water. Descaling the reservoir regularly using a solution of water and white vinegar (1:1 ratio). Run a steaming cycle with the solution, then rinse thoroughly by running several cycles with clean water.

TROUBLESHOOTING

If you encounter issues with your Chicco Easy Meal, please refer to the following common solutions:

- **Appliance does not turn on:**
 - Ensure the power cord is securely plugged into a working outlet.
 - Check that all components (jar, lid) are correctly assembled and the safety lock is engaged.
- **Steaming is slow or insufficient:**
 - Verify that the correct amount of water has been added to the reservoir.
 - Ensure the lid is properly sealed.
 - Consider descaling the water reservoir if mineral buildup is present.
- **Blending is ineffective:**
 - Ensure ingredients are cut into small enough pieces before blending.
 - Add a small amount of liquid (cooking water, breast milk, formula) to aid blending.
 - Do not overfill the blender jar.

If the problem persists, please contact Chicco customer support.

SPECIFICATIONS

Model Number	06776
Product Dimensions	28 x 24 x 32 cm (L x W x H)
Weight	2.07 kg
Blender Jar Capacity	1000 ml (1 liter)
Steaming Basket Capacity	550 ml
Wattage	300 watts
Material	Alloy steel (blades), BPA-free plastics
Power Source	Corded Electric

Care Instructions	Handwash only
Special Features	Safety lock, Cut Express grater, Switch System



Image: A diagram showing the dimensions of the Chicco Easy Meal Baby Food Maker. The height is 32cm, width 28cm, and depth 24cm.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official Chicco website or contact their customer service department. Keep your proof of purchase for any warranty claims.

Manufacturer: Artsana Belgium

 <p>SEETY STROLLER</p> <p>chicco</p>	<p><u>Chicco Seety Passeggino: Manuale d'Uso e Sicurezza</u></p> <p>Scopri il passeggino Chicco Seety. Questa guida completa offre istruzioni dettagliate per l'assemblaggio, l'uso sicuro, la manutenzione e la compatibilità con accessori Chicco, garantendo comfort e sicurezza per il tuo bambino.</p>
 <p>Hoopla</p> <p>chicco</p>	<p><u>Chicco Hoopla Baby Bouncer: User Manual & Safety Guide</u></p> <p>Comprehensive user manual for the Chicco Hoopla baby bouncer. Learn about safe assembly, usage modes (reclined cradle and chair), adjustable features, and maintenance for this versatile baby product.</p>
 <p>3 in 1 Steam Sterilizer Esterilizador de vapor 3 en 1 Sterilisateur à vapeur 3-en-1</p> <p>Owner's Manual Manuel de l'utilisateur Manuel de propietario</p> <p>chicco</p>	<p><u>Chicco 3-in-1 Steam Sterilizer: Owner's Manual and Operating Guide</u></p> <p>This owner's manual provides comprehensive instructions for the Chicco 3-in-1 Steam Sterilizer. It includes safety warnings, parts identification, operating procedures for electric and microwave modes, care and maintenance guidelines, and troubleshooting tips. Ensure safe and effective sterilization of baby bottles and accessories.</p>
 <p>Polly Easy</p> <p>chicco</p>	<p><u>Chicco Polly Easy High Chair: User Manual & Safety Guide</u></p> <p>Comprehensive user manual for the Chicco Polly Easy high chair. Includes detailed instructions for assembly, safe usage, maintenance, and cleaning. Available in multiple languages.</p>
 <p>Meraviglia</p> <p>chicco</p>	<p><u>Chicco Meraviglia: Manuale d'Uso e Guida Completa</u></p> <p>Scopri il seggiolone multifunzione Chicco Meraviglia. Istruzioni dettagliate per l'uso, la sicurezza e le diverse configurazioni: da sdraieta a sedia per adulti. Perfetto per ogni fase della crescita.</p>
 <p>Digital Bottle Warmer Calentador de biberones Chaufer-biberon numérique</p> <p>Owner's Manual Manuel de l'utilisateur Manuel de propietario</p> <p>chicco</p>	<p><u>Chicco Digital Bottle Warmer Owner's Manual</u></p> <p>Comprehensive owner's manual for the Chicco Digital Bottle Warmer, detailing safety instructions, operating procedures, water measurement charts, warming times, timer delay functions, care, maintenance, and troubleshooting.</p>