

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [US Stove](#) /

› [US Stove PP7320 Fireplace Fan Blower Instruction Manual](#)

US Stove PP7320

US Stove PP7320 Fireplace Fan Blower Instruction Manual

Brand: US Stove | Model: PP7320

INTRODUCTION

This instruction manual provides essential information for the proper installation, safe operation, and routine maintenance of your US Stove PP7320 Fireplace Fan Blower. This blower is designed to enhance heat circulation from your fireplace or stove, distributing warmth more effectively throughout your living space. Please read this manual thoroughly before attempting installation or operation to ensure safety and optimal performance.

SAFETY INFORMATION

Always adhere to the following safety precautions to prevent injury or damage:

- **Electrical Safety:** Ensure the power supply matches the blower's specifications (115V, 60Hz). Disconnect power before installation, maintenance, or servicing.
- **Proper Installation:** Install the blower according to the manufacturer's instructions and all local electrical and building codes.
- **Heat Source:** This blower is intended for use with compatible fireplaces or stoves. Do not block air inlets or outlets.
- **Clearance:** Maintain adequate clearance from combustible materials as specified by your fireplace or stove manufacturer.
- **Supervision:** Do not allow children or unauthorized persons to operate or tamper with the blower.
- **Damage Inspection:** Regularly inspect the power cord and blower for any signs of damage. Do not operate if damaged.

PACKAGE CONTENTS

Verify that all components are present and undamaged upon unpacking:

- US Stove PP7320 Fireplace Fan Blower Unit
- Mounting Hardware (screws, brackets, etc., as supplied)

- Instruction Manual (this document)

SETUP AND INSTALLATION

Follow these steps for proper installation of your PP7320 blower:

1. **Review Fireplace/Stove Manual:** Consult your fireplace or stove's instruction manual for specific blower installation locations and requirements.
2. **Power Disconnection:** Ensure the power supply to the fireplace or stove area is completely disconnected at the circuit breaker before beginning installation.
3. **Positioning the Blower:** Identify the designated mounting area for the blower unit. This is typically at the rear or bottom of the firebox, designed to draw in cool air and expel heated air.
4. **Mounting:** Secure the PP7320 blower unit using the provided mounting hardware. Ensure it is firmly attached and stable. Avoid mounting in a way that obstructs airflow or creates excessive vibration.
5. **Electrical Connection:** Connect the blower's power cord to a compatible 115V, 60Hz electrical outlet. Ensure the cord is routed away from hot surfaces and pinch points.
6. **Final Check:** Double-check all connections and mounting points for security. Ensure no wires are exposed or in contact with hot surfaces.



Image: The US Stove PP7320 Fireplace Fan Blower unit, showing its motor, fan housing, and electrical connections. This unit is designed to circulate air for improved heat distribution from a fireplace or stove.

OPERATING INSTRUCTIONS

Once installed, operating the PP7320 blower is straightforward:

- 1. Restore Power:** After installation is complete and verified, restore power to the circuit breaker.
- 2. Activation:** The blower may have an integrated thermostat or a manual switch.
 - **Thermostatic Operation:** If equipped, the blower will automatically turn on when the fireplace/stove reaches a certain temperature and turn off when it cools down.
 - **Manual Operation:** If a manual switch is present, turn it to the "ON" position to activate the blower.
- 3. Airflow:** The blower will begin to draw in cool air and push out warm air, enhancing heat distribution.
- 4. Deactivation:** For thermostatic models, the blower will turn off automatically. For manual models, switch it to the "OFF" position when heat circulation is no longer desired or when the fireplace/stove is cooling down.

MAINTENANCE

Regular maintenance ensures longevity and efficient operation:

- **Power Disconnection:** Always disconnect power before performing any maintenance.
- **Cleaning:** Periodically clean the blower's fan blades and housing to remove dust, lint, and debris. A soft brush or vacuum cleaner attachment can be used. Ensure the blower is completely cool before cleaning.
- **Inspection:** Inspect the power cord for fraying or damage. Check mounting hardware for tightness.
- **Lubrication:** The motor is typically sealed and does not require lubrication. Refer to specific product documentation if unsure.

TROUBLESHOOTING

If you encounter issues, consult the following table:

Problem	Possible Cause	Solution
Blower does not turn on.	No power, loose connection, faulty switch/thermostat.	Check power supply, circuit breaker. Ensure connections are secure. Test switch/thermostat if accessible.
Reduced airflow.	Blocked intake/exhaust, dirty fan blades, motor issue.	Clean fan blades and housing. Ensure clear path for air.
Unusual noise or vibration.	Loose mounting, debris in fan, worn motor bearings.	Tighten mounting hardware. Clean fan. If noise persists, motor may require professional service.

If troubleshooting steps do not resolve the issue, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	PP7320
Brand	US Stove
Voltage	115 Volts
Amperage	0.45 Amps
RPM	2900 RPM
Cycles	60 Hz
ASIN	B01HS5368M
Package Dimensions	9.8 x 9.4 x 9.4 inches

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or visit the official US Stove website. Keep your proof of purchase for warranty claims.

© 2023 US Stove Company. All rights reserved.