



[Manuals.plus](#) /

› [Franklin Iron Works](#) /

› Franklin Iron Works Roscoe Modern Standing Floor Lamp 1K790 Instruction Manual

Franklin Iron Works 1K790

Franklin Iron Works Roscoe Modern Standing Floor Lamp Instruction Manual

Model: 1K790

INTRODUCTION

Thank you for purchasing the Franklin Iron Works Roscoe Modern Standing Floor Lamp. This manual provides essential information for the safe assembly, operation, and maintenance of your new lamp. Please read these instructions thoroughly before use and retain them for future reference.



Image: The Roscoe Modern Standing Floor Lamp, featuring an oil-rubbed bronze finish and an off-white oval shade, positioned in a contemporary living space.

SAFETY INFORMATION

- Always unplug the lamp from the electrical outlet before cleaning, changing light bulbs, or performing any maintenance.

- Do not use with a damaged cord or plug. If the cord or plug is damaged, contact a qualified electrician for repair or replacement.
- Ensure the lamp is placed on a stable, level surface to prevent tipping.
- Do not exceed the maximum wattage specified for the light bulbs. Refer to the 'Specifications' section for details.
- Keep the lamp away from water and moisture. This product is for indoor use only.
- Do not attempt to modify the lamp in any way. Any modifications may void the warranty and pose a safety risk.

PACKAGE CONTENTS

Please check that all parts are present before beginning assembly:

- Lamp Base
- Lower Pole Sections (2)
- Upper Pole Sections (2)
- Lamp Head with Socket Assembly and Pull Chains
- Oval Fabric Shade (Pre-assembled)



Image: An annotated diagram of the Roscoe Floor Lamp highlighting its pre-assembled fabric shade, UL certification, dual independent pull chains, sturdy metal construction, and 6-foot power cord.

SETUP AND ASSEMBLY

Assembly is required. Follow these steps carefully:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Retain packaging materials until assembly is complete.
2. **Attach Lower Poles to Base:** Screw the two lower pole sections into the lamp base. Ensure they are securely tightened.
3. **Attach Upper Poles:** Screw the two upper pole sections onto the lower pole sections. Gently pull any excess cord through the base as you assemble the poles to prevent tangling.
4. **Attach Lamp Head:** Carefully screw the lamp head assembly onto the top of the upper pole sections. Ensure the electrical cord is not twisted or pinched during this step.
5. **Install Light Bulbs:** Insert two standard-medium base (E26) light bulbs (not included) into the sockets. Do not exceed the maximum wattage of 60 watts per bulb.
6. **Place Shade:** Carefully place the pre-assembled oval fabric shade onto the lamp head, ensuring it sits evenly.



Image: A detailed view of the lamp's sturdy metal base and the twin pole design, showcasing the oil-rubbed bronze finish.

OPERATING INSTRUCTIONS

The Franklin Iron Works Roscoe Floor Lamp features dual independent pull chains for convenient lighting control.

1. **Connect to Power:** Plug the lamp's power cord into a standard 120V AC electrical outlet.
2. **Turn On/Off:** Each pull chain operates one light bulb independently. Pull a chain once to turn on the corresponding bulb, and pull it again to turn it off. This allows for flexible lighting options, from a single bulb for ambient light to both bulbs for brighter illumination.



On-Off Pull Chains

Image: A close-up view of the lamp's two on-off pull chains, located beneath the shade, allowing independent control of each bulb.

MAINTENANCE

- **Cleaning:** To clean the lamp, ensure it is unplugged. Wipe the metal surfaces with a soft, dry cloth. For the fabric shade, use a lint roller or a soft, slightly damp cloth to gently remove dust. Avoid using abrasive cleaners or solvents, as these can damage the finish.
- **Bulb Replacement:** Always unplug the lamp before replacing bulbs. Allow old bulbs to cool completely before removing. Screw in new standard-medium base (E26) bulbs, ensuring they do not exceed 60 watts each.



Image: A standard A19 shape light bulb, compatible with the lamp's E26 base sockets.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	1. Lamp not plugged in. 2. Loose bulb. 3. Faulty bulb. 4. Power outlet not working.	1. Ensure the plug is fully inserted into the outlet. 2. Tighten the bulb in the socket. 3. Replace the bulb. 4. Test the outlet with another appliance or check the circuit breaker.
Lamp flickers.	1. Loose bulb. 2. Incorrect bulb type/wattage. 3. Faulty wiring.	1. Tighten the bulb. 2. Ensure bulbs meet specifications (E26, max 60W). 3. If flickering persists, discontinue use and consult a qualified electrician.
Shade is uneven.	Shade not seated correctly.	Adjust the shade to ensure it rests evenly on the lamp head.

SPECIFICATIONS

Feature	Detail
Model Number	1K790
Overall Height	62 inches (157.5 cm)
Base Dimensions	11.75" W x 8.5" D x 1.75" H (Oval)
Shade Dimensions	19" W x 12" D x 9" H (Oval)
Weight	11 lbs (5 kg)
Bulb Type	Standard-medium base (E26)
Max Wattage per Bulb	60 Watts
Number of Bulbs	2 (not included)
Switch Type	Dual Pull Chains
Finish	Oil Rubbed Bronze
Shade Material	Off-White Fabric (Hardback)
Cord Length	6 feet

Feature	Detail
UL Listed	Yes

19"

12"

62"

8.5"

11.75"

Image: A technical drawing illustrating the key dimensions of the Roscoe Floor Lamp, including its 62-inch height, 19-inch shade width, 12-inch shade depth, and 11.75-inch by 8.5-inch base.

WARRANTY AND SUPPORT

This product is manufactured by Lamps Plus under the Franklin Iron Works brand. For warranty information or technical support, please refer to the documentation included with your purchase or contact the retailer where the product was acquired. You may also visit the official Franklin Iron Works website for further assistance.

[Visit the Franklin Iron Works Store](#)

FRANKLIN
IRON WORKS®

Image: The official Franklin Iron Works brand logo.