

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Funko](#) /
- › [Funko Aloha Stitch Pop! Vinyl Figure Instruction Manual](#)

Funko 0849803097097

Funko Aloha Stitch Pop! Vinyl Figure Instruction Manual

Model: 0849803097097

INTRODUCTION

This manual provides essential information for the proper handling, display, and care of your Funko Aloha Stitch Pop! Vinyl Figure. This collectible miniature, inspired by Disney's Lilo & Stitch, is designed for display and enjoyment.

SETUP



Figure 1: Funko Pop! Aloha Stitch figure. Stitch is depicted in a blue body with large ears, wearing a yellow Hawaiian shirt with red patterns, and holding a brown coconut drink with a white straw.

1. **Unboxing:** Carefully remove the figure from its original packaging. Retain the packaging for future storage or collector value.
2. **Placement:** Place the figure on a flat, stable surface indoors. Ensure the display area is free from direct sunlight, extreme temperatures, and excessive humidity to prevent damage or discoloration.
3. **Assembly:** This figure requires no assembly. It is a single, pre-assembled piece.

OPERATING

The Funko Pop! Aloha Stitch figure is a static collectible item. Its primary function is for display. No operational steps are required beyond proper placement.

- **Intended Use:** Indoor display.
- **Interaction:** Handle the figure gently to avoid scratches or damage to the glossy finish.

MAINTENANCE

Proper maintenance ensures the longevity and appearance of your collectible.

- **Cleaning:** Dust the figure regularly with a soft, dry cloth. For stubborn marks, lightly dampen the cloth with water and gently wipe, then dry immediately. Avoid abrasive cleaners or solvents.
- **Storage:** If storing the figure, use its original packaging or a protective container to prevent dust accumulation and physical damage.
- **Environmental Conditions:** Keep the figure away from direct sunlight, heat sources, and areas with high humidity to prevent fading, warping, or material degradation.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Figure does not stand stably.	Uneven surface; figure's weight distribution.	Ensure the display surface is completely flat. Gently adjust the figure's position. If persistent, consider using a small, clear adhesive putty (e.g., museum putty) on the feet for added stability.
Dust accumulation.	Exposure to open air.	Regularly dust with a soft, dry cloth. Consider displaying in a dust-proof case.
Fading or discoloration.	Prolonged exposure to direct sunlight or harsh lighting.	Relocate the figure to an area away from direct sunlight or strong artificial light sources.

SPECIFICATIONS

- **Product Name:** Funko Aloha Stitch Pop! Vinyl Figure
- **Brand:** Funko
- **Model Number:** 0849803097097
- **ASIN:** B01HSPUI7Y
- **Dimensions (L x W x H):** 6.3 x 4.53 x 3.54 inches (approximately 16 x 11.5 x 9 cm)
- **Item Weight:** 5.2 ounces (approximately 147 grams)

- **Material:** Vinyl
- **Finish Type:** Glossy
- **Assembly Required:** No
- **Batteries Required:** No
- **Manufacturer:** Funko

SUPPORT INFORMATION

For further assistance or inquiries regarding your Funko product, please visit the official Funko website or contact their customer support.

Official Funko Store: [Funko Store on Amazon](#)

