

## PROSCAN PSB377W

# Proscan PSB377W Bluetooth Speakers Instruction Manual

Model: PSB377W | Brand: PROSCAN

## INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Proscan PSB377W 2.1-Channel Home Theater Speaker System. This system features a sound bar and a wireless subwoofer, designed to enhance your audio experience with powerful sound and Bluetooth streaming capabilities.

## IMPORTANT SAFETY INFORMATION

Please read all safety instructions carefully before using this product. Keep this manual for future reference.

- Do not expose this appliance to dripping or splashing water.
- Do not place objects filled with liquids, such as vases, on the apparatus.
- Ensure proper ventilation. Do not block any ventilation openings.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.

## PACKAGE CONTENTS

Carefully unpack your new speaker system and ensure all items are present and in good condition.

- Proscan Sound Bar
- Wireless Subwoofer
- Remote Control
- Power Adapter for Sound Bar
- Power Cord for Subwoofer
- User Manual (this document)



Image: The Proscan PSB377W sound bar and its accompanying wireless subwoofer, shown together. The sound bar is a long, slender black unit, and the subwoofer is a compact black cube.

## PRODUCT OVERVIEW

---

### Sound Bar Front Panel

The front panel features an LCD display for status indication (e.g., input mode, volume level) and integrated control buttons for basic functions.

- **LED Display:** Shows current status and settings.
- **Power Button:** Turns the sound bar on or off.
- **Input/Source Button:** Cycles through available audio inputs (Bluetooth, Optical, AUX).
- **Volume Up/Down Buttons:** Adjusts the master volume.

### Sound Bar Rear Panel

The rear panel houses the various input ports for connecting external audio devices.

- **Optical Input:** For digital audio connection from TVs or other devices.
- **AUX Input (3.5mm):** For analog audio connection from smartphones, MP3 players, etc.
- **Power Input:** Connects to the provided power adapter.

### Wireless Subwoofer

The wireless subwoofer provides deep bass and connects automatically to the sound bar.

- **Power Indicator LED:** Shows power and connection status.
- **Power Input:** Connects to the power cord.

### Remote Control

The included remote control allows for convenient operation of all sound bar functions from a distance.

- **Power Button:** On/Off.
- **Input Selection Buttons:** Dedicated buttons for Bluetooth, Optical, AUX.
- **Volume Up/Down:** Adjusts master volume.
- **Mute Button:** Mutes or unmutes the sound.
- **Bass/Treble Control:** Adjusts bass and treble levels (if applicable).
- **Play/Pause, Skip Tracks:** For Bluetooth playback control.

## SETUP

---

## Placement

- **Sound Bar:** Place the sound bar on a stable, flat surface directly in front of your TV, or mount it on the wall below your TV. Ensure there are no obstructions in front of the sound bar.
- **Wireless Subwoofer:** For optimal bass performance, place the subwoofer on the floor, preferably in a corner of the room or near a wall. Experiment with different positions to find the best sound for your listening environment.

## Connecting to Power

1. Connect the provided power adapter to the DC IN port on the rear of the sound bar, then plug the adapter into a wall outlet.
2. Connect the power cord to the AC IN port on the rear of the wireless subwoofer, then plug the cord into a wall outlet.
3. The sound bar and subwoofer will automatically power on and attempt to pair. The subwoofer's indicator light will turn solid blue once successfully paired.

## Connecting to Audio Source

Choose one of the following methods to connect your audio source to the sound bar:

- **Optical Connection (Recommended for TVs):** Connect an optical cable (not included) from your TV's Optical Digital Audio Out port to the OPTICAL IN port on the sound bar. Select 'Optical' input on the sound bar.
- **AUX Connection (3.5mm):** Connect a 3.5mm audio cable (not included) from your device's headphone jack or audio out port to the AUX IN port on the sound bar. Select 'AUX' input on the sound bar.
- **Bluetooth Connection:** See the 'Operating Instructions' section for detailed Bluetooth pairing steps.

## OPERATING INSTRUCTIONS

---

### Power On/Off

Press the Power button on the sound bar or remote control to turn the unit on or off.

### Volume Control

Use the Volume Up (+) and Volume Down (-) buttons on the sound bar or remote control to adjust the overall volume level.

### Input Selection

Press the 'Input' or 'Source' button on the sound bar or the dedicated input buttons (Bluetooth, Optical, AUX) on the remote control to switch between different audio sources.

### Bluetooth Pairing

To connect your Bluetooth-enabled device to the sound bar:

1. Turn on the sound bar.
2. Press the 'Bluetooth' button on the remote or cycle through inputs on the sound bar until 'BT' appears on the display. The sound bar will enter pairing mode, indicated by a flashing 'BT' on the display.
3. Enable Bluetooth on your mobile device (smartphone, tablet, etc.) and search for available devices.
4. Select 'PSB377W' from the list of devices.

5. Once connected, the 'BT' indicator on the sound bar's display will stop flashing and remain solid. You can now play audio from your device through the sound bar.

### Wireless Subwoofer Pairing

The wireless subwoofer is designed to automatically pair with the sound bar upon power-up. Ensure both units are powered on. If the subwoofer does not connect, power cycle both the sound bar and the subwoofer. The subwoofer's indicator light will turn solid blue when a successful connection is established.

## MAINTENANCE

### Cleaning

To clean the sound bar and subwoofer, use a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish. Ensure the units are unplugged before cleaning.

### Storage

If you plan to store the speaker system for an extended period, unplug both the sound bar and subwoofer from the power outlet. Store them in a cool, dry place, away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

If you encounter any issues with your Proscan PSB377W system, please refer to the following table for common problems and their solutions.

Problem	Possible Cause	Solution
No power	Power cord not securely connected; Power outlet not active.	Ensure power cords are firmly plugged into the sound bar/subwoofer and a working wall outlet. Try a different outlet.
No sound	Incorrect input selected; Volume too low; Mute function active; Audio cable not connected properly.	Select the correct input source. Increase volume. Deactivate mute. Check audio cable connections. Ensure TV audio output is set to external speakers.
Bluetooth connection issues	Device not in pairing mode; Sound bar too far from device; Interference.	Ensure sound bar is in Bluetooth pairing mode. Move device closer to sound bar. Avoid placing sound bar near other wireless devices. Try unpairing and re-pairing.
Wireless subwoofer not connecting	Subwoofer not powered on; Interference.	Ensure subwoofer is powered on. Power cycle both sound bar and subwoofer. Move subwoofer closer to sound bar.
Sound cuts on and off on certain channels (when connected to TV)	TV audio output settings conflict.	Access your TV's audio settings menu. Try selecting a different audio output format or input setting for the TV's sound output. This can often resolve intermittent sound issues.

## SPECIFICATIONS


- **Model:** PSB377W (also referred to as PSB378W in some specifications)
- **Speaker Type:** Wireless 2.1-Channel Home Theater System
- **Connectivity:** Bluetooth, Optical, AUX (3.5mm)
- **Audio Output Mode:** Stereo
- **Speaker Maximum Output Power:** 800 Watts (Peak)
- **Subwoofer Diameter:** 37 Inches (referring to the sound bar's length, not subwoofer driver size)
- **Controller Type:** Button, Remote Control
- **Color:** Black
- **Included Components:** Sound Bar, Wireless Subwoofer, Remote Control
- **Item Weight:** Approximately 5.04 kg (11.1 lbs)
- **Product Dimensions (Sound Bar):** Approximately 95.89 x 33.78 x 20.57 cm (37.75 x 13.3 x 8.1 inches)
- **Recommended Uses:** Music, Home Theater

## WARRANTY AND SUPPORT

Proscan products are manufactured to the highest quality standards. For warranty information or technical support, please refer to the warranty card included with your purchase or visit the official Proscan website. Keep your proof of purchase for warranty claims. For further assistance, please contact Proscan customer service.

© 2024 Proscan. All rights reserved.

Documents - PROSCAN – PSB377W

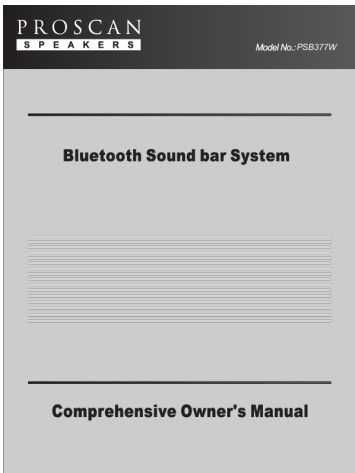

[\[pdf\]](#)

S6300B A 5009A PSB377W cdr PRO ENFR legacy curtisint html custservice manuals |||

**PSB377W** PROSCAN Press PAIR button 5 seconds on subwoofer ,PAIR-LED light be blue flashing ,then press PAIR on remote control 5 seconds ,Red light flashing in the bottom of indicator on bar ,around 10seconds later , connection successfully when bottom red light on and red light on constantly on s...

lang:en score:39 filesize: 5.43 M page\_count: 11 document date: 2016-03-24