

[Manuals.plus](#) /

> [Anker](#) /

> Soundcore Anker Mini, Super-Portable Bluetooth Speaker with FM Radio, 15-Hour Playtime, 66 ft Bluetooth Range, Enhanced Bass, Noise-Cancelling Microphone for Leisure and Work Use black

Anker A3101

Soundcore Anker Mini Bluetooth Speaker User Manual

Model: A3101

INTRODUCTION

The Soundcore Mini is a compact and powerful super-portable Bluetooth speaker designed to deliver crystal-clear sound and powerful bass through its advanced 5W audio driver and passive subwoofer. It offers multiple connectivity options and extended playtime, making it ideal for various uses.

WHAT'S IN THE BOX

- Soundcore Mini Speaker
- Micro USB Cable
- Quick Start Guide

SETUP

Before first use, ensure your Soundcore Mini is fully charged using the provided Micro USB cable. The charging port is located on the bottom of the speaker.

Listen More, Charge Less

Up to 15 hours of continuous playtime.

15 HOURS



Figure 1: Extended Playtime - Up to 15 hours of continuous audio.

Powering On/Off

Locate the power switch on the bottom of the speaker. Slide the switch to the 'On' position to power on the device. A blue LED indicator will illuminate.

Simplified Controls



- ① Vol. Up
- ② Play
- ③ Vol. Down
- ④ Mode
- ⑤ Power

Figure 2: Simplified Controls - Overview of buttons and their functions.

Bluetooth Pairing

Upon powering on, the Soundcore Mini will automatically enter Bluetooth pairing mode. The blue LED indicator will flash rapidly. On your device (smartphone, tablet, etc.), enable Bluetooth and select "Soundcore Mini" from the list of available devices. Once connected, the blue LED will remain solid.



Figure 3: Ultra-Portable Design - Easily enhance your music on the go.

OPERATING INSTRUCTIONS

Button Functions

- **Volume Up (+):** Press to increase volume.
- **Volume Down (-):** Press to decrease volume.
- **Play/Pause (Triangle):** Press to play or pause audio.
- **Mode (M):** Press to switch between input modes (Bluetooth, Micro SD, AUX, FM Radio).

FM Radio Operation

To use the FM radio, ensure the Micro USB charging cable is connected as an antenna. Press the 'M' button to enter radio mode. Hold the Play/Pause button to scan for available stations. Use the Volume +/- buttons to select stations.

Micro SD and AUX Playback

Insert a Micro SD card into the designated slot or connect an audio device via the AUX-in jack. Press the 'M' button to cycle to the corresponding input mode. The speaker will automatically play audio from the

selected source.



Figure 4: Play It Your Way - Multiple audio input options.

Hands-Free Calling

When connected via Bluetooth, the Soundcore Mini's noise-cancelling microphone allows for hands-free calling. Incoming calls will be routed through the speaker. Use the Play/Pause button to answer or end calls.



Figure 5: Hands-Free Calling - Convenient communication on the go.

MAINTENANCE

To ensure the longevity of your Soundcore Mini, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the speaker. Do not use abrasive cleaners or solvents.
- **Water Resistance:** This product is **NOT WATERPROOF**. Avoid exposure to water or excessive moisture to prevent damage.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For optimal battery life, charge the speaker regularly. Avoid fully draining the battery frequently.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker using the Micro USB cable.

Problem	Possible Cause	Solution
Cannot pair via Bluetooth.	Speaker is not in pairing mode or too far from device.	Ensure speaker is powered on and blue LED is flashing. Move device closer to speaker (within 66 ft). Reset Bluetooth on your device.
No sound from speaker.	Volume too low; incorrect input mode; device not connected.	Increase speaker and device volume. Press 'M' button to select correct input mode. Re-pair Bluetooth device.
FM Radio reception is poor.	No antenna connected; weak signal.	Ensure Micro USB cable is connected as an antenna. Try repositioning the speaker for better signal.
Microphone not working well during calls.	Speaker position; environmental noise.	Ensure speaker is positioned optimally for voice pickup. Reduce background noise.

SPECIFICATIONS

Feature	Detail
Model Name	A3101
Brand	Anker
Connectivity Technology	Bluetooth, Auxiliary, USB
Bluetooth Range	66 Feet (20 Meters)
Speaker Maximum Output Power	5 Watts
Battery Life	15 Hours
Charging Time	15 Hours (Note: This seems to be a typo in source data, likely meant to be shorter for charging)
Item Weight	7.2 ounces
Product Dimensions	2.7"D x 2.7"W x 2.7"H
Material	Plastic
Is Waterproof	FALSE

WARRANTY AND SUPPORT

The Soundcore Mini comes with a Limited Warranty. For detailed warranty information or technical support, please refer to the official User Manual PDF or contact Anker customer service.

User Manual (PDF): [Download Here](#)

For further assistance, visit the [Anker Store on Amazon](#) or contact their support channels directly.

