

Tiny Land ZRW-ETZP-SBN010

Tiny Land Teepee Tent for Kids Instruction Manual

Model: ZRW-ETZP-SBN010

[Introduction](#)

[Safety Information](#)

[Package Contents](#)

[Setup](#)

[Operating Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Support](#)

1. INTRODUCTION

This instruction manual provides essential information for the safe and correct assembly, operation, and maintenance of your Tiny Land Teepee Tent. Please read this manual thoroughly before use and retain it for future reference. The teepee tent is designed to provide a fun and imaginative play space for children indoors.

2. SAFETY INFORMATION

- **Adult Supervision Required:** Always supervise children when the teepee tent is in use.
- **Fire Hazard:** Keep the teepee tent away from open flames, heat sources, and electrical heaters. The fabric is not fireproof.
- **Choking Hazard:** Small parts, such as connectors and string lights, can be a choking hazard for young children. Ensure all components are securely assembled and kept out of reach of infants.
- **Stability:** Ensure the teepee is assembled on a flat, stable surface. Periodically check that the poles are securely connected and the tent is stable to prevent collapse.
- **Ventilation:** Do not completely enclose children inside the tent for extended periods without proper ventilation.

- **Electrical Components:** The included fairy lights require batteries. Ensure batteries are inserted correctly and kept away from water. Do not mix old and new batteries.
- **Indoor Use:** This teepee tent is primarily designed for indoor use. If used outdoors, ensure it is protected from strong winds, rain, and direct prolonged sunlight to prevent damage and fading.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Thick Cotton Canvas Teepee (with 4 pockets)
- Non-slip Padded Mat (0.5-inch thick)
- Fairy Lights (13ft, star-shaped)
- Canvas Carry Bag
- Pine Poles (16 pieces)
- Pole Connectors (12 pieces)
- Instruction Manual (this document)



Image: The Tiny Land Teepee Tent fully assembled, showing the tent fabric, wooden poles, padded mat, and star lights. A small basket with decorative items is also visible inside.

4. SETUP INSTRUCTIONS

Follow these steps to assemble your Tiny Land Teepee Tent:

1. **Prepare the Poles:** Connect the 16 pine pole pieces using the 12 connectors to form 4 long poles. Ensure each connection is secure.
2. **Insert Poles into Fabric:** Slide each assembled long pole into the fabric sleeves of the teepee tent. The bottom ends of the poles should be wrapped by the fabric for extra support.
3. **Gather and Tie Poles:** Gather the top ends of the four poles together. Use the provided rope or string to tie them securely at the top, forming the teepee structure. Ensure the knot is tight to maintain stability.
4. **Spread the Base:** Gently spread the base of the teepee to achieve the desired width and

stability. The dimensions are approximately 48 inches wide and 66 inches high when fully set up.

5. **Place the Padded Mat:** Lay the 0.5-inch thick non-slip padded mat inside the teepee. The mat has traction pieces on the bottom to help it stay in place.
6. **Install Fairy Lights:** Drape the 13ft fairy lights around the teepee poles or inside the tent as desired. Ensure the battery pack is placed in a secure, accessible location, away from small children. Insert 3 AA batteries (not included) into the battery pack.



Image: A close-up view of the top of the teepee tent, showing the wooden poles gathered and tied together, indicating the assembly process.



WITH A PADDED MAT

Image: The interior of the teepee tent, showcasing the padded mat on the floor and the star-shaped fairy lights draped around the poles, creating a cozy atmosphere.

5. OPERATING INSTRUCTIONS

The Tiny Land Teepee Tent is designed for simple and versatile use:

- **Entry and Exit:** The front flaps of the teepee can be tied back to keep the entrance open or left loose for a more enclosed space.
- **Using the Padded Mat:** The included padded mat provides a comfortable and non-slip surface for play. Ensure it is laid flat inside the tent.
- **Fairy Lights:** Turn the fairy lights on or off using the switch on the battery pack. Replace AA batteries as needed.
- **Internal Pockets:** Utilize the four internal pockets for storing small toys, books, or other items.
- **Folding for Storage:** To fold the teepee for storage, untie the top poles, gently bring them together, and collapse the fabric. The tent can then be placed in the canvas carry bag.



Image: Two children sitting comfortably inside the teepee tent, reading a book. The star lights are visible, creating a warm ambiance.

6. MAINTENANCE AND CARE

- **Cleaning the Fabric:** The 100% cotton canvas fabric should be spot cleaned with a damp cloth and mild soap. For deeper cleaning, hand wash in cold water. **Do not machine wash or tumble dry.** Air dry naturally at a low temperature.
- **Cleaning the Mat:** The padded mat can be spot cleaned or gently hand washed. Air dry thoroughly.
- **Poles:** Wipe wooden poles with a dry or slightly damp cloth if needed. Ensure they are completely dry before storage.
- **Storage:** When not in use, disassemble the teepee and store all components in the canvas carry bag in a dry, cool place to prevent mildew and damage.
- **Fairy Lights:** Remove batteries from the fairy lights if storing for extended periods to prevent leakage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Teepee is unstable or collapses easily.	Poles not securely tied at the top; base not spread wide enough; uneven surface.	Ensure poles are tightly tied together at the top. Spread the base of the teepee to its maximum stable width. Place on a flat, level surface.
Fairy lights do not turn on.	Dead batteries; incorrect battery insertion; switch is off.	Check battery orientation and replace with fresh AA batteries. Ensure the switch on the battery pack is in the "ON" position.
Mat slides on the floor.	Mat not positioned correctly; floor surface is too smooth.	Ensure the mat's traction pieces are facing down. If on a very smooth surface, consider placing a non-slip rug pad underneath.
Missing parts upon arrival.	Packaging error.	Contact Tiny Land customer service immediately for assistance.

8. SPECIFICATIONS

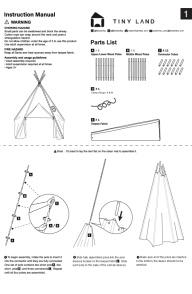



- **Product Dimensions:** 48 x 48 x 66 inches (Width x Depth x Height)
- **Item Weight:** 7.7 pounds
- **Model Number:** ZRW-ETZP-SBN010
- **Recommended Age:** 36 months - 10 years
- **Material:** 100% Cotton Canvas, Pine Wood Poles
- **Fairy Lights Power:** 3 AA batteries (not included)
- **Manufacturer:** TINY LAND INC

9. WARRANTY AND CUSTOMER SUPPORT

Tiny Land is committed to providing quality products. If you encounter any issues with your teepee tent, including defective or missing items, please contact our customer service team for assistance. For support, please refer to the contact information provided with your purchase or visit the official Tiny Land website. Please have your model number (ZRW-ETZP-SBN010) and purchase details ready when contacting support.

Warranty Information: Specific warranty details may vary. Please refer to the documentation included with your purchase or contact customer support for current warranty terms and conditions.

Related Documents

 The image shows the first page of the assembly instructions for the Tiny Land Teepee Tent. It includes a 'WARNING' section with safety icons, a 'Parts List' showing various components like poles and fabric, and a series of numbered diagrams (1-5) illustrating the step-by-step process of erecting the tent.	<p>Tiny Land Teepee Tent Assembly Instructions</p> <p>Step-by-step guide for assembling the Tiny Land Teepee Tent, including parts list, safety warnings, and assembly tips.</p>
 The image displays the installation instructions for the Tiny Land White Canvas Playhouse. It features a 'WARNING' section, a 'Parts List' of components like panels and screws, and a series of numbered diagrams (1-10) showing how to assemble the playhouse structure.	<p>Tiny Land White Canvas Playhouse Installation Instructions</p> <p>Step-by-step instructions for assembling the Tiny Land White Canvas Playhouse, including parts list, safety warnings, and usage guidelines.</p>
 The image shows the assembly guide for the Tiny Land Serenity Play Kitchen. It includes a 'WARNING' section, a 'Parts List' of kitchen components, and a series of numbered diagrams (1-10) illustrating the assembly process for the play kitchen.	<p>Tiny Land Serenity Play Kitchen Assembly Guide</p> <p>Comprehensive assembly guide for the Tiny Land Serenity Play Kitchen, including parts list, step-by-step instructions, and important safety warnings. Learn how to build your child's new play kitchen.</p>
 The image displays the building instructions and design guide for Creative Forts. It features a 'WARNING' section, a 'Parts List' of fort-building materials, and a series of numbered diagrams (1-5) showing how to construct different fort designs like the Igloo, Rocket, Bunker, Castle, and Tunnel.	<p>Creative Forts Building Instructions and Design Guide</p> <p>Comprehensive instructions and design ideas for Creative Forts building kits by Tiny Land, featuring Igloo, Rocket, Bunker, Castle, and Tunnel designs. Includes assembly tips, safety information, and customer support details.</p>