

[Manuals.plus](#) /

› [Tupperware](#) /

› Tupperware ThermoTup Insulated Jug Pitcher Thermos 1.0 L User Manual

Tupperware 11341

Tupperware ThermoTup Insulated Jug Pitcher Thermos 1.0 L User Manual

Model: 11341

INTRODUCTION

This manual provides essential instructions for the safe and effective use, maintenance, and care of your Tupperware ThermoTup Insulated Jug Pitcher Thermos. Please read this manual thoroughly before using the product and retain it for future reference.

The Tupperware ThermoTup is designed to maintain the temperature of your beverages, keeping hot drinks hot and cold drinks cold for extended periods.

PRODUCT OVERVIEW

The Tupperware ThermoTup Insulated Jug features a high-quality design with sophisticated handling, ensuring durability and ease of use. It includes an ergonomic handle for comfortable pouring and a secure lid for optimal temperature retention.



Image: Tupperware ThermoTup Insulated Jug with its lid detached, showing the opening and internal structure. This view highlights the jug's ergonomic handle and spout design.



Image: Tupperware ThermoTup Insulated Jug with its lid securely in place. This view demonstrates the complete product, ready for use, emphasizing its sleek black finish and integrated handle.

Key Features:

- Insulated design for superior temperature retention.
- Ergonomic handle for comfortable grip and pouring.
- Secure lid to prevent spills and maintain temperature.
- Durable plastic construction.

SETUP

1. **Initial Cleaning:** Before first use, wash the jug and lid thoroughly with warm soapy water. Rinse well and allow to air dry completely.
2. **Preheating/Precooling (Recommended):** For optimal temperature retention, preheat the jug with hot water for 5-10 minutes before adding hot beverages, or precool with cold water/ice for 5-10 minutes before adding cold beverages. Empty the preheating/precooling water before filling with your desired drink.
3. **Filling:** Fill the jug as full as possible, leaving minimal air space, as this helps maintain temperature longer.
4. **Securing the Lid:** Place the lid firmly onto the jug and twist or press down until it is securely sealed. Ensure the lid is properly aligned to prevent leaks and maximize insulation.

OPERATING INSTRUCTIONS

1. **Pouring:** To pour, slightly loosen the lid or open the pouring mechanism (if applicable to your lid design) to release pressure. Tilt the jug to pour the beverage. After pouring, re-secure the lid to maintain temperature.
2. **Temperature Retention:** The ThermoTup jug is designed to keep beverages hot or cold for an extended duration. The actual retention time may vary based on the initial temperature of the liquid, the ambient temperature, and how often the jug is opened.
3. **Transport:** When transporting, ensure the lid is tightly sealed to prevent spills.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your Tupperware ThermoTup jug.

- **Daily Cleaning:** After each use, wash the jug and lid with warm water and a mild dish soap. Use a soft brush or sponge to clean the interior.
- **Rinsing:** Rinse all components thoroughly with clean water to remove any soap residue.
- **Drying:** Allow the jug and lid to air dry completely before reassembling or storing. Storing with the lid slightly ajar can help prevent odors.
- **Deep Cleaning:** For stubborn stains or odors, a mixture of baking soda and warm water can be used. Let it sit for a few hours or overnight, then scrub and rinse thoroughly.
- **Avoid Abrasives:** Do not use abrasive cleaners, scourers, or harsh chemicals, as these can damage the plastic and insulation properties.
- **Dishwasher Safety:** Refer to the product's specific care instructions for dishwasher compatibility. If not explicitly stated as dishwasher safe, hand washing is recommended.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Beverages do not stay hot/cold for long.	Lid not sealed properly; jug not preheated/precooling; jug not filled adequately; frequent opening of lid.	Ensure lid is tightly sealed. Always preheat or precool the jug. Fill the jug as full as possible. Avoid opening the lid unnecessarily.
Jug leaks when pouring or transporting.	Lid not secured correctly; seal on lid is damaged or dirty.	Check that the lid is properly aligned and twisted/pressed firmly into place. Inspect the lid's seal for any damage or debris and clean if necessary.
Unpleasant odor inside the jug.	Residue from previous beverages; improper drying after washing.	Clean thoroughly with warm soapy water and a brush. For persistent odors, use a baking soda and water solution. Ensure the jug is completely dry before storing, preferably with the lid slightly ajar.

SPECIFICATIONS

Brand:	Tupperware
Model:	11341
Capacity:	1.0 Liter (1000 Milliliters)
Material:	Plastic
Color:	Black
Dimensions (W x H):	Approximately 6.06 inches (15.4 cm) x 12.6 inches (32.0 cm)
Item Weight:	0.92 Kilograms
Special Feature:	Ergonomic Handle
Included Components:	Lid

WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the documentation provided with your purchase or visit the official Tupperware website. Warranty terms and conditions may vary by region.

If you encounter any issues not covered in this manual or require further assistance, please contact Tupperware customer service. Contact details can typically be found on the Tupperware official website or on your product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question