



[Manuals.plus](#) /

› [Mitsubishi](#) /

› Mitsubishi LCD-3064 TV Wall Mount Instruction Manual

## Mitsubishi LCD-3064


# Mitsubishi LCD-3064 TV Wall Mount Instruction Manual

Model: LCD-3064

## 1. INTRODUCTION AND OVERVIEW

---

This manual provides detailed instructions for the safe and proper installation, operation, and maintenance of your Mitsubishi LCD-3064 TV Wall Mount. Designed for screens ranging from 32 to 64 inches, this mount offers a secure and adjustable solution for your television. Please read this manual thoroughly before installation and retain it for future reference.

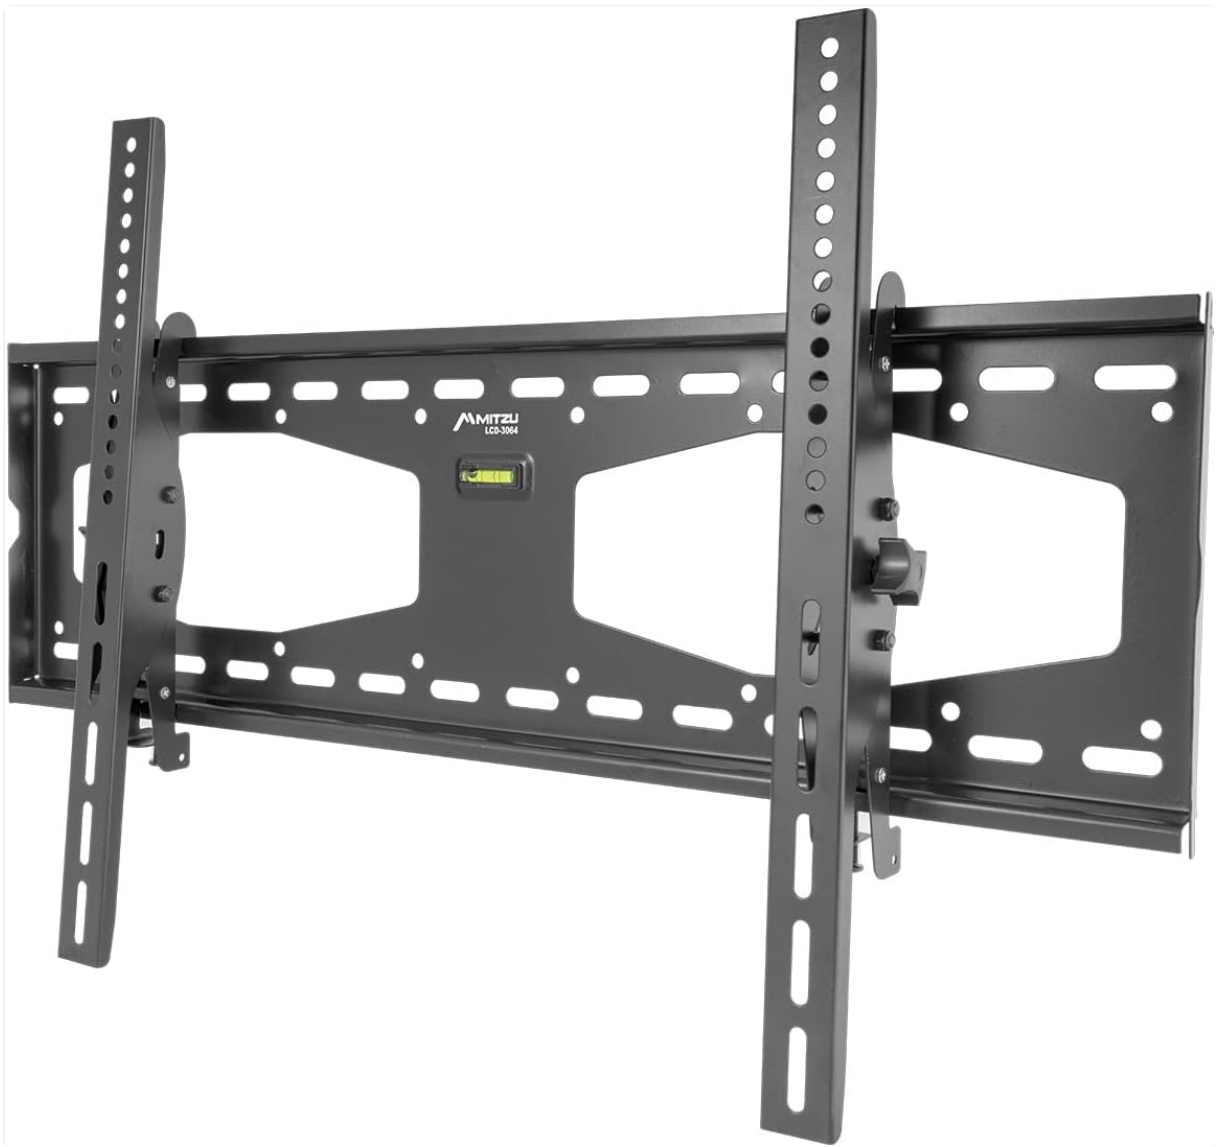

*Figure 1: Front view of the Mitzu LCD-3064 TV Wall Mount.*

The Mitzu LCD-3064 is constructed from durable alloy steel and features an integrated leveling bubble for precise installation. It supports a maximum weight of 70 kg (154 lbs) and allows for a tilt adjustment of +/- 15 degrees, enabling optimal viewing angles. All necessary accessories for installation are included.



Figure 2: Key features of the Mitzu LCD-3064, including 70 kg support, leveling bubble, and +/-15° tilt.

## 2. SAFETY INFORMATION

**WARNING:** Failure to read and follow all instructions may result in personal injury, property damage, or voiding of the warranty. The manufacturer is not responsible for damage or injury caused by incorrect assembly or use.

- Ensure the mounting surface (wall) can safely support the combined weight of the mount and the television. Consult a qualified professional if unsure about your wall's structural integrity.
- Do not exceed the maximum weight capacity of 70 kg (154 lbs).
- Always use appropriate safety equipment, such as safety glasses, during installation.
- Keep children and pets away from the work area during installation.
- Tighten all screws firmly but do not overtighten, as this may damage the mount or the wall.
- This product is intended for indoor use only.

## 3. PACKAGE CONTENTS

Before installation, please verify that all components are present and undamaged. If any parts are missing

or defective, do not proceed with installation and contact customer support.

- Wall Plate (1x)
- TV Brackets (2x)
- Mounting Hardware Kit (various screws, washers, anchors)
- Leveling Bubble (1x, often integrated into the wall plate)

## 4. SETUP AND INSTALLATION

---

Follow these steps carefully for a secure installation. Professional installation is recommended if you are not confident in your ability to perform the installation.

### Step 1: Prepare the TV

Carefully place your television face down on a soft, clean surface to prevent scratches. Attach the two TV brackets to the back of your television using the appropriate screws and washers from the hardware kit. Ensure the brackets are securely fastened and evenly spaced, aligning with your TV's VESA mounting holes.

### Step 2: Mark Drilling Locations

Determine the desired height for your television. Hold the wall plate against the wall at this height. Use the integrated leveling bubble on the wall plate to ensure it is perfectly horizontal. Mark the drilling points through the holes on the wall plate onto the wall.

### Step 3: Drill Holes and Install Wall Plate

Drill pilot holes at the marked locations. The size of the drill bit will depend on your wall type and the anchors/screws being used. Insert wall anchors if required for your wall type (e.g., concrete, brick). Secure the wall plate to the wall using the provided screws. Ensure it is firmly attached and level.

### Step 4: Mount the TV

With assistance, carefully lift the television with the attached brackets. Hook the TV brackets onto the top edge of the wall plate. Gently lower the TV until the brackets are fully seated on the wall plate.

### Step 5: Secure the TV

Locate the security screws or locking mechanisms on the bottom of the TV brackets. Tighten these screws to prevent the television from accidentally lifting off the wall plate.

## 5. OPERATING INSTRUCTIONS

---

The Mitzu LCD-3064 TV Wall Mount allows for a tilt adjustment of +/-15 degrees to optimize your viewing angle.

### Adjusting the Tilt Angle

1. Locate the tilt adjustment knobs on the sides of the TV brackets.
2. Loosen these knobs sufficiently to allow the television to move freely.
3. Carefully tilt the screen to your desired viewing angle.
4. Once the desired angle is achieved, firmly tighten both tilt adjustment knobs to secure the television in place.



Figure 3: Side view illustrating the tilt adjustment capability of the mount.

## 6. MAINTENANCE

---

Regular maintenance ensures the longevity and safe operation of your TV wall mount.

- **Cleaning:** Clean the mount with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or chemical sprays, as these may damage the finish or components.
- **Periodic Checks:** Periodically (e.g., every 6-12 months) check all screws and connections to ensure they remain tight and secure. If any looseness is detected, retighten them.
- **Damage Inspection:** Inspect the mount for any signs of damage or wear. If any damage is observed, discontinue use and contact customer support.

## 7. TROUBLESHOOTING

---

If you encounter issues during or after installation, refer to the following troubleshooting guide:

- **Issue: TV is not level after installation.**  
**Solution:** Carefully remove the TV from the wall plate. Re-check the wall plate installation using the integrated leveling bubble. Adjust the wall plate's position if necessary and ensure it is securely fastened before re-mounting the TV. Also, ensure the TV brackets are evenly attached to the TV.
- **Issue: TV feels loose or unstable on the mount.**  
**Solution:** Verify that all security screws or locking mechanisms on the TV brackets are fully tightened. Ensure the TV brackets are correctly hooked onto the wall plate and fully seated. Check that the wall plate itself is firmly secured to the wall.
- **Issue: Difficulty adjusting the tilt angle.**  
**Solution:** Ensure the tilt adjustment knobs on the sides of the TV brackets are sufficiently loosened before attempting to change the angle. Do not force the mechanism. If the knobs are too tight, the tilt mechanism will be rigid.
- **Issue: Missing parts or damaged components.**  
**Solution:** Do not proceed with installation. Contact Mitsu customer support immediately for assistance or replacement parts.

## 8. SPECIFICATIONS

---

Feature	Specification
Model	LCD-3064
Brand	Mitsu
Screen Size Compatibility	32" to 64"
Weight Capacity	70 kg (154 lbs)
Distance to Wall	75 mm
Tilt Adjustment	+/-15°
Material	Alloy Steel
Mounting Type	Wall Mount

Product Dimensions (L x W x H)	77.5 x 24.5 x 5.5 cm (approximate)
Product Weight	5.2 kg
VESA Compatibility	Compatible with various VESA mounting patterns

## 9. WARRANTY AND SUPPORT

---

For detailed warranty information, please refer to the documentation included with your product packaging or visit the official Mitzu website. Keep your purchase receipt as proof of purchase for warranty claims.

For technical assistance, troubleshooting, or to inquire about replacement parts, please contact Mitzu customer support through their official channels. Contact information can typically be found on the product packaging or the Mitzu website.