



Manuals.plus /

› Mitzu /

› Mitzu MRC-UNI6 Universal Remote Control Instruction Manual

## Mitzu MRC-UNI6

# Mitzu MRC-UNI6 Universal Remote Control Instruction Manual

---

## 1. INTRODUCTION

---

Thank you for choosing the Mitzu MRC-UNI6 Universal Remote Control. This remote is designed to consolidate control of up to four different devices, including smart screens and other compatible equipment, simplifying your entertainment experience. Please read this manual carefully to ensure proper setup and operation.

## 2. PRODUCT OVERVIEW

---

The Mitzu MRC-UNI6 features a user-friendly layout with dedicated buttons for various functions and quick access to popular brands. Its durable plastic construction ensures longevity.



Image 1: Front view of the Mitzu MRC-UNI6 Universal Remote Control, showing all buttons and layout.

### Key Features:

- **3D Function Button:** Activates and deactivates 3D mode with a single press.
- **Playback Controls:** Includes dedicated buttons for Play, Rewind, Fast Forward, Stop, Pause, and

Record.

- **Quick Access Brand Buttons:** Direct access buttons for linking with major brands.
- **Durable Construction:** Manufactured from resistant plastic for extended use.

### 3. BATTERY INSTALLATION

---

The Mitzu MRC-UNI6 remote control requires two AAA batteries (not included).

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

***Note:** Always use new batteries and dispose of old batteries responsibly. Do not mix old and new batteries, or different types of batteries.*

### 4. SETUP AND PROGRAMMING

---

To control your devices, the Mitzu MRC-UNI6 remote must be programmed. There are typically two methods: Direct Code Entry and Auto Search.

#### 4.1. Direct Code Entry (Recommended for known brands)

This method uses a specific code for your device's brand. A list of common brand codes is usually provided with the remote (if not, please refer to the manufacturer's website).

1. Turn on the device you wish to control (e.g., your TV).
2. Press and hold the **SET** button on the remote until the indicator light illuminates.
3. Press the device button you want to program (e.g., **TV**, **DVD**, **AUX**). The indicator light will flash.
4. Enter the 3-digit code for your device's brand using the number buttons. The indicator light should turn off.
5. Point the remote at your device and test its functions (e.g., Power, Volume). If the device responds, the programming is successful.
6. If the device does not respond, try the next code listed for your brand, or proceed to the Auto Search method.

#### 4.2. Auto Search Method

If you cannot find a code for your device or the direct code entry fails, use the auto search method.

1. Turn on the device you wish to control.
2. Press and hold the **SET** button until the indicator light illuminates.
3. Press the device button you want to program (e.g., **TV**). The indicator light will flash.
4. Press the **POWER** button once. The indicator light will start flashing continuously, indicating it is searching for a code.
5. Point the remote at your device. As soon as the device turns off, immediately press the **SET** button to save the code. The indicator light will turn off.
6. Test the remote's functions. If the device does not respond correctly, repeat the process.

#### 4.3. Quick Access Brand Buttons

The remote features quick access buttons for popular brands (e.g., SHARP, SONY, PANASONIC, SANYO, HITACHI, TOSHIBA, PHILIPS, LG, SAMSUNG, HISENSE, SKYWORTH, CHANGHONG, HAIER, TV, PRIMA, SUPRA, KOWKA, THOMSON, DAEWOO, JVC). These buttons may allow for quicker setup for specific brands. Consult the remote's packaging or manufacturer's website for specific instructions on using these buttons for programming.

## 5. OPERATING INSTRUCTIONS

---

Once programmed, the remote functions similarly to your original device remote.

- **Power (Red Button):** Turns the selected device on or off.
- **Device Select Buttons (TV, DVD, AUX):** Press to select which device the remote will control.
- **Volume (+/-):** Adjusts the volume of the selected device.
- **Channel (P +/-):** Changes channels on the selected device.
- **Mute:** Silences the audio.
- **Number Buttons (0-9):** For direct channel entry or code input.
- **Navigation (Arrow Buttons & OK):** Used to navigate menus and confirm selections.
- **Back/Exit:** Returns to the previous menu or exits the current menu.
- **Source/Input:** Changes the input source on your TV.
- **3D:** Toggles 3D function on compatible devices.
- **Playback Controls:** Use Play, Rewind, Fast Forward, Stop, Pause, and Record for media playback.

## 6. MAINTENANCE

---

To ensure the longevity and optimal performance of your Mitzu MRC-UNI6 remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's range decreases or the indicator light fails to illuminate. Always replace both batteries simultaneously.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** While made of durable plastic, excessive drops can damage internal components.

## 7. TROUBLESHOOTING

---

If you encounter issues with your Mitzu MRC-UNI6 remote control, please refer to the following common problems and solutions:

- **Remote not working:**
  - Check if the batteries are inserted correctly with the correct polarity.
  - Replace old batteries with new AAA batteries.
  - Ensure there are no obstructions between the remote and the device's infrared sensor.
  - Re-program the remote for the device.
- **Only some functions work:**
  - The remote may be programmed with a partial code. Try re-programming using a different code for your brand or the auto search method.
  - Ensure you have selected the correct device mode (e.g., TV, DVD).

- **Indicator light does not illuminate:**

- Batteries may be dead or incorrectly inserted. Replace or re-insert.

## 8. SPECIFICATIONS

Feature	Detail
Model	MRC-UNI6
Brand	Mitzu
Connectivity Technology	Infrared
Compatible Devices	Smart Screens, various electronic equipment (up to 4 devices)
Maximum Compatible Devices	10 (as per product specifications, though designed for 4)
Special Feature	Universal
Battery Type	2 x AAA (Alkaline recommended)
Product Dimensions	63 x 45 x 36 cm; 170 g (Note: These dimensions seem unusually large for a remote control, possibly packaging dimensions. Actual remote dimensions are typically smaller.)



Image 2: Mitsuz MRC-UNI6 Universal Remote Control showing approximate dimensions (21 cm length, 4.8 cm width, 2.8 cm depth).

## 9. WARRANTY AND SUPPORT

For warranty information, technical support, or further assistance with your Mitsuz MRC-UNI6 Universal Remote Control, please refer to the official Mitsuz website or contact Mitsuz customer service directly. Contact details are typically found on the product packaging or the manufacturer's official website.

