

LightInTheBox S47457230000B

LightInTheBox Modern LED Pendant Light 3-Ring Chandelier Instruction Manual

Model: S47457230000B

Brand: LightInTheBox

INTRODUCTION

This manual provides comprehensive instructions for the safe installation, operation, and maintenance of your LightInTheBox Modern LED Pendant Light 3-Ring Chandelier. Please read this manual thoroughly before installation and retain it for future reference.

SAFETY INFORMATION

WARNING: To reduce the risk of electric shock, fire, or injury to persons, read and follow all instructions carefully.

- Always disconnect power at the main circuit breaker before installation or maintenance.
- Installation must be performed by a qualified electrician or a person familiar with the construction and operation of the product and the hazards involved.
- Ensure the mounting surface can support the weight of the fixture.
- Do not connect the fixture to an ungrounded electrical system.
- Do not attempt to modify the fixture.
- Keep flammable materials away from the light fixture.

PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning installation.

- LED Pendant Light Fixture (3 Rings)
- Ceiling Canopy
- Mounting Hardware (screws, wire nuts, mounting bracket)
- Remote Control (batteries not included)
- Instruction Manual

SPECIFICATIONS

Brand	LightInTheBox
Model Number	S47457230000B
Color	Black
Material	Aluminum, Acrylic
Style	Modern
Light Source Type	Integrated LED
Light Color	Warm White (3000K)
Wattage	75 Watts
Brightness	7650 Lumens
Voltage	120 Volts
Product Dimensions	24"L x 24"W x 1"H (60cm x 60cm x 2.5cm)
Net Weight	3 KG (6.6 Pounds)
Control Method	Remote Control
Special Feature	Dimmable
Installation Type	Semi Flush Mount / Pendant Light
Assembly Required	Yes

SETUP AND INSTALLATION

Follow these steps for proper installation. It is recommended to have two people for installation.

1. Prepare for Installation

- Turn off power:** Ensure the power supply to the installation area is completely off at the circuit breaker.
- Unpack:** Carefully remove all components from the packaging. Inspect for any damage.
- Identify components:** Familiarize yourself with the fixture, ceiling canopy, mounting bracket, and wires.

2. Mount the Fixture

- Attach the mounting bracket to your ceiling junction box using the provided screws. Ensure the junction box can support the fixture's weight (approximately 6.6 lbs / 3 kg).
- Connect the electrical wires:
 - Connect the **black** wire from the fixture to the **brown** (hot) wire from the ceiling.
 - Connect the **white** wire from the fixture to the **blue** (neutral) wire from the ceiling.
 - Connect the **copper** (ground) wire from the fixture to the **green** (ground) wire from the ceiling.
 - Secure connections with wire nuts.
- Carefully tuck the wires into the junction box.

4. Attach the ceiling canopy to the mounting bracket, securing it with the provided screws.



Figure 1: Assembled 3-Ring Chandelier

3. Adjusting Ring Height and Orientation

The three rings of the chandelier are suspended by adjustable cords, allowing for customization of their height and angle. This adjustment should ideally be done before the final mounting of the canopy to the ceiling.

1. To adjust the length of each suspension wire, locate the small circular lip or button on the inside of the ceiling canopy where each wire is connected.
2. **Press and hold** this button while simultaneously pushing or pulling the wire to your desired length. Release the button to lock the wire in place.
3. Adjust each ring individually to achieve your preferred aesthetic. The rings can be positioned to overlap or spread out.
4. Excess wire can be coiled and secured within the ceiling canopy.

AJUSTABLE CORD

AJUST THE HEIGHT OF THE LIGHT & DIY THE SHAPE



DIAMETER 20CM (8INCH)

DIAMETER 40CM (16INCH)

DIAMETER 60CM (24INCH)

Figure 2: Adjustable Cord Mechanism and Ring Dimensions

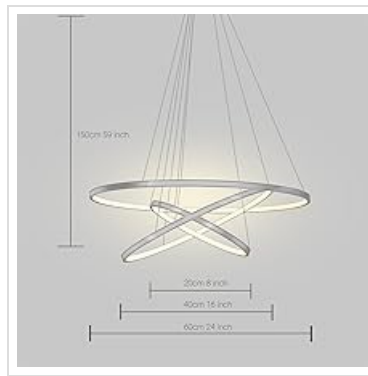


Figure 3: Detail of Suspension Wire Adjustment Point

Your browser does not support the video tag.

Video 1: This video demonstrates the lighting effects and adjustable nature of the chandelier's rings, showcasing various configurations and brightness levels.

OPERATING INSTRUCTIONS

Your LightInTheBox LED Pendant Light is controlled via the included remote control.

Remote Control Functions

- **Power On/Off:** Press the power button to turn the light on or off.
- **Brightness Adjustment:** Use the brightness buttons (usually marked with '+' and '-') to increase or decrease the light intensity.
- **Color Temperature Adjustment:** If your model supports it, use the dedicated buttons to switch between different color temperatures (e.g., warm white, cool white). This model provides Warm White (3000K).
- **Memory Function:** When turned off using the remote control, the fixture will typically remember the last brightness and color temperature settings. If turned off via a wall switch, it may default to maximum power with alternating warm or cool white settings.
- **Timer Function:** Some remotes may include a timer function. Refer to the remote's specific markings for details.



Figure 4: Remote Control for Chandelier Functions

Note: The remote control requires 2 AAA batteries (not included).

MAINTENANCE

- **Cleaning:** Ensure the power is off before cleaning. Wipe the fixture with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners or solvents.
- **LED Lifespan:** The integrated LED light source is designed for long-term use and is not user-replaceable.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	No power supply; loose wiring; remote control batteries dead.	Check circuit breaker. Verify all wire connections. Replace remote control batteries.
Light flickers or does not dim with wall dimmer.	Incompatible wall dimmer.	This fixture is designed to be dimmed using its dedicated remote control. It is not compatible with standard wall dimmers. Use the remote for dimming functions.
Remote control not working.	Dead batteries; remote not paired (if applicable); obstruction.	Replace AAA batteries in the remote. Ensure no obstructions between remote and fixture.
Light does not remember last settings when turned off by wall switch.	Expected behavior for wall switch operation.	To retain last settings, turn the light off using the remote control. Turning off via a wall switch may reset settings to a default.

WARRANTY AND SUPPORT

For warranty information or technical support, please contact LightInTheBox customer service. Retain your purchase receipt for warranty claims.

For further assistance, please visit the [LightInTheBox Store on Amazon](#).