

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Cuisinart](#) /

› [Cuisinart SCM-10P1 Snow Cone Maker Instruction Manual](#)

Cuisinart SCM-10P1

Cuisinart SCM-10P1 Snow Cone Maker Instruction Manual

INTRODUCTION

The Cuisinart Snow Cone Maker SCM-10P1 is designed to create shaved ice for snow cones, slushies, frozen lemonades, and other cold beverages. This appliance features a professional motor and blade mechanism with an interlock safety feature. It operates quickly, producing enough ice for 4-5 cones in under a minute. The unit includes a removable ice bin, a pull-out serving tray with two fold-down cone holders, four BPA-free reusable cones, and 12 paper cones. Recipes are also included to help you get started.

IMPORTANT SAFEGUARDS

- Read all instructions before operating the appliance.
- Do not touch moving parts. Keep hands, hair, clothing, and utensils away from the blade during operation to prevent injury.
- Always ensure the lid is securely closed before operating the machine. The interlock safety feature prevents operation if the lid is not properly in place.
- Do not immerse the motor base in water or other liquids. Clean with a damp cloth.
- Supervise children closely when the appliance is in use. This appliance is not intended for use by children.
- Unplug the appliance from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Use only attachments recommended or sold by the manufacturer.
- Do not use outdoors.

PARTS & FEATURES

The Cuisinart SCM-10P1 Snow Cone Maker is designed for ease of use and durability. Key components include:

- **Motor Base:** Houses the powerful motor and controls.
- **Ice Shaving Chamber:** Where ice cubes are placed for shaving.

- **Plunger/Handle:** Used to press ice down onto the shaving blade.
- **Shaving Blade:** Stainless steel blade for efficient ice shaving.
- **Removable Ice Bin:** Collects the shaved ice.
- **Pull-Out Serving Tray:** Features two fold-down cone holders for convenient serving.
- **On/Off Switch:** Simple control for operation.
- **Accessories:** Includes 4 reusable plastic cones, 12 paper cones, and an ice scoop.



Figure 1: The Cuisinart SCM-10P1 Snow Cone Maker with prepared snow cones.



Includes 4 snow cone holders

Figure 2: Included accessories for the Cuisinart Snow Cone Maker.

SETUP

- 1. Unpack:** Carefully remove all components from the packaging.
- 2. Clean:** Wash the removable ice bin, serving tray, reusable cones, and ice scoop in warm, soapy water. Rinse thoroughly and dry. Wipe the motor base with a damp cloth.
- 3. Assemble:** Place the motor base on a clean, dry, and stable surface. Ensure the removable ice bin is correctly seated in the base.
- 4. Position:** Extend the pull-out serving tray and fold down the cone holders if desired.

Your browser does not support the video tag.

Video 1: Official Cuisinart demonstration of the Snow Cone Machine, SCM-10P1, showing its features and operation.

OPERATING INSTRUCTIONS

- 1. Prepare Ice:** Use standard ice cubes from your freezer. For best results, avoid overly large or irregularly shaped ice cubes.
- 2. Add Ice:** Open the top lid of the ice shaving chamber. Carefully place ice cubes into the chamber. Do not

overfill.



Figure 3: Adding ice cubes to the machine.

3. **Close Lid:** Securely close the top lid. The machine will not operate unless the lid is properly locked into place due to the safety interlock.
4. **Position Cone:** Place a reusable or paper cone on the serving tray directly under the ice chute.
5. **Activate Shaving:** Plug the appliance into a standard electrical outlet. Flip the On/Off switch to the 'On' position. Press down firmly on the plunger/handle to push the ice cubes onto the shaving blade.



Make delicious snow cones at home

Fun and tasty treats are ready in minutes with this easy to use machine - perfect for summertime parties!

Figure 4: Pressing the plunger to shave ice.

6. **Collect Shaved Ice:** The shaved ice will dispense directly into the cone. Continue pressing the plunger until the desired amount of shaved ice is collected. The machine can produce enough ice for 4-5 cones in under a minute.



Figure 5: Scooping shaved ice into a cone.

7. **Turn Off:** Release the plunger and flip the On/Off switch to the 'Off' position when finished. Unplug the appliance.
8. **Add Syrup:** Drizzle your favorite snow cone syrup or juice over the shaved ice.



Everything you need for summer fun

All in one - includes 12 paper cones, 4 reusable BPA-free cones, and an ice scoop!

Figure 6: Adding syrup to a snow cone.

CLEANING & MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your Cuisinart Snow Cone Maker.

1. **Unplug:** Always unplug the appliance before cleaning.
2. **Disassemble:** Remove the top lid, plunger, and ice bin.
3. **Wash Removable Parts:** Wash the ice bin, serving tray, reusable cones, ice scoop, and top lid in warm, soapy water. Rinse thoroughly and dry completely. These parts are generally top-rack dishwasher safe, but hand washing is recommended for best care.
4. **Clean Motor Base:** Wipe the exterior of the motor base with a damp cloth. Do not immerse the motor base in water.
5. **Storage:** Ensure all parts are dry before reassembling or storing. Store the appliance in a cool, dry place.

TROUBLESHOOTING

If you encounter any issues with your Cuisinart Snow Cone Maker, refer to the following common troubleshooting tips:

- **Machine Not Turning On:**

- Ensure the appliance is securely plugged into a working electrical outlet.
- Verify that the top lid is properly closed and locked into place. The safety interlock prevents operation if the lid is open.
- Check the On/Off switch is in the 'On' position.

- **Ice Not Shaving Properly:**

- Ensure you are pressing down firmly on the plunger/handle to push the ice onto the blade.
- Check that the ice cubes are not too large or frozen together. Break apart any large chunks.
- The blade may be dull. Contact customer support for assistance if the issue persists after trying the above steps.

- **Excessive Noise During Operation:**

- Some noise is normal during ice shaving.
- Ensure the machine is on a stable, flat surface.
- Check for any foreign objects in the ice shaving chamber.

SPECIFICATIONS

Brand	Cuisinart
Model Name	SCM-10P1 Snow Cone Maker
Product Dimensions	9"D x 9.25"W x 12"H
Capacity	4 Quarts
Wattage	90 watts
Voltage	120 Volts
Material	Plastic
Item Weight	7.8 pounds
Item Model Number	SCM-10P1

Snow Cone Machine



Figure 7: Product dimensions of the Cuisinart SCM-10P1 Snow Cone Maker.

WARRANTY & SUPPORT

The Cuisinart SCM-10P1 Snow Cone Maker comes with a **Limited 5-Year Motor Warranty**. For detailed warranty policies, troubleshooting steps, or any product-related inquiries, please refer to the full user manual provided with your purchase or contact Cuisinart customer support directly. For customer support, please visit the official Cuisinart website or contact their service center.