

Ringway K35

Ringway K35 Portable Electronic Keyboard User Manual

Model: K35 | Brand: Ringway

1. INTRODUCTION

Welcome to the user manual for your new Ringway K35 Portable Electronic Keyboard. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your instrument. Please read this manual thoroughly before using the keyboard to ensure proper function and longevity.

2. PRODUCT OVERVIEW

2.1 Key Features

- 49 keys
- Multifunctional LCD display
- 128 PCM Voices, 1 percussion set
- 32-note polyphony
- 100 rhythm styles

2.2 Keyboard Components

The Ringway K35 features a compact design with 49 keys, a central control panel, and an LCD screen for navigation. The control panel includes buttons for power, voice selection, rhythm selection, tempo adjustment, volume control, and other functions. Specific button layouts and functions are detailed in the 'Operating Instructions' section.



An image showing the Ringway K35 portable electronic keyboard from a slightly elevated front-right angle, displaying its 49 keys, control panel, and LCD screen.

3. SETUP

3.1 Powering the Keyboard

The Ringway K35 is battery operated. Insert the required batteries (not included) into the battery compartment located on the underside of the keyboard. Ensure correct polarity. Alternatively, if an AC adapter port is present, you may use a compatible power adapter (sold separately) to power the unit from a wall outlet.

3.2 Initial Placement

Place the keyboard on a stable, flat surface. Ensure there is adequate space around the instrument for comfortable playing and to prevent obstruction of any vents or ports.

3.3 Connecting Accessories

If your keyboard includes a connector port (e.g., for headphones or an external amplifier), connect your accessories securely. Refer to the specific accessory's manual for connection details.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

Press the **POWER** button to turn the keyboard on. The LCD display will illuminate. To turn off the keyboard, press the **POWER** button again.

4.2 Using the LCD Display

The multifunctional LCD display shows current settings such as selected voice, rhythm, tempo, and volume level. Use the navigation buttons (e.g., +/- or arrow keys) to browse through options and adjust parameters.

4.3 Selecting Voices

Press the **VOICE** button, then use the number pad or +/- buttons to select from the 128 available PCM voices. The selected voice name or number will appear on the LCD display.

4.4 Selecting Rhythms

Press the **RHYTHM** button, then use the number pad or +/- buttons to select from the 100 available rhythm styles. Press **START/STOP** to begin or end the rhythm playback.

4.5 Adjusting Volume and Tempo

Use the **VOLUME** buttons (usually **VOL+** and **VOL-**) to adjust the overall sound level. The **TEMPO** buttons (usually **TEMPO+** and **TEMPO-**) control the speed of the selected rhythm.

5. MAINTENANCE

5.1 Cleaning

Wipe the keyboard surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water and a mild soap solution, then wipe dry immediately. Avoid using abrasive cleaners, solvents, or waxes, as these can damage the finish.

5.2 Storage

When not in use, store the keyboard in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. If storing for an extended period, remove the batteries to prevent leakage.

5.3 Battery Care

Always use the recommended type of batteries. Do not mix old and new batteries, or different types of batteries. Remove depleted batteries promptly to prevent leakage and corrosion. Dispose of batteries according to local regulations.

6. TROUBLESHOOTING

6.1 No Power

- Check if batteries are correctly inserted and not depleted. Replace if necessary.
- If using an AC adapter, ensure it is properly connected to both the keyboard and a working power outlet.

6.2 No Sound

- Ensure the volume is turned up.
- If headphones are connected, disconnect them to check if sound plays through the internal speakers.
- Verify that a voice is selected and not set to a silent patch.

6.3 Keys Not Responding

- Turn the keyboard off and then on again.
- Ensure no foreign objects are lodged between the keys.

If you encounter issues not covered here, please consult the retailer or manufacturer for further assistance.

7. SPECIFICATIONS

- **Product Model Number:** K35
- **Number of Keys:** 49
- **Power Source:** Battery operated
- **Product Weight:** 2.32 Kilograms
- **Package Dimensions:** 77 x 27 x 12 cm
- **Connector Type:** Not specified
- **ASIN:** B01IA9DYQO

8. WARRANTY AND SUPPORT

For information regarding warranty coverage and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Where is the “Rhythm” button located on the Ringway K35 keyboard?

On the Ringway K35, the RHYTHM button is located on the central control panel near the LCD screen. While the exact physical layout can vary slightly by production batch, it is typically grouped with...

[Read full answer](#)