

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ELECTRA](#) /

› [ELECTRA RC7 Air Conditioner Remote Control User Manual](#)

ELECTRA RC7

ELECTRA RC7 Air Conditioner Remote Control User Manual

Model: RC7

INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your ELECTRA RC7 Air Conditioner Remote Control. Please read this manual thoroughly before operating the device to ensure optimal performance and longevity. The RC7 remote control is designed for specific Airwell, Emailair, and Electra air conditioning units.



Image: Comparison of the older RC-4 model and the newer RC-7 model. This image helps users identify the correct remote control for their air conditioning unit.

PACKAGE CONTENTS

- 1 x ELECTRA RC7 Air Conditioner Remote Control
- 1 x Wall Mount Holder (optional, may vary by package)



Image: The ELECTRA RC7 remote control shown alongside its accompanying wall mount holder, illustrating the complete package contents.

PRODUCT OVERVIEW

The ELECTRA RC7 remote control features an ergonomic design with clearly labeled buttons and a digital display for easy operation. Familiarize yourself with the layout below.



Image: A detailed view of the ELECTRA RC7 remote control, highlighting the digital display and various function buttons for air conditioner operation.

Button Functions:

- **Power ():** Turns the air conditioner unit On or Off.

- **MODE:** Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
- **SET:** Used for confirming settings or entering specific menus.
- **Temperature Up (+) / Down (-):** Adjusts the desired temperature.
- **Fan Speed (▲):** Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **TIMER:** Sets the timer for automatic On/Off operation.
- **SLEEP:** Activates or deactivates sleep mode for comfortable night operation.
- **CLEAR:** Clears current settings or cancels a function.
- **FEEL:** Activates a specific comfort mode based on ambient conditions.
- **ROOM:** Displays or sets the room temperature.
- **LIGHT:** Controls the display light on the indoor unit.
- **DISPLAY:** Toggles the remote's display backlight or unit's display.
- **ECO:** Activates energy-saving mode.
- **CLEAN:** Initiates a self-cleaning function for the indoor unit.
- **ION:** Activates the ionizer function (if available on the AC unit).
- **Swing (↔):** Controls the louver swing direction.

SETUP

Battery Installation:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals match the markings inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.

Note: Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.

OPERATING INSTRUCTIONS

Ensure the remote control is pointed directly at the air conditioner's receiver when sending commands.

Basic Operation:

1. **Power On/Off:** Press the **Power** button once to turn the unit on. Press it again to turn the unit off.
2. **Selecting Mode:** Press the **MODE** button repeatedly to cycle through available operating modes (e.g., Auto, Cool, Dry, Fan, Heat). The selected mode will be displayed on the remote's screen.
3. **Adjusting Temperature:** Use the **Temperature Up (+)** or **Down (-)** buttons to set your desired temperature.
4. **Adjusting Fan Speed:** Press the **Fan Speed** button to cycle through different fan speed settings (e.g., Auto, Low, Medium, High).

Advanced Functions:

- **Timer Function:** Press the **TIMER** button to set a specific time for the unit to turn on or off. Follow the on-screen prompts to adjust the time using the temperature buttons and confirm with **SET**.
- **Sleep Mode:** Press the **SLEEP** button to activate sleep mode, which typically adjusts temperature and fan speed for quiet, comfortable sleep.

- **ECO Mode:** Press the **ECO** button to engage energy-saving operation, which optimizes settings to reduce power consumption.
- **Swing Function:** Press the **Swing** button to activate or adjust the automatic louver swing, distributing air evenly.

MAINTENANCE

Cleaning the Remote Control:

- Wipe the surface of the remote control with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water and a mild detergent, then wipe dry immediately.
- Do not use abrasive cleaners, alcohol, or chemical solvents, as these can damage the remote's surface or internal components.

Battery Replacement:

Replace batteries when the remote's display becomes dim or the remote fails to operate the air conditioner from a normal distance. Refer to the "Battery Installation" section under Setup for detailed instructions.

Important: Remove batteries if the remote control will not be used for an extended period to prevent leakage and damage.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are correctly inserted with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote and the air conditioner's receiver.
 - Confirm the remote is pointed directly at the air conditioner.
- **Display is dim or blank:**
 - Batteries may be low. Replace them.
- **Limited operating range:**
 - Batteries may be weak. Replace them.
 - Ensure no strong light sources (e.g., direct sunlight) are interfering with the signal.

SPECIFICATIONS


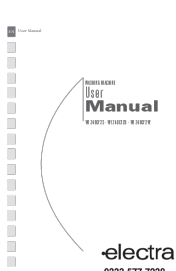
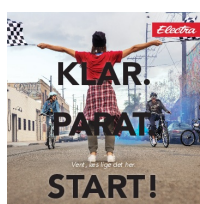
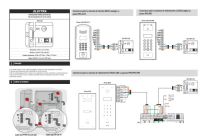
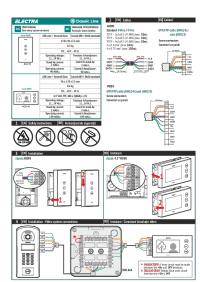
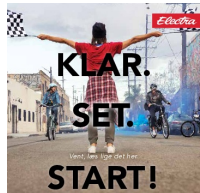
- **Model:** RC7
- **Brand:** ELECTRA (Compatible with Airwell, Emailair, Electra)
- **Controller Type:** Button Control
- **Special Feature:** Ergonomic design
- **Color:** White
- **Max Number of Supported Devices:** 1 (per remote)
- **Maximum Range:** Approximately 10 Meters (33 feet)
- **Power Source:** 2 x AAA Batteries (not included)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your air conditioning unit or contact the original seller or manufacturer of the ELECTRA RC7 remote control. Keep your purchase receipt as proof of purchase.

© 2023 ELECTRA. All rights reserved.

Related Documents - RC7

	<p>VOY™ Assembly and User's Manual - Model 88911</p> <p>Comprehensive assembly and user's manual for the Electra VOY™ electric scooter (Model 88911), covering features, safety, operation, maintenance, and warranty information.</p>
	<p>Electra W1249CF2S/CF2B/CF2W Washing Machine User Manual</p> <p>Comprehensive user manual for Electra washing machines, models W1249CF2S, W1249CF2B, and W1249CF2W. Provides guidance on installation, operation, safety, maintenance, and troubleshooting.</p>
	<p>Electra Cykel Brugsvejledning: Sikkerhed, Vedligeholdelse og Betjening</p> <p>En omfattende guide til sikker betjening, grundig vedligeholdelse og optimal brug af din Electra cykel, inklusive specifikke råd til elcykler.</p>
	<p>ELECTRA YEM.22B Electromagnetic Lock: Ghid Tehnic de Instalare</p> <p>Ghid tehnic complet pentru instalarea yalei electromagnetice de curent continuu ELECTRA YEM.22B. Include scheme de conectare pentru diverse sisteme de interfon, instrucțiuni de montaj, informații despre garanție și specificații tehnice.</p>
	<p>Electra Classic Door Entry System User Manual</p> <p>User manual for Electra Classic AUDIO and VIDEO door entry system terminals, covering product specifications, safety instructions, cable types, installation, programming, usage, outdoor panel features, and warranty information.</p>
	<p>Electra Cykel Brugsvejledning: Sikkerhed, Vedligeholdelse og Tips</p> <p>Denne brugsvejledning fra Electra giver omfattende information om sikker brug, vedligeholdelse og tips til din cykel. Lær om sikkerhed, grundlæggende teknikker, vedligeholdelse og hvordan du får mest muligt ud af din Electra cykel.</p>