

[manuals.plus](#) /› [Farberware](#) /› **Farberware Countertop Microwave 1000 Watts, 1.1 cu ft - Microwave Oven With LED Lighting and Child Lock - Perfect for Apartments and Dorms - Easy Clean Metallic Red 1.1 Cu. Ft. Metallic Red User Manual**

Farberware 1.1 Cu. Ft. Metallic Red

Farberware Countertop Microwave User Manual

Model: 1.1 Cu. Ft. Metallic Red

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this appliance to ensure safe and efficient operation. Keep this manual for future reference.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) Door (bent), (2) Hinges and Latches (broken or loosened), (3) Door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Always supervise children when the microwave is in use, especially when the Child Safety Lock is not activated.

2. PRODUCT OVERVIEW

The Farberware Countertop Microwave is designed for convenient and efficient cooking. With 1000 watts of power and a 1.1 cu. ft. capacity, it is perfect for various kitchen needs, from quick reheating to preparing full meals.



Figure 2.1: Farberware Countertop Microwave in Metallic Red.

Key Features:

- **CONVENIENT MICROWAVE:** Prepare quick and easy meals in a snap with our powerful microwave. It packs 1000 of output power and features a range of settings for press-and-go speed.
- **POWERFUL SETTINGS:** This microwave has ten power levels with multi-stage cooking. You can fully customize your cooking with six one-touch options, including popcorn, potato, and pizza. Defrost by weight or by time settings to make quick work of any task.
- **PERFECT SIZE:** Measuring 1.1 cu ft, this microwave is the ideal small-space solution that offers full-sized cooking in a compact space. It features an easy-to-clean interior and exterior and is perfect for the home or office.
- **ALL YOU NEED:** This microwave has a clear LED display with a kitchen timer and clock that lets you easily keep track of time. Easy-to-view interior lighting lets you keep an eye on your dish, and a child safety lock adds additional security.

3. SETUP INSTRUCTIONS

Follow these steps for proper installation and initial setup of your microwave oven.

3.1 Placement

- Place the microwave on a flat, stable surface that can support its weight.
- Ensure adequate ventilation around the unit. Maintain a minimum of 3 inches (7.5 cm) of space on the top, sides, and rear for proper airflow.
- Do not block air vents.

Get the Perfect Fit.

compact size to make the most of your space



Figure 3.1: Microwave dimensions for placement.

3.2 Power Connection

- Plug the microwave into a grounded 110-volt AC outlet.
- Ensure the electrical circuit can support 1000 watts of power.

3.3 Turntable Installation

- Place the roller ring in the center of the oven cavity.
- Place the glass tray on top of the roller ring, ensuring it sits securely.

4. OPERATING INSTRUCTIONS

Your Farberware microwave features an intuitive control panel for easy operation.



Cooking Made Easy.

defrost options

six auto-cook presets

intuitive control panel

one touch start

child safety lock

Figure 4.1: Control Panel Layout.

4.1 Setting the Clock

1. Press the **Clock** button.
2. Use the number pad to enter the current time.
3. Press **Clock** again to confirm.

4.2 Basic Cooking (Time Cook)

1. Place food in the microwave.
2. Press the **Time Cook** button.
3. Enter the desired cooking time using the number pad.
4. Press **Start/+30SEC** to begin cooking.

4.3 Defrosting

The microwave offers two defrost options:

- **Time Defrost:** Press **Time Defrost**, enter the desired defrost time, then press **Start/+30SEC**.

- **Weight Defrost:** Press **Weight Defrost**, enter the food's weight, then press **Start/+30SEC**.

4.4 One-Touch Cooking

For common food items, use the convenient one-touch buttons:

- Press **Popcorn**, **Potato**, **Pizza**, **Frozen Vegetable**, **Beverage**, or **Dinner Plate** for pre-programmed cooking times.
- Press **Start/+30SEC** to begin.

4.5 Child Safety Lock

To activate the child safety lock, press and hold the **Stop/Cancel** button for 3 seconds. The display will show a lock indicator. To deactivate, repeat the process.

5. MAINTENANCE AND CLEANING

Regular cleaning helps maintain the performance and appearance of your microwave oven.



Figure 5.1: Easy-to-clean interior.

- **Interior:** Wipe the interior with a damp cloth after each use. For stubborn stains, use a mild detergent or a microwave-safe cleaner.
- **Exterior:** Clean the exterior surfaces with a soft, damp cloth. Avoid abrasive cleaners that may scratch the finish.
- **Turtable:** The glass turntable and roller ring can be washed in warm, soapy water or in the dishwasher.
- **Door Seals:** Keep the door seals clean to ensure proper closure and prevent microwave leakage.

6. TROUBLESHOOTING

If you encounter issues with your microwave, refer to the common problems and solutions below.

Problem	Possible Cause	Solution
Oven will not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Plug into outlet; Close door securely; Replace fuse or reset circuit breaker.
Oven does not heat food	Door not closed properly; Incorrect cooking time set; Power level too low.	Close door securely; Set appropriate cooking time; Increase power level.
Turtable makes noise or does not rotate	Turtable or roller ring not positioned correctly; Food obstructing rotation.	Reposition turntable and roller ring; Ensure food container is not too large.
Display shows error message	Internal malfunction.	Unplug the oven for 30 seconds, then plug it back in. If the error persists, contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Farberware
Model Number	1.1 Cu. Ft. Metallic Red
Capacity	1.1 Cubic Feet
Wattage	1000 watts
Voltage	110 Volts
Product Dimensions (D x W x H)	16.54"D x 20.2"W x 12.03"H
Item Weight	88 Ounces (5.5 pounds)
Material	Stainless Steel
Color	Metallic Red
Special Feature	Child Safety Lock
Installation Type	Countertop

Feature	Detail
Included Components	Microwave oven, turntable, manual

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product. You can also visit the official Farberware Store online for additional resources and assistance.

Official User Guides (PDF):

- [User Guide \(PDF\)](#)
- [User Manual \(PDF\)](#)

Farberware Store: [Visit the Farberware Store](#)