

Mitzu MRC-UNI4

Mitzu MRC-UNI4 Universal Remote Control User Manual

Model: MRC-UNI4

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Mitzu MRC-UNI4 Universal Remote Control. This remote is designed to consolidate control of multiple entertainment devices, including TVs, Blu-ray players, Home Theater systems, and DVD players, into a single, convenient unit. Please read this manual thoroughly before use to ensure optimal performance and longevity of your device.



Figure 1: Mitzu MRC-UNI4 Universal Remote Control, front view showing all buttons.

SETUP

1. Battery Installation

The Mitzu MRC-UNI4 Universal Remote Control requires two (2) AAA batteries (not supplied). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

2. Programming the Remote Control

To control your devices, the remote must be programmed with the correct codes. There are typically two methods for programming:

Method A: Direct Code Entry

1. Turn on the device you wish to control (e.g., TV, DVD player).
2. Press and hold the corresponding device button on the remote (e.g., **TV**, **DVD**, **HT**, **BD**) for approximately 3 seconds until the indicator light illuminates.
3. Enter the 4-digit code for your device's brand using the number buttons. Refer to the separate code list provided with your remote or available on the Mitzu support website.
4. If the code is valid, the indicator light will turn off. Test the remote by pressing the Power button. If the device turns off, the programming was successful.
5. If the device does not respond, repeat the process with the next code listed for your brand.

Method B: Auto Code Search

1. Turn on the device you wish to control.
2. Press and hold the corresponding device button (e.g., **TV**) for approximately 3 seconds until the indicator light illuminates.
3. While holding the device button, press the **Power** button once. The indicator light will start flashing, indicating the remote is searching for a code.
4. Point the remote at your device and wait. The remote will send power signals every few seconds.
5. As soon as your device turns off, immediately press any button (e.g., **Volume Up**) to stop the search and save the code.
6. Test the remote's functions. If not all functions work, repeat the auto-search process to find a more compatible code.

OPERATING INSTRUCTIONS

Once programmed, your Mitzu MRC-UNI4 remote can control various functions of your devices. Below is a guide to common buttons and their uses:

- **Device Selector Buttons (TV, BD, HT, DVD):** Press one of these buttons to select the device you wish to control. The indicator light will briefly illuminate to confirm selection.
- **Power Button (POWER):** Turns the selected device on or off.
- **Number Buttons (0-9):** Used for direct channel selection, code entry during programming, or inputting numerical values.

- **Volume Up/Down (+/-):** Adjusts the volume of the selected audio device.
- **Channel Up/Down (CH+/CH-):** Changes channels on the selected TV or tuner.
- **Mute Button (MUTE):** Silences the audio output. Press again to restore sound.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind, Skip):** Controls media playback on devices like DVD/Blu-ray players or compatible media centers.
- **Menu/Disc Menu/Tools/Info:** Accesses on-screen menus, disc menus, device settings, or information displays.
- **Navigation Buttons (Up, Down, Left, Right, OK/Enter):** Used to navigate through on-screen menus and confirm selections.
- **Exit/Return:** Exits menus or returns to the previous screen.
- **Smart Hub:** Opens the Smart Hub menu on compatible Smart TVs, providing access to applications and online content.
- **Dolby:** Switches to Dolby Pro Logic II sound mode on compatible audio systems.
- **MO/ST:** Changes audio output from mono to stereo on compatible devices.
- **iPod Sync:** Synchronizes an iPod with a compatible Home Theater system.
- **Tuner Memory:** In Home Theater mode, this button changes stations stored in the Home Theater's memory.



Figure 2: The Mitsu MRC-UNI4 remote control in use, demonstrating its ergonomic design.

MAINTENANCE

Cleaning

To maintain the appearance and functionality of your remote control:

- Wipe the remote with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's surface or internal components.
- Ensure no liquid enters the remote's casing or button crevices.

Battery Replacement

Replace batteries when the remote's performance degrades or the indicator light fails to illuminate. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

Storage

When not in use for extended periods, remove the batteries to prevent leakage and potential damage to the remote. Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your Mitzu MRC-UNI4 Universal Remote Control, refer to the following common problems and solutions:

- **Remote is not working at all:**
 - Check if the batteries are correctly installed with the correct polarity.
 - Replace the batteries with fresh AAA batteries.
 - Ensure there is a clear line of sight between the remote's infrared emitter and the device's IR receiver.
- **Device is not responding to commands:**
 - Verify that the correct device mode button (TV, BD, HT, DVD) is selected.
 - Re-program the remote for the specific device using the Direct Code Entry or Auto Code Search methods. The previously programmed code might be incorrect or corrupted.
 - Ensure the device's original remote is not interfering (if applicable).
- **Only some functions work:**
 - The current code may only offer partial compatibility. Try programming the remote again using a different code from the code list for your device's brand.
 - For auto-search, ensure you stop the search immediately when the device responds to find the most compatible code.
- **Indicator light does not illuminate during programming:**
 - Ensure you are pressing and holding the device button for the required duration (approx. 3 seconds).
 - Check or replace batteries.

SPECIFICATIONS

Brand	Mitzu
Model Name	MRC-UNI4
Manufacturer Model Number	7506086640091
Compatible Devices	TV, Blu-Ray, Home Theater, DVD, Smartphone (for Smart Hub features)
Special Features	3D, Blu-Ray, HD Compatible, Smart Hub, Tuner Memory, MO/ST, iPod Sync, Dolby Pro Logic II
Connector Type	Infrared (IR)
Batteries	2x AAA batteries (not supplied)

Dimensions	30 x 8.1 x 3.2 cm (11.8 x 3.2 x 1.3 inches)
Weight	140 g (4.9 oz)

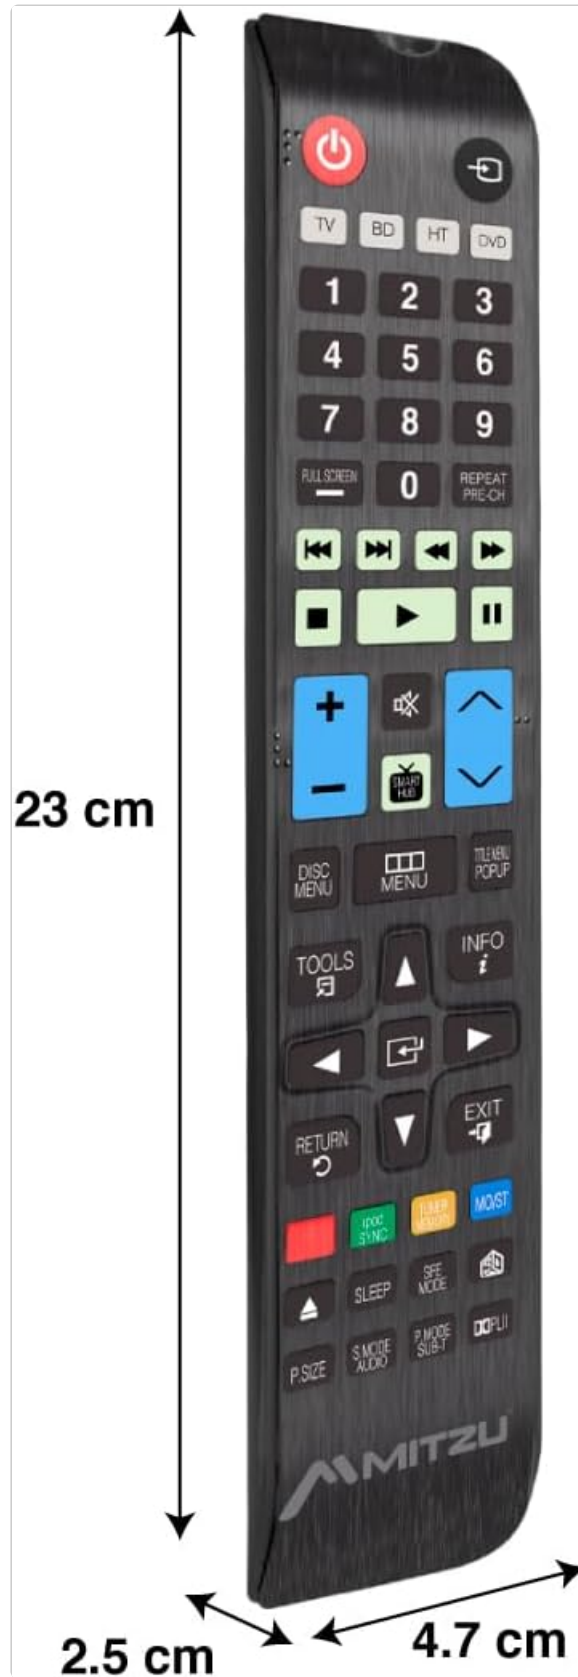


Figure 3: Dimensions of the Mitzu MRC-UNI4 Universal Remote Control.

WARRANTY INFORMATION

For specific warranty details regarding your Mitzu MRC-UNI4 Universal Remote Control, please refer to the warranty card included with your purchase or visit the official Mitzu website. Warranty terms typically cover manufacturing defects for a specified period from the date of purchase. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you require further assistance, have questions not covered in this manual, or need technical support, please visit the official Mitzu website or contact their customer service department. Contact information can usually be found on the Mitzu website or on your product packaging.

Mitzu Official Website: [Visit Mitzu Store on Amazon.com.mx](#)