

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Greenworks](#) /

› [Greenworks 7.2V Cordless 2-in-1 Shear Shrubber SH072B00 User Manual](#)

## Greenworks SH072B00

# Greenworks 7.2V Cordless 2-in-1 Shear Shrubber User Manual

**Brand:** Greenworks | **Model:** SH072B00

## 1. IMPORTANT SAFETY INFORMATION

**WARNING:** Read all safety warnings and instructions before operating this product. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- Always wear appropriate personal protective equipment, including safety glasses, gloves, and sturdy footwear.
- Keep hands and feet away from blades. Blades remain in motion for a short period after the tool is switched off.
- Do not operate the tool in wet conditions or in the presence of flammable liquids or gases.
- Ensure the battery is fully charged before use and stored properly when not in use.
- Keep children and bystanders away while operating the tool.
- This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm (Proposition 65 warning).

## 2. PRODUCT OVERVIEW

The Greenworks 7.2V Cordless 2-in-1 Shear Shrubber is a versatile tool designed for light shrubbery work and grass edging. It features a lightweight design and includes interchangeable blades for different tasks.

- **7.2-Volts of Lithium-Ion Power:** Provides reliable cordless operation.
- **2-in-1 Functionality:** Easily switches between a hedger blade and a shear blade.
- **Lightweight and Easy to Use:** Designed for comfortable handling and maneuverability.
- **High-Quality Blades:** Durable alloy steel blades for efficient cutting.



Figure 2.1: Greenworks 7.2V Cordless 2-in-1 Shear Shrubber with shear blade attached.

### 3. SETUP

#### 3.1 Charging the Battery

The tool comes with a built-in 7.2V Lithium-Ion battery. Before first use, fully charge the battery. Refer to the separate charger manual for specific charging instructions. Ensure the charger is connected to a standard power outlet and the tool is securely placed in the charging dock.

#### 3.2 Attaching/Detaching Blades

The Greenworks 2-in-1 Shear Shrubber allows for tool-less blade changes. Always ensure the tool is OFF and disconnected from any power source before changing blades.

1. To remove a blade: Locate the blade release mechanism (usually a button or latch) on the tool body. Press or slide it to unlock the blade. Carefully slide the blade assembly off the tool.
2. To attach a blade: Align the new blade assembly with the tool's drive shaft. Slide the blade assembly onto the tool until it clicks securely into place. Ensure the blade release mechanism re-engages, locking the

blade firmly. Gently tug on the blade to confirm it is secure before operation.

Figure 3.1: Illustration of the tool-less blade transition for changing between shear and hedger blades.

## 4. OPERATING INSTRUCTIONS

### 4.1 Starting and Stopping the Tool

The Greenworks Shear Shrubber features a double safety protection system to prevent accidental starts.

1. To start: Press and hold the safety lock button (typically located on the side of the handle) with your thumb. While holding the safety lock button, squeeze the trigger switch with your fingers. The blades will begin to move.
2. To stop: Release the trigger switch. The blades will stop moving shortly after.



Figure 4.1: The safety lock button and trigger mechanism on the tool handle.

### 4.2 Using the Shear Blade (Grass Edging)

The shear blade is ideal for precise grass edging around flowerbeds, walkways, and other obstacles.

- Attach the shear blade as described in Section 3.2.
- Hold the tool firmly with both hands (if comfortable, or one hand for tight spaces) and position the blade parallel to the ground or at a slight angle for a clean edge.
- Start the tool and move it slowly and steadily along the desired edge. Avoid forcing the tool through thick grass.



Figure 4.2: Using the shear blade for precise grass edging.

### 4.3 Using the Hedger Blade (Shrub Trimming)

The hedger blade is suitable for shaping and trimming light shrubbery and small hedges.

- Attach the hedger blade as described in Section 3.2.
- Hold the tool firmly and guide the blade through the shrubbery with smooth, even strokes.
- For best results, trim small amounts at a time. Avoid cutting branches thicker than the recommended capacity.



Figure 4.3: The hedger blade effectively trimming small shrubs.

## 5. MAINTENANCE

---

### 5.1 Blade Cleaning and Lubrication

Regular cleaning and lubrication extend blade life and maintain cutting performance.

- After each use, ensure the tool is OFF and the battery is removed.
- Use a stiff brush or cloth to remove debris, sap, and grass clippings from the blades.
- Apply a light coat of blade lubricant (such as WD-40 or synthetic oil) to the blades to prevent rust and ensure smooth operation.



Figure 5.1: Inspect and clean the hedger blade regularly.

## 5.2 Battery Care and Storage

- Store the tool and battery in a cool, dry place, away from direct sunlight and extreme temperatures.
- Do not store the battery in a discharged state for extended periods. Charge it periodically if not in use.
- Avoid exposing the battery to water or moisture.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Tool does not start	Battery not charged; Safety lock not engaged; Trigger not pressed fully.	Charge battery; Ensure safety lock button is pressed simultaneously with the trigger.
Poor cutting performance	Blades are dull or dirty; Material is too thick.	Clean and lubricate blades; Sharpen or replace blades if necessary; Do not attempt to cut oversized material.
Blades jam	Debris caught in blades; Overloading the tool.	Turn off tool and remove battery, then carefully clear debris; Reduce cutting load.

If you encounter issues not listed here or if solutions do not resolve the problem, please contact Greenworks Customer Support.

## 7. SPECIFICATIONS

Feature	Specification
Brand	Greenworks
Model Number	SH072B00

Feature	Specification
Power Source	Battery Powered (7.2V Lithium-Ion)
Product Dimensions	12" L x 3.27" W x 4.33" H
Item Weight	1.2 Pounds
Blade Length	9.5 Inches (Hedger Blade)
Blade Material	Alloy Steel
Color	Green
Batteries Required	1 Lithium Ion battery (included)

## 8. WARRANTY INFORMATION

This Greenworks tool is covered by a **4-year tool warranty** from the date of purchase. This warranty protects your investment against defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

For full warranty terms and conditions, please refer to the official Greenworks website or contact customer support.

## 9. CUSTOMER SUPPORT

For assistance with your Greenworks 7.2V Cordless 2-in-1 Shear Shrubber, including technical support, parts, or warranty service, please contact Greenworks Customer Support.

- **Website:** Visit the official Greenworks website for FAQs and support resources.
- **Phone:** Refer to your product packaging or the Greenworks website for current contact numbers.
- **Email:** Contact support via email for non-urgent inquiries.