

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

mDesign 2992MDK

mDesign Plastic Bag Dispenser User Manual

Model: 2992MDK

PRODUCT OVERVIEW

Transform your cluttered under-sink cabinets and kitchen cabinets into streamlined and organized spaces with the mDesign Kitchen Cabinet Storage Basket. This organizer hangs over cabinet doors for instant storage. The large basket provides ample space to store up to 50 plastic grocery bags in one convenient location. It can be hung inside cabinets for discreet storage or outside doors for quick and easy access.


SETUP INSTRUCTIONS

The mDesign Plastic Bag Dispenser is designed for easy installation without the need for tools. Follow these steps to set up your dispenser:


1. **Unpack the Dispenser:** Carefully remove the dispenser from its packaging. Inspect for any damage.
2. **Identify Cabinet Door:** Choose a cabinet door where you wish to install the dispenser. Ensure the door thickness is no more than 0.75 inches (1.9 cm) for proper fit.
3. **Position the Hooks:** The dispenser features integrated hooks at the top. These hooks are lined with foam to protect your cabinet doors from scratches.
4. **Hang on Door:** Gently place the dispenser's hooks over the top edge of your chosen cabinet door. You can hang it on the inside of the cabinet for discreet storage or on the outside for immediate access.



The dispenser easily hangs over standard cabinet doors.

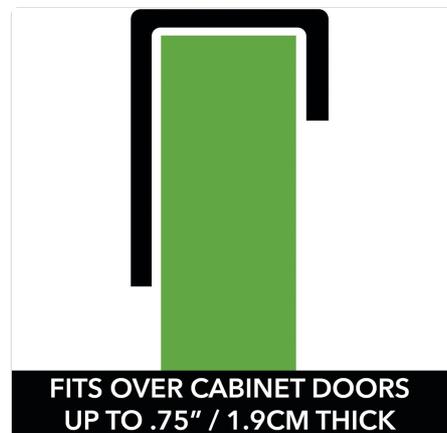

Foam lining on hooks protects cabinet surfaces.

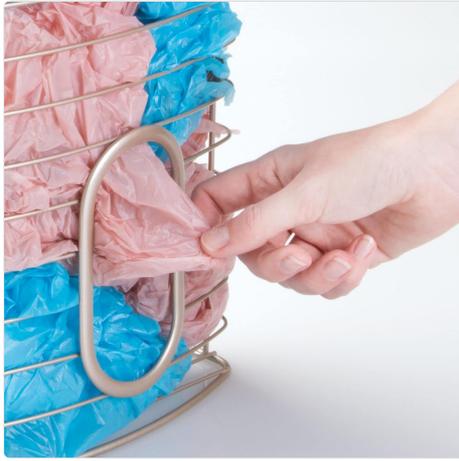

Ensure your cabinet door thickness is compatible.

OPERATING INSTRUCTIONS

The mDesign Plastic Bag Dispenser is designed for efficient storage and retrieval of plastic grocery bags.

- **Storing Bags:** To store plastic bags, simply push them into the top opening of the dispenser. The dispenser can hold up to 50 standard plastic grocery bags. Fold or crumple bags as needed to fit them neatly inside.
- **Retrieving Bags:** To retrieve a bag, pull it out from the oval-shaped opening located near the bottom front of the dispenser. Bags are dispensed one at a time for convenience.



The dispenser holds numerous plastic bags.



Bags are easily retrieved from the front opening.

MAINTENANCE

Maintaining your mDesign Plastic Bag Dispenser is simple:

- **Cleaning:** To clean the dispenser, wipe it down with a soft, damp cloth. Avoid using abrasive cleaners or scouring pads, as these may damage the finish.
- **Drying:** After cleaning, ensure the dispenser is thoroughly dried to prevent water spots or rust, especially given its steel wire construction.

TROUBLESHOOTING

If you encounter any issues with your mDesign Plastic Bag Dispenser, consider the following:

- **Dispenser Does Not Fit Cabinet Door:**


Ensure your cabinet door thickness is within the specified limit of 0.75 inches (1.9 cm). If your door is thicker, the dispenser's hooks may not fit properly. Some users have successfully mounted the dispenser directly to a cabinet surface using screws if the over-the-door fit is not suitable (screws not included).

- **Bags Are Difficult to Insert or Retrieve:**

Ensure bags are not excessively large or tangled. For easier storage, fold or loosely crumple bags before inserting. For retrieval, gently pull one bag at a time from the bottom opening.

SPECIFICATIONS

Brand	mDesign
Model Number	2992MDK
Material	Metal (Steel Wire)
Color	Champagne
Product Dimensions (L x W x H)	7.62 x 20.32 x 37.08 cm (3 x 8 x 14.6 inches)
Item Weight	544.31 grams (1.2 pounds)
Capacity	Up to 50 plastic grocery bags
Mounting Type	Over-the-cabinet (Hang)
Compatible Cabinet Door Thickness	Up to 1.9 cm (0.75 inches)
UPC	841247129921

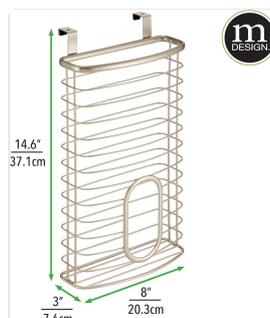

Detailed product dimensions.

WARRANTY AND SUPPORT

Specific warranty information for the mDesign Plastic Bag Dispenser (Model: 2992MDK) is not available in the provided product data. For any support inquiries or to obtain warranty details, please contact mDesign customer service directly or refer to their official website.

© 2024 mDesign. All rights reserved.