

Arielli LED4018HD

Arielli LED4018HD 40-inch Android Smart TV User Manual

Model: LED4018HD

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Arielli LED4018HD 40-inch Android Smart TV. Please read this manual thoroughly before using the television and retain it for future reference. The Arielli LED4018HD is a 40-inch (101.6 cm) LED Backlight LCD TV featuring Android Smart TV capabilities, an ultra-slim design, and HD Ready resolution (1366x768). It includes a USB Media Player supporting various formats, multiple input options, and DVB-T2/DVB-C tuners.

SAFETY INFORMATION

Always follow basic safety precautions when using this television to reduce the risk of fire, electric shock, and injury.

- Do not expose the TV to rain or moisture.
- Do not open the TV casing; refer all servicing to qualified personnel.
- Ensure proper ventilation around the TV.
- Use only the power cord supplied with the TV.
- Keep the TV away from direct sunlight and heat sources.
- Unplug the TV during lightning storms or when unused for long periods.

WHAT'S IN THE BOX

Carefully unpack the box and ensure all items are present:

- Arielli LED4018HD 40-inch TV Unit
- TV Stand Components
- Remote Control

- Power Cord
- User Manual (this document)
- Screws for Stand Assembly



Image: The Arielli LED4018HD 40-inch Android Smart TV, showing the screen, bezel, and included stand. A remote control is also visible.

SETUP

1. Attaching the Stand

1. Place the TV screen-down on a soft, flat surface to prevent damage.
2. Align the stand components with the mounting holes on the bottom of the TV.
3. Secure the stand using the provided screws. Ensure the stand is firmly attached.

Illustration: Diagram showing the TV back panel and stand attachment points.

2. Wall Mounting (Optional)

The Arielli LED4018HD is VESA compatible. For wall mounting, use a VESA-compliant wall mount kit (sold

separately) that matches the TV's VESA pattern. Follow the instructions provided with your wall mount kit.

Illustration: Diagram showing VESA mounting holes on the TV back.

3. Connecting Power

1. Connect the power cord to the TV's power input.
2. Plug the other end of the power cord into a suitable wall outlet.

4. Connecting External Devices

The TV offers various input ports for connecting external devices:

- **HDMI (x2):** For high-definition devices like Blu-ray players, game consoles, or set-top boxes.
- **VGA Input:** For connecting a computer.
- **PC Audio Input:** For audio from a computer connected via VGA.
- **SCART Input:** For older devices like DVD players or VCRs.
- **CI Input:** For Conditional Access Modules (CAM) used with digital TV services.
- **CVBS and Audio R/L Input:** For composite video and stereo audio from older devices.
- **USB:** For connecting USB storage devices for media playback.

Illustration: Close-up view of the TV's input/output ports.

5. First-Time Setup

Upon first power-on, the TV will guide you through the initial setup process for the Android Smart TV operating system. This typically includes:

- Language selection.
- Network connection (Wi-Fi or Ethernet).
- Google account sign-in (optional, for full Android features).
- Channel scanning (DVB-T2/DVB-C).
- Time zone and date settings.

OPERATING

1. Remote Control Overview

Familiarize yourself with the functions of the remote control. Key buttons typically include:

- **Power:** Turns the TV on/off.
- **Source:** Selects input source (HDMI, VGA, etc.).
- **Volume +/-:** Adjusts volume.
- **Channel +/-:** Changes TV channels.
- **Navigation (Arrow keys, OK):** Navigates menus and confirms selections.
- **Home:** Accesses the Android Smart TV home screen.
- **Menu:** Opens TV settings menu.
- **Back/Exit:** Returns to the previous screen or exits a menu.

Illustration: Layout of the remote control with button descriptions.

2. Smart TV Features (Android OS)

Your Arielli LED4018HD runs on the Android operating system, providing access to a wide range of smart features:

- **App Store:** Download and install various applications (e.g., streaming services, games) from the integrated app store.
- **Web Browser:** Browse the internet directly on your TV.
- **Connectivity:** Connect to your home network via Wi-Fi or Ethernet for online content.

3. Media Playback (USB)

Insert a USB storage device into the TV's USB port to play back various media files. The built-in USB Media Player supports formats such as:

- **Video:** .mkv, .ts, .mpeg4, divx, xvid, H.264
- **Audio:** .mp3
- **Image:** .jpeg

Navigate to the Media Player application from the home screen or select the USB input source to access your files.

4. Digital TV Tuner (DVB-T2, DVB-C)

The TV includes integrated DVB-T2 (terrestrial digital) and DVB-C (cable digital) tuners. Connect a suitable antenna or cable signal to the TV's antenna input. Perform a channel scan through the TV's settings menu to find available digital channels.

MAINTENANCE

1. Cleaning the Screen

- Always unplug the TV before cleaning.
- Use a soft, lint-free cloth (e.g., microfiber) to gently wipe the screen.
- For stubborn marks, lightly dampen the cloth with water or a specialized screen cleaner. Never spray cleaner directly onto the screen.
- Avoid using abrasive cleaners, alcohol, or benzene.

2. General Care

- Keep the TV in a well-ventilated area.
- Do not block ventilation openings.
- Avoid placing heavy objects on the TV.
- Protect the TV from extreme temperatures and humidity.

TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
No power	Ensure the power cord is securely plugged into the TV and the wall outlet. Check if the wall outlet is functioning (test with another device). Press the power button on the remote control or on the TV itself.

Problem	Possible Cause / Solution
No picture, but sound is present	<p>Check the input source. Press the "Source" button on the remote to select the correct input.</p> <p>Ensure all cables (HDMI, VGA, etc.) are securely connected.</p> <p>Try a different HDMI port or cable.</p>
No sound, but picture is present	<p>Increase the volume.</p> <p>Check if the TV is muted. Press the Mute button on the remote.</p> <p>Verify audio settings in the TV menu.</p> <p>Ensure audio cables are correctly connected for external devices.</p>
Remote control not working	<p>Replace the batteries in the remote control.</p> <p>Ensure there are no obstructions between the remote and the TV's IR sensor.</p> <p>Point the remote directly at the TV.</p>
Smart TV features not working / No internet connection	<p>Check your Wi-Fi or Ethernet connection in the TV's network settings.</p> <p>Restart your router/modem.</p> <p>Ensure your internet service is active.</p>

SPECIFICATIONS

Feature	Detail
Model Number	LED4018HD
Screen Size	40 inches (101.6 cm)
Display Technology	LED Backlight LCD
Resolution	HD Ready 1366x768 (720p)
Operating System	Android
Connectivity Technology	HDMI (x2), USB, VGA
Additional Inputs	PC Audio Input, SCART Input, CI Input, CVBS and Audio R/L Input
Tuner Type	DVB-T2, DVB-C
USB Media Player Support	.mkv, .ts, .mpeg4, divx, xvid, H.264, mp3, jpeg
Mounting Type	Table Mount, VESA Compatible
Wattage	24 watts
Manufacturer	Arielli
Model Year	2018

WARRANTY AND SUPPORT

Your Arielli LED4018HD television comes with a **36-month warranty**, covering manufacturing defects from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical support, troubleshooting assistance beyond this manual, or warranty service, please contact Arielli customer support. Refer to the contact information provided with your purchase documentation or visit the official Arielli website for the most up-to-date support details.

Note: Warranty terms and conditions may vary by region. Please consult your local dealer or Arielli's official website for specific details applicable to your location.